 
 



3001058

Brisbane Display Cabinet,  
white with two glass  
doors and two metal  
doors

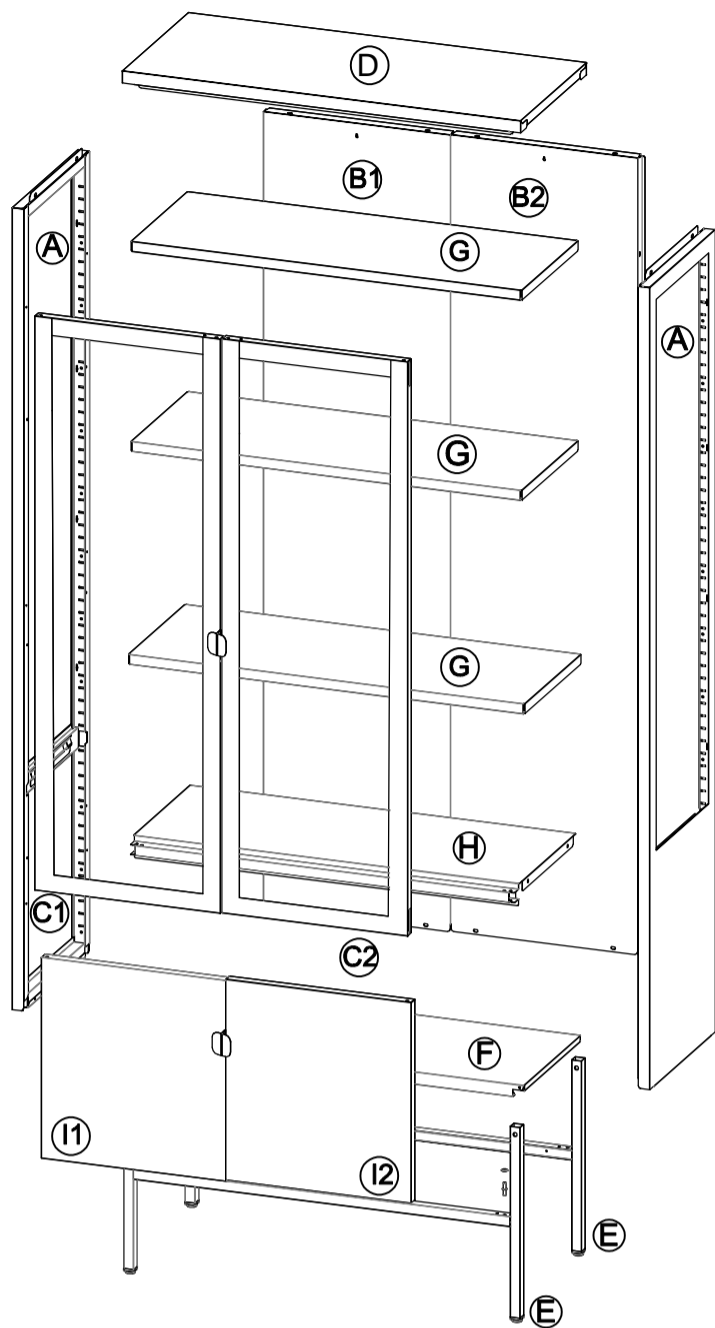


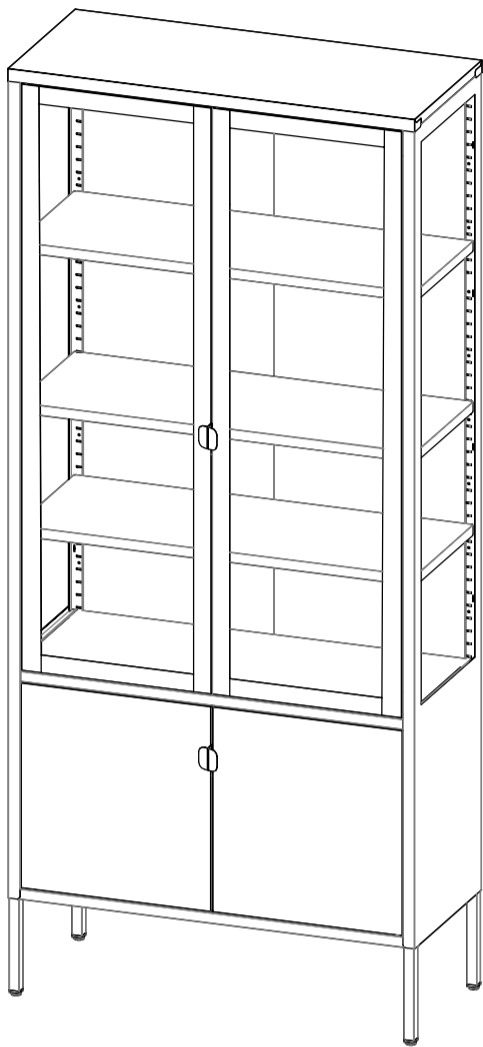


 ( 1 ) - Attach (A) to (E) as below shown.

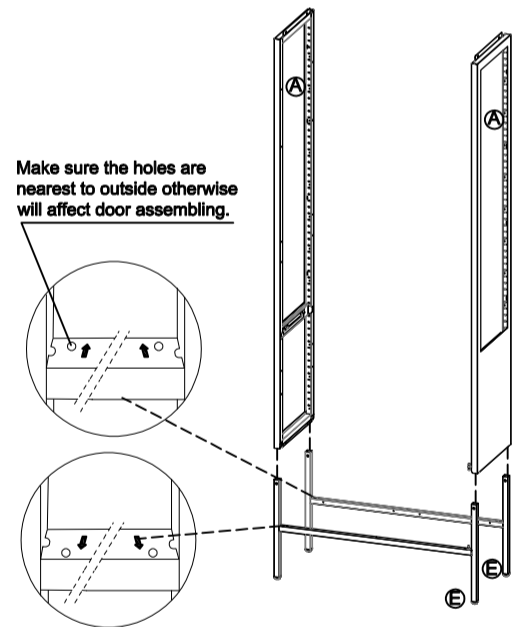


The plastic foot cover face down

  
( 2 ) - Attach (6) to (E) as below shown.

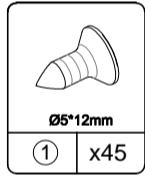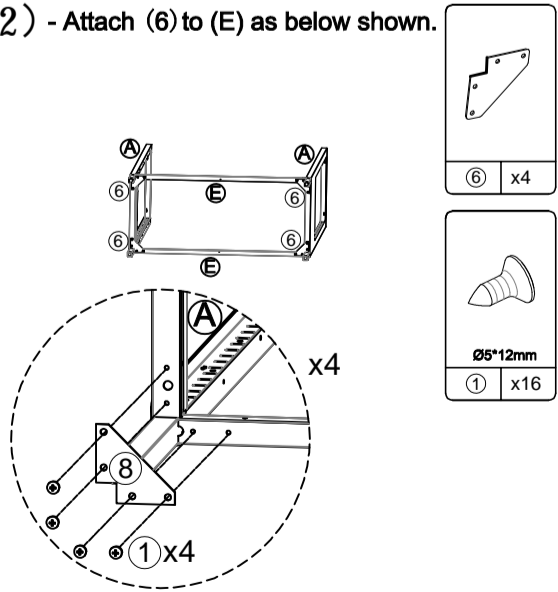


① x45  
spare:2

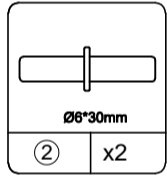 


② x2

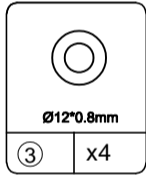 


③ x4  
spare:2

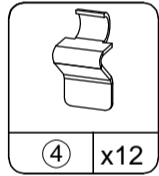 


④ x12  
spare:2

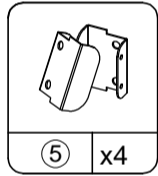 


⑤ x4

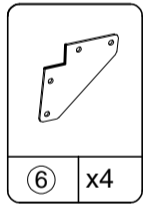 


⑥ x4

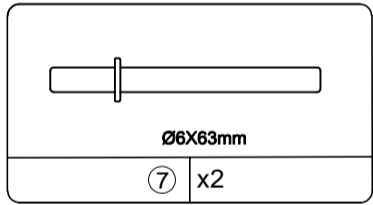 

⑦ x2

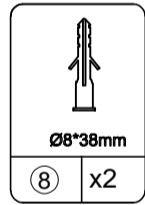 


⑧ x2

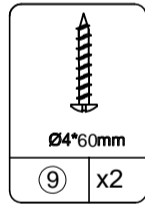 


⑨ x2

 ( 3 ) - Attach (B) to (A) & (E) as below shown.


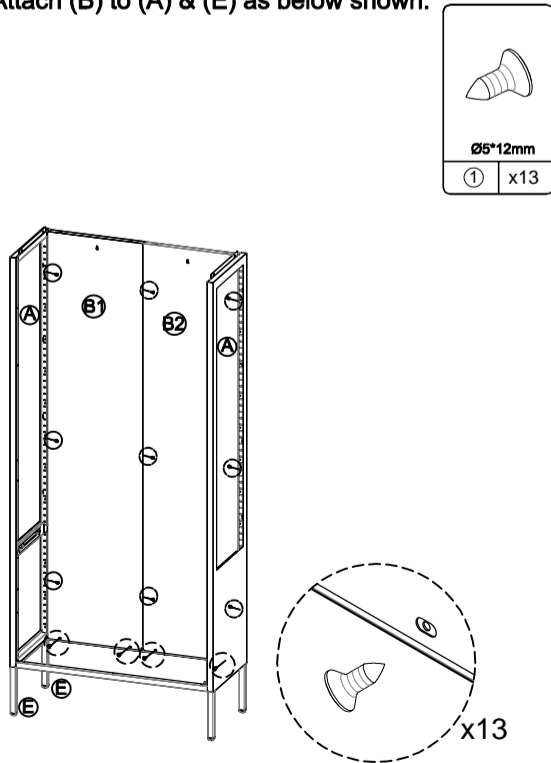


① x13

 
( 4 ) - Attach (F) to (A) & (B) & (E) as below shown.

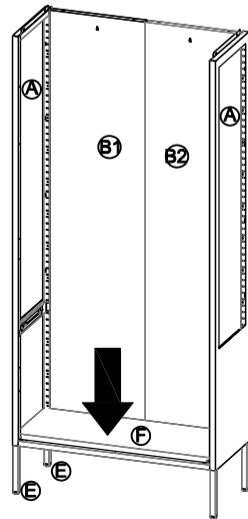

 
 
(5) - Attach (D) to (A) as below shown.

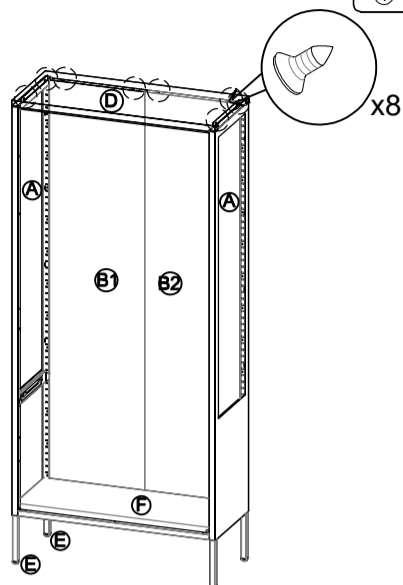


 
(6) - Attach (H) to (A) & (B) as below shown.

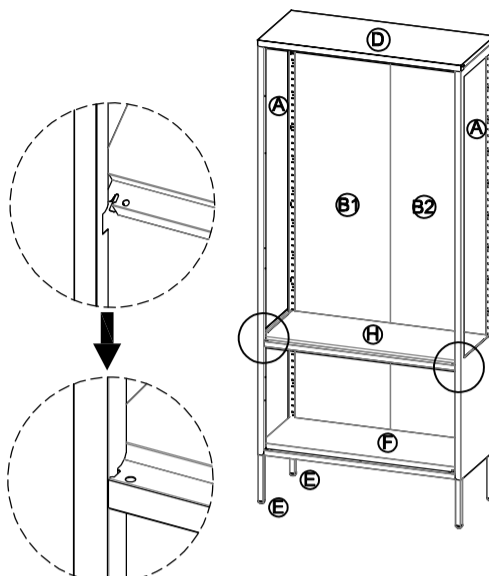

 
 
(7) - Attach (G) to pre-assembled unit as below shown.

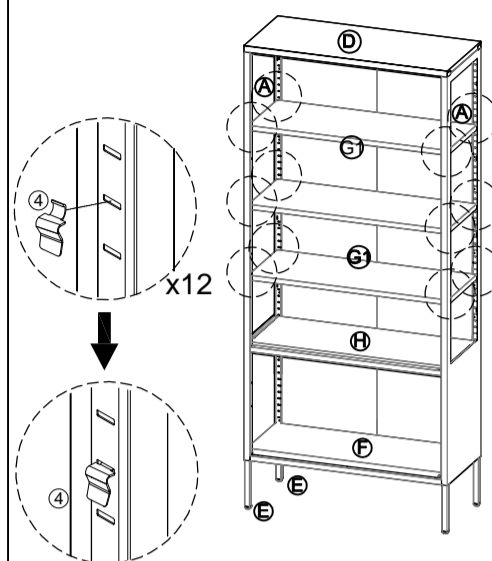

  
(9) - Attach (2) & (3) to pre-assembled unit as below shown.

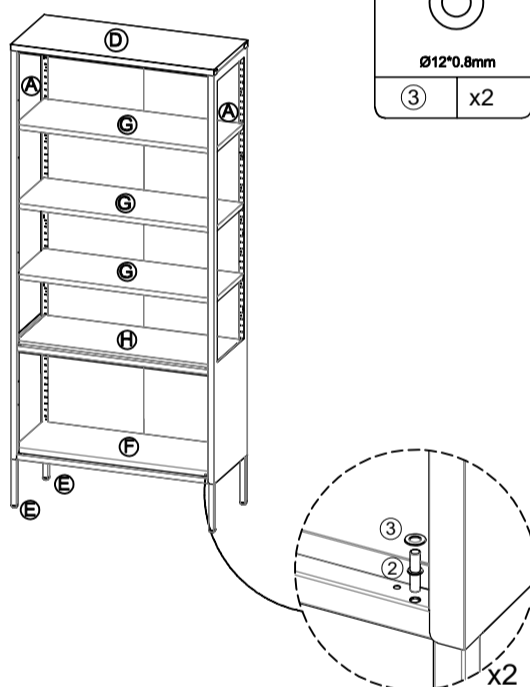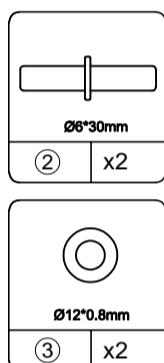

 
 
(10) - Attach (I) to pre-assembled unit as below shown.

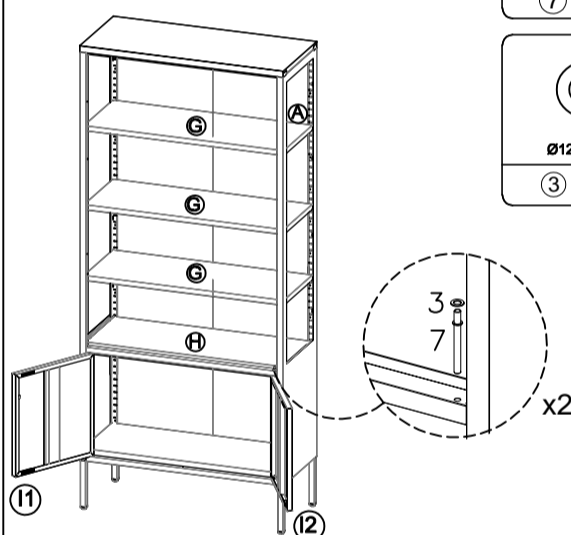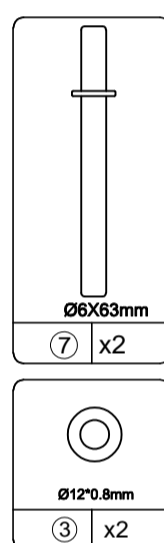


 
(11) - Attach (C) to pre-assembled unit as below shown.

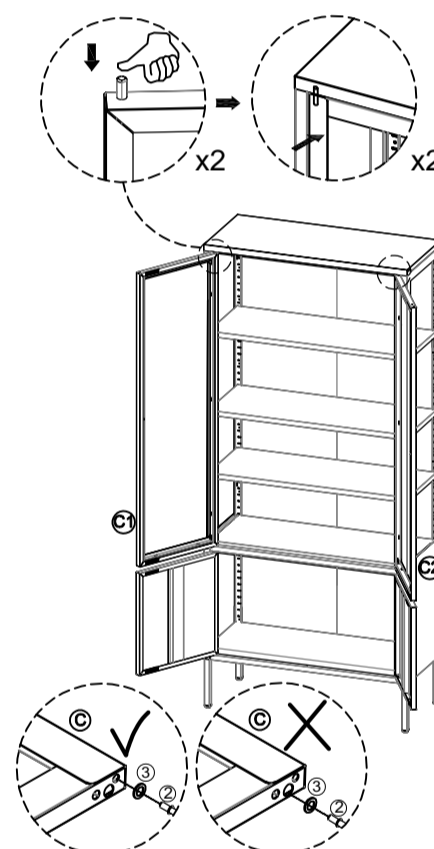

  (12) - Attach (5) to (C) as below shown.

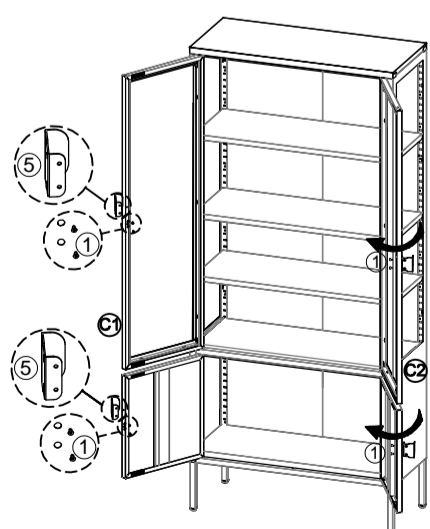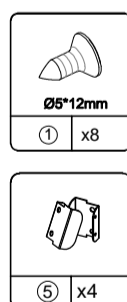

  (13)

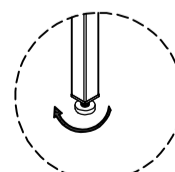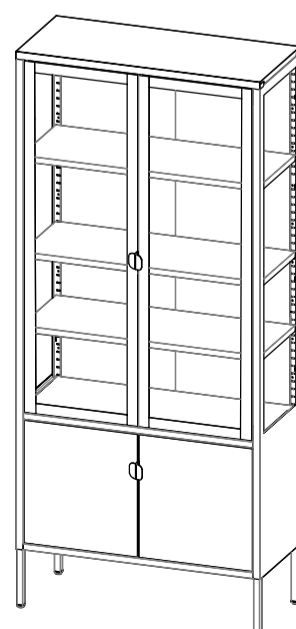

Gaps may appear between the top of the doors and the frame if the item is not on level ground; use the plastic foot cover to level.

(14)

