










3001040

Brisbane Steel Cabinet
w. Glass Door Black


HOUSE

NORDIC


<div>1</div> <div>x41</div>	
<div>2</div> <div>x2</div>	<div>ø6-30mm</div> 
<div>3</div> <div>x2</div>	<div>ø12*0.8mm</div> 
<div>4</div> <div>x12</div>	<div>ø4x4mm</div> 
spare:2	
<div>5</div> <div>x2</div>	
<div>6</div> <div>x4</div>	
<div>7</div> <div>x2</div>	
<div>8</div> <div>x2</div>	

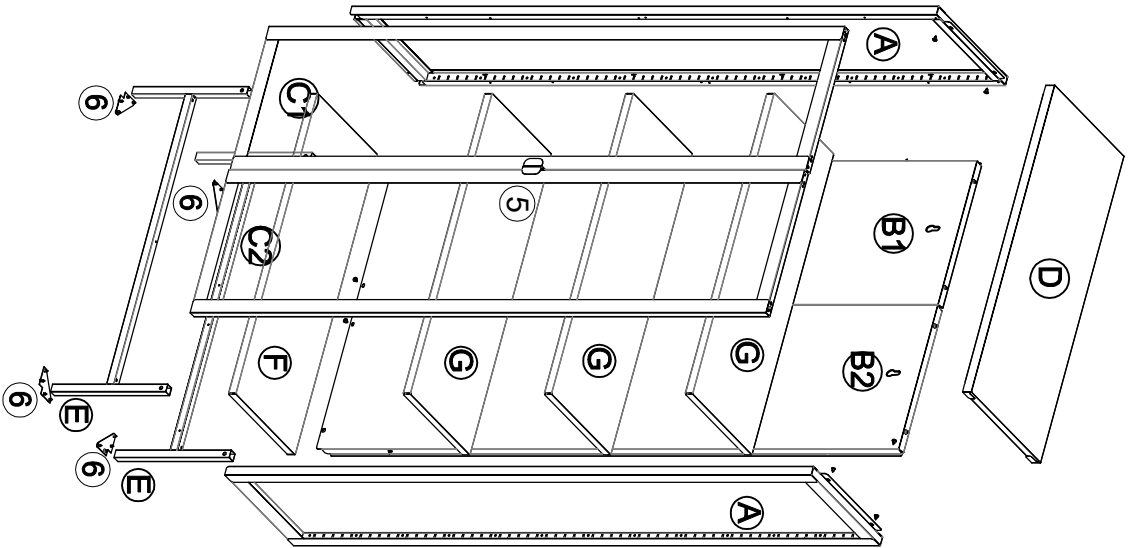


(1) - Attach (A) to (E) as below shown.

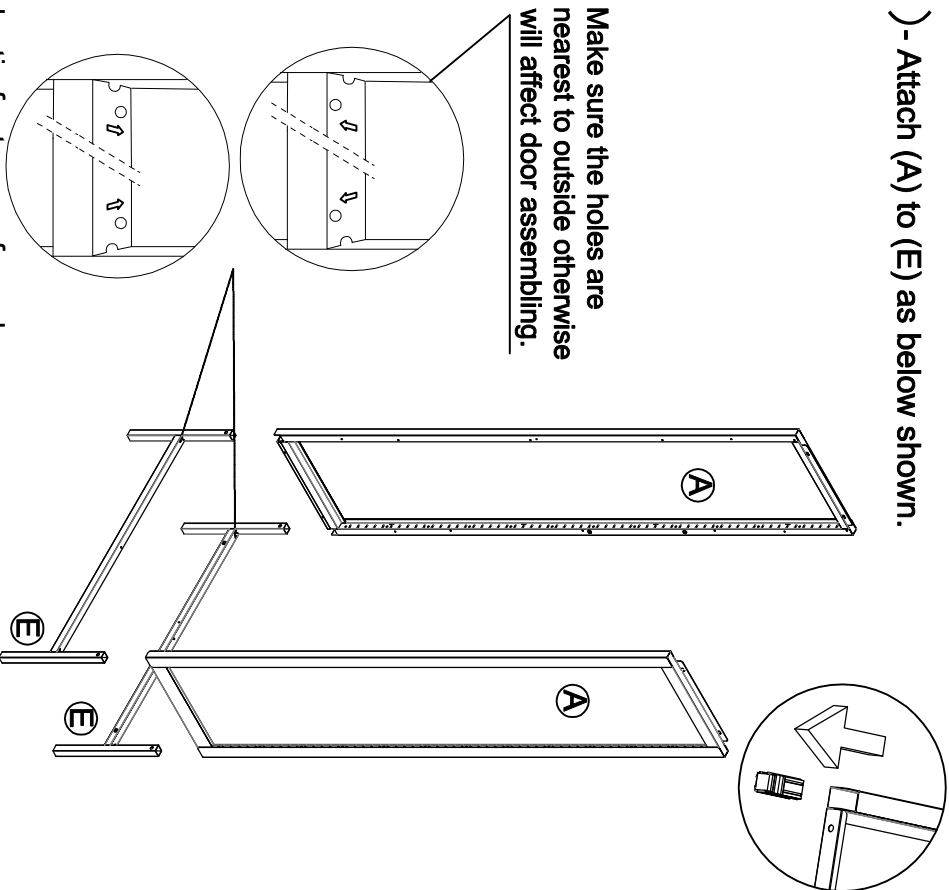


(2) - Attach ⑥ to (E) as below shown.

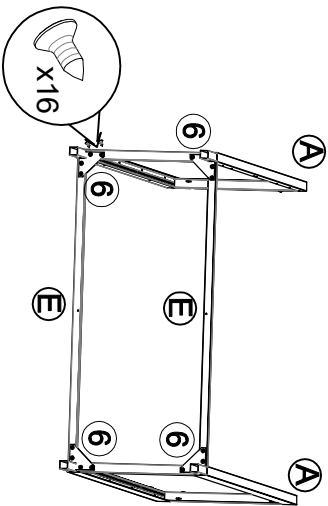


<div>1</div> <div>x16</div>	
-----------------------------	---



(3) - Attach (B) to (A) & (E) as below shown.

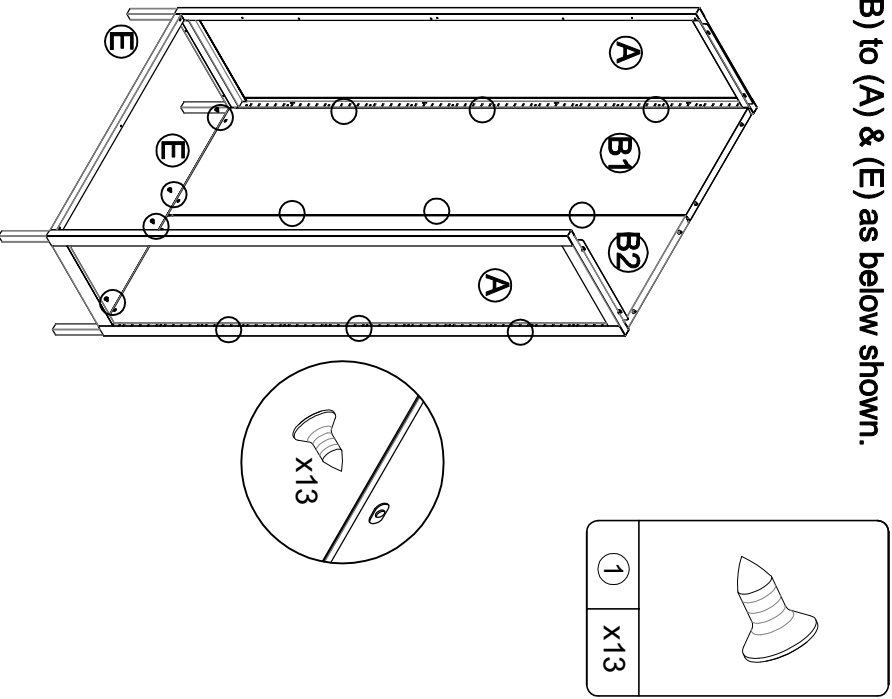



(4) - Attach (F) to (A) & (B) & (E) as below shown.

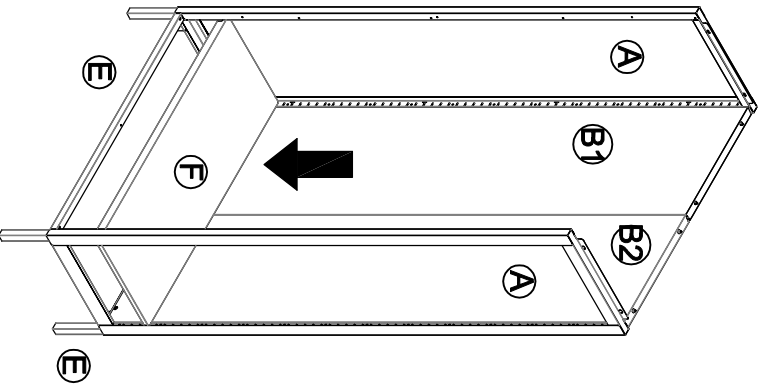



(5) - Attach (D) to (A) as below shown.

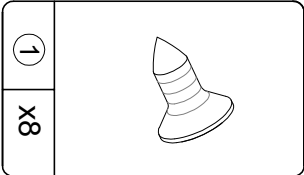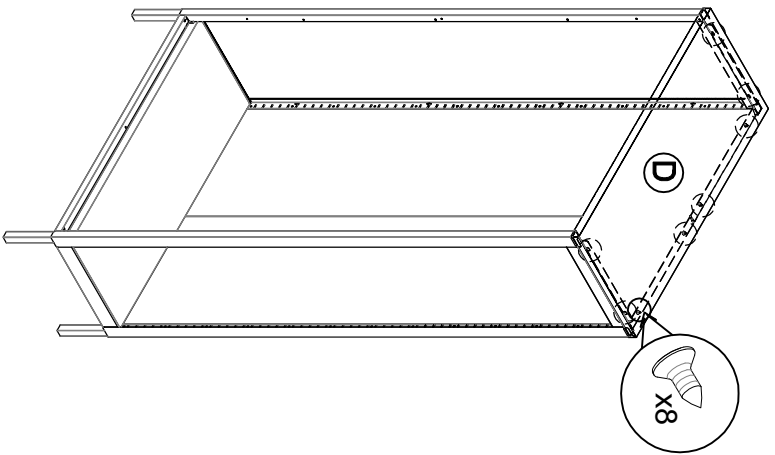


(6) - Attach (G) to pre-assembled unit as below shown.

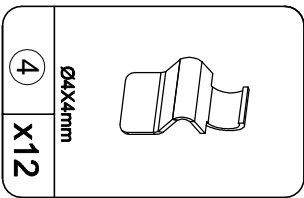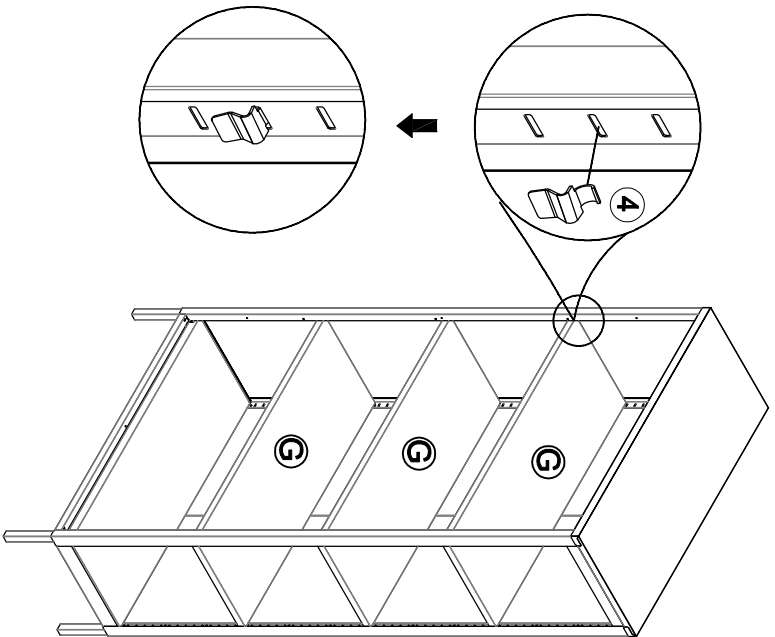



(7) -Attach (2) & (3) to pre-assembled unit as below shown.

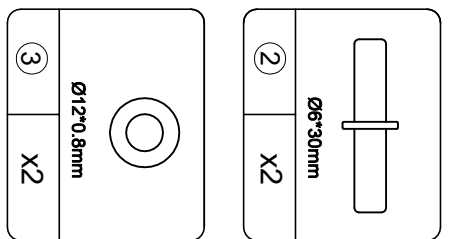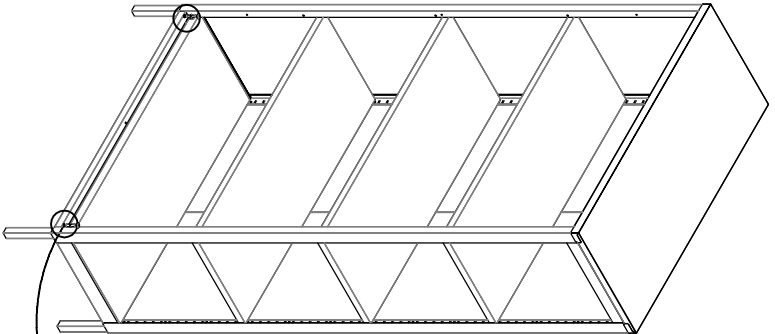



(8) - Attach (C) to pre-assembled unit as below shown.

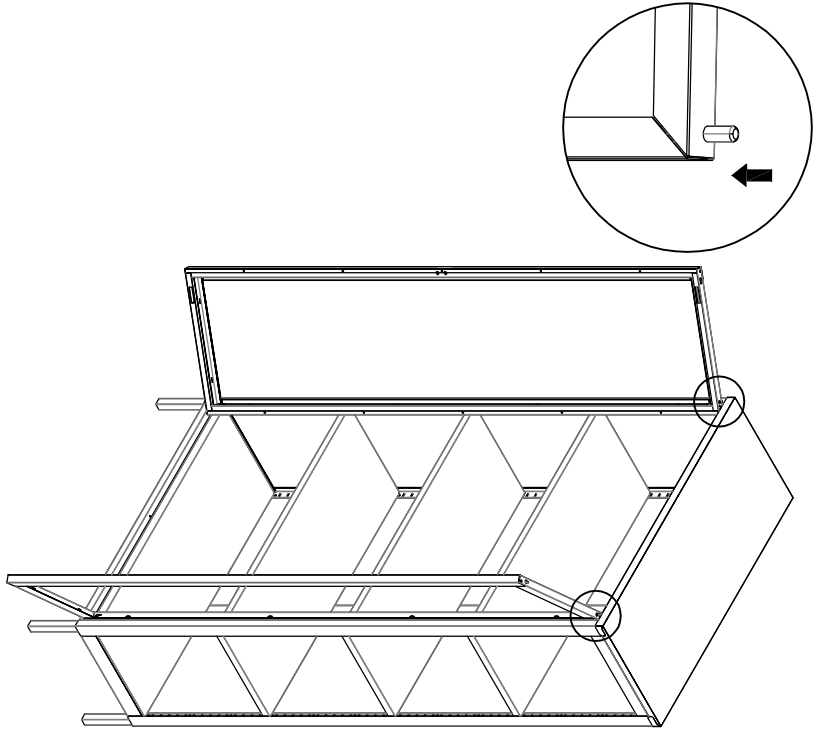

(9) - Attach (5) to (C) as below shown.

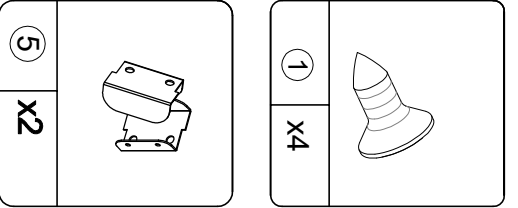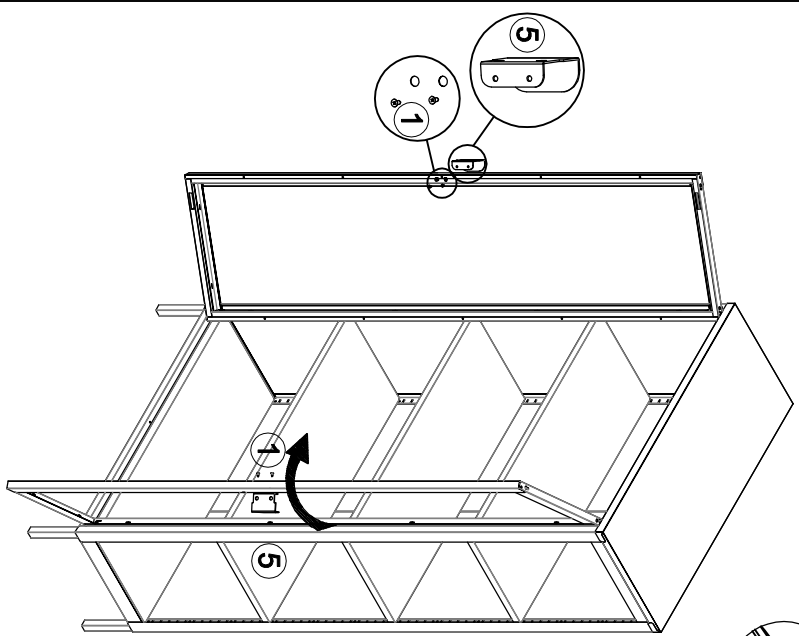

(10) wall anchors

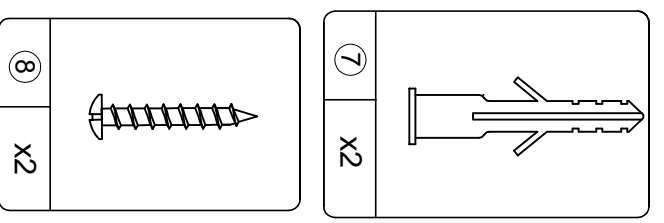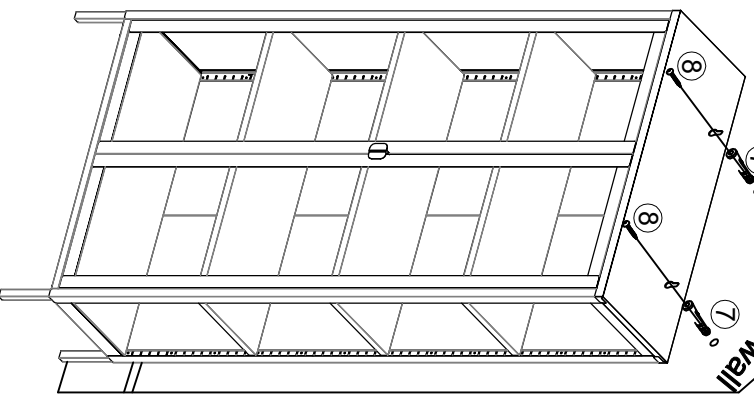

Gaps may appear between the top of the doors and the frame if the item is not on level ground; use the plastic foot cover to level.