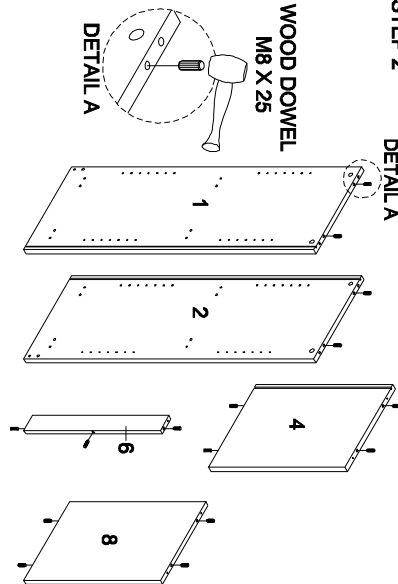
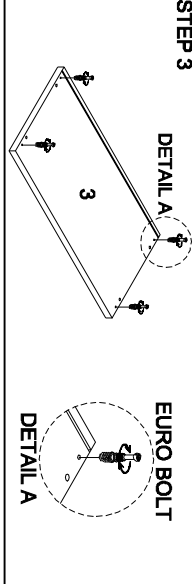
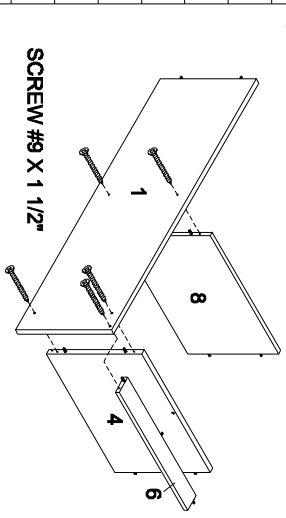
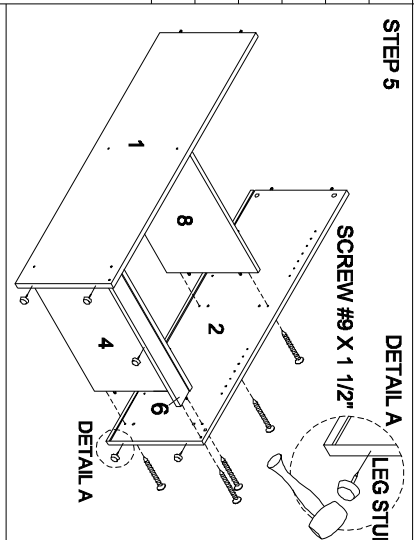
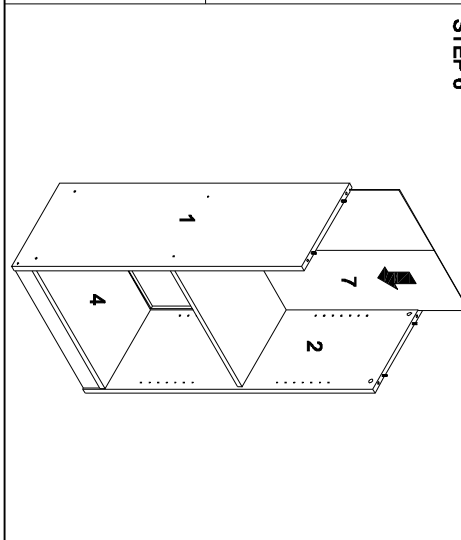
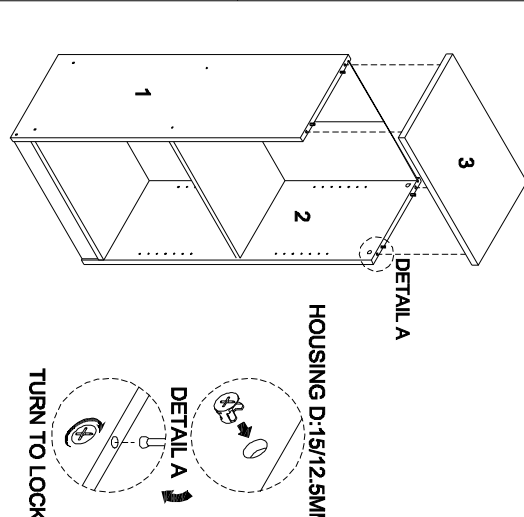
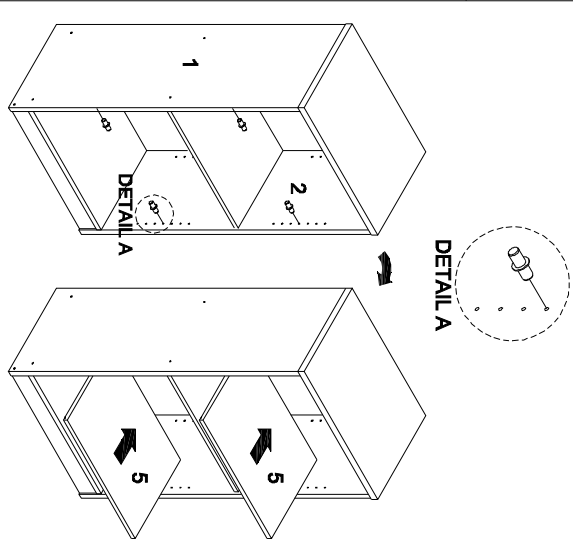
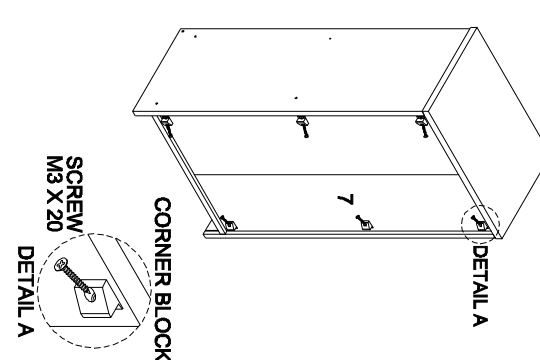
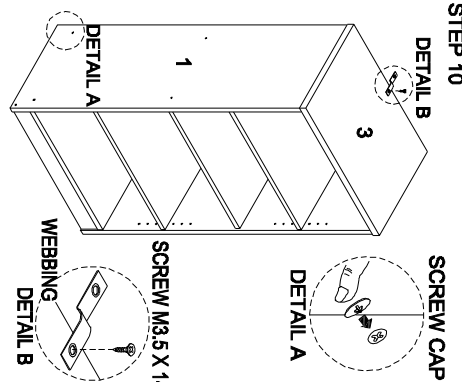


ASSEMBLING INSTRUCTIONS ITEM 6615

CAUTION :

THIS ITEM IS MADE OF LAMINATED PARTICLE BOARD AND MEDIUM DENSITY FIBRE BOARD
TO BE ASSEMBLED ON A DRY, SOFT, SMOOTH AND CLEAN SURFACE . DO NOT USE DETERGENT OR CHEMICAL. AVOID DAMP AND SUNLIGHT.

STEP 1	CHECK YOUR HARDWARE	H2182
	EURO BOLT	4 PCS
	HOUSING D:15/12.5MM	4 PCS
	SCREW CAP	10 PCS
	WOOD DOWEL M8 X 25	15 PCS
	SCREW #9 X 1 1/2"	10 PCS
	ADJUSTABLE SHELF STUD	8 PCS
	SCREW M3 X 20	6 PCS
	CORNER BLOCK	6 PCS
	LEG STUD	5 PCS
	SCREW M3.5 X 14	1 PC
	WEBBING	1 PC
TOOLS REQUIRED :		
	SCREW DRIVER	
	HAMMER	
STEP 2	DETAIL A	
		
STEP 3	DETAIL A	EURO BOLT
		
STEP 4		
STEP 5	DETAIL A	LEG STUD
		
STEP 6		
STEP 7	DETAIL A	HOUSING D:15/12.5MM
		
STEP 8	ADJUSTABLE SHELF STUD	
		
STEP 9	DETAIL A	CORNER BLOCK
		
STEP 10	DETAIL B	SCREW CAP
		
Move into final position and attach safety wall strap to wall. Seek advice from qualified trades person on how to attach this to your specific wall.		