

Montageanleitung

Assembly instructions

Instructions de montage

Instrucciones de montaje

Istruzioni per il montaggio

Инструкция для монтажа

Instrukcja montażu

Montážní návod

Návod na montáž

Szerelési utasítás

Инструкция за монтаж

Kurulum Talimatları


Navodilo za montažo

Montagehandleiding

A s e n n u s o h j e




Upute o montaži

Beschläge / fittings / Ferrures pour meubles / Herrajes / Guarnizioni / Железные оправы для мебели / Okucia / Kování / Kovanie / Vasalások / обков / Parçaları / okovje / Hang- en sluitwerk / helat / Obloge

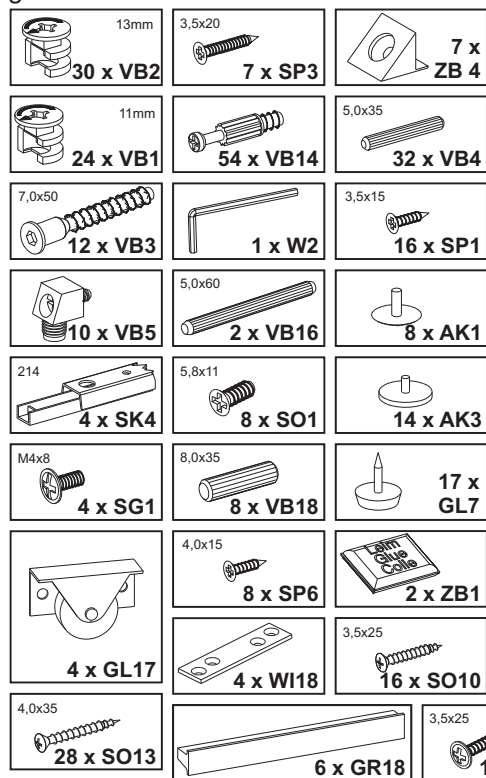




Sie benötigen:
You need:
Vous avez besoin de:
Necesita:
Le servono:
Вам нужно:
Potrebujete:
Tarvitset:



Potrzbne są:
Potřebujete:
Potrebujete:
Szükséges eszközök:
На Вас са Ви нужны:
Ihtiyaciniz:
U hebt nodig:
Trebate:



FABIO






Art.-Nr.809-001

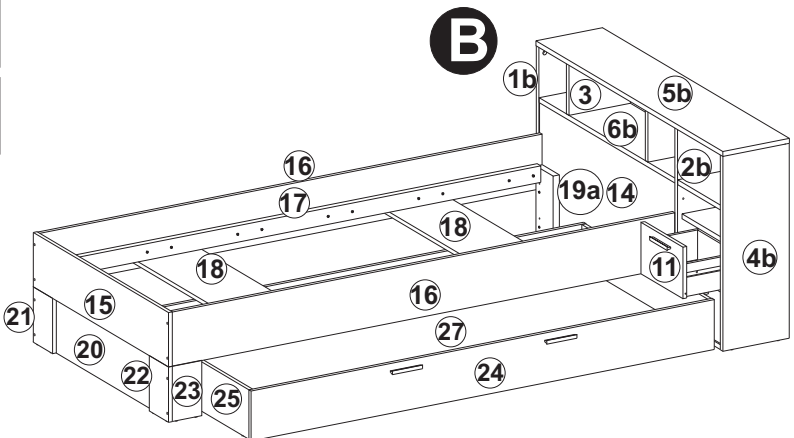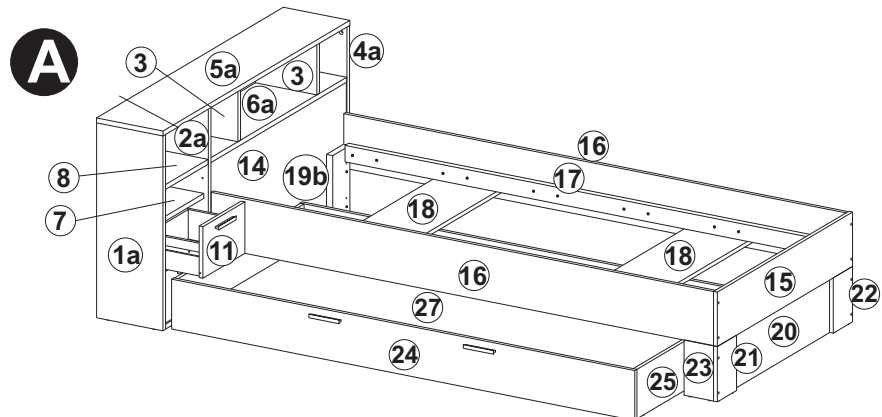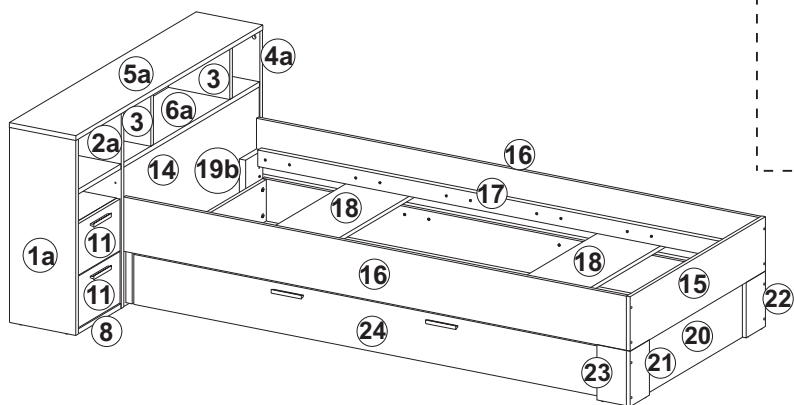

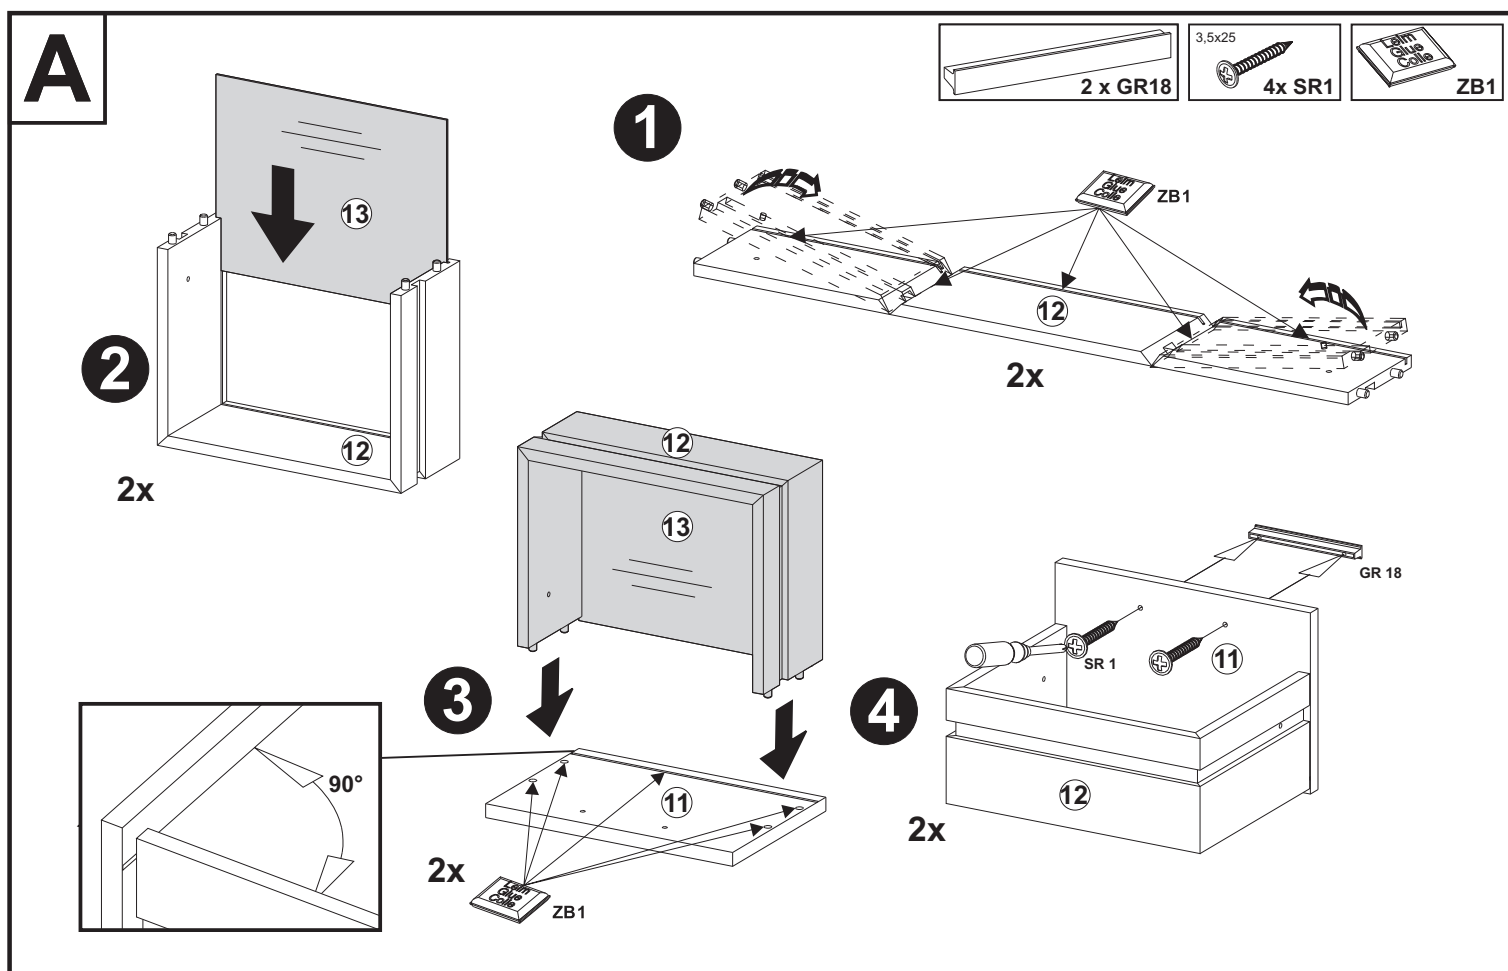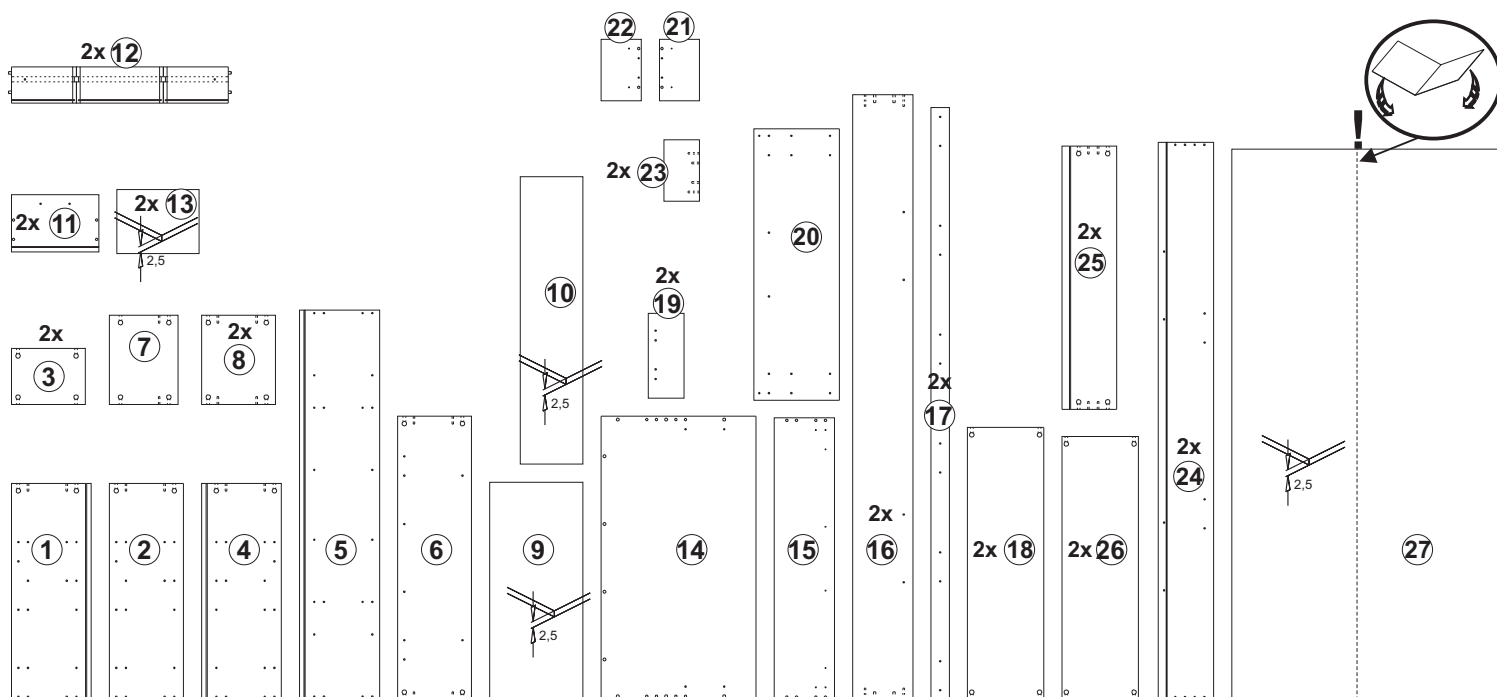


B1





A




1

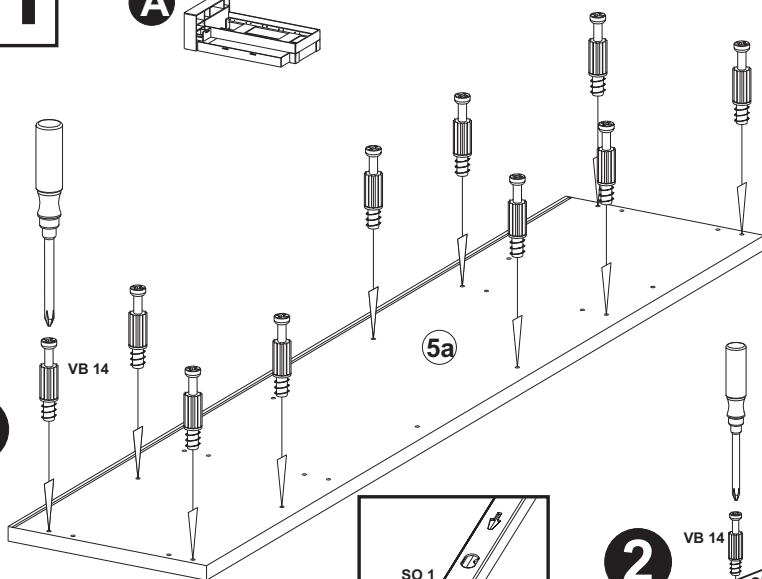

2

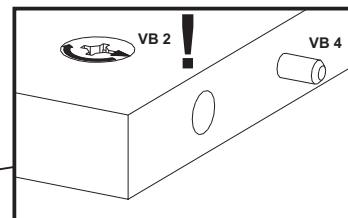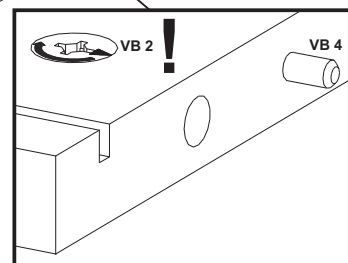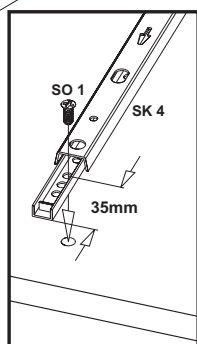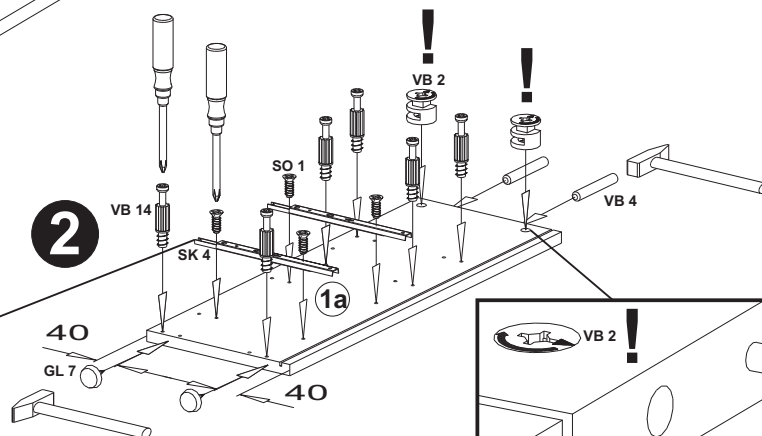


3

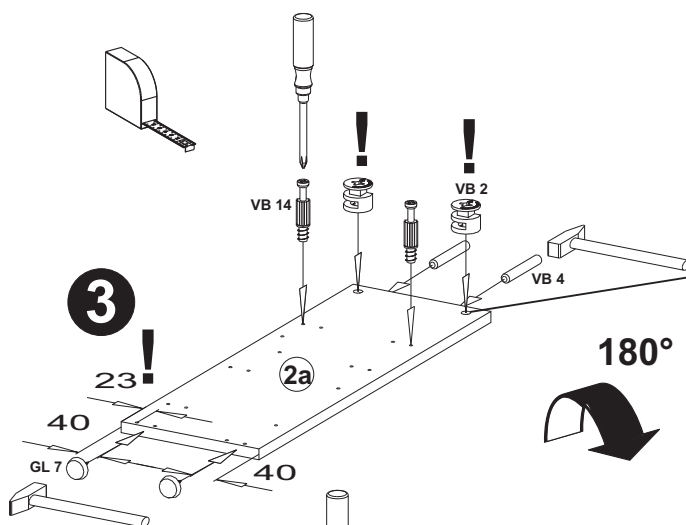


180°

4





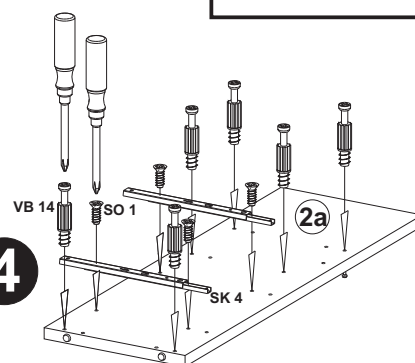


5

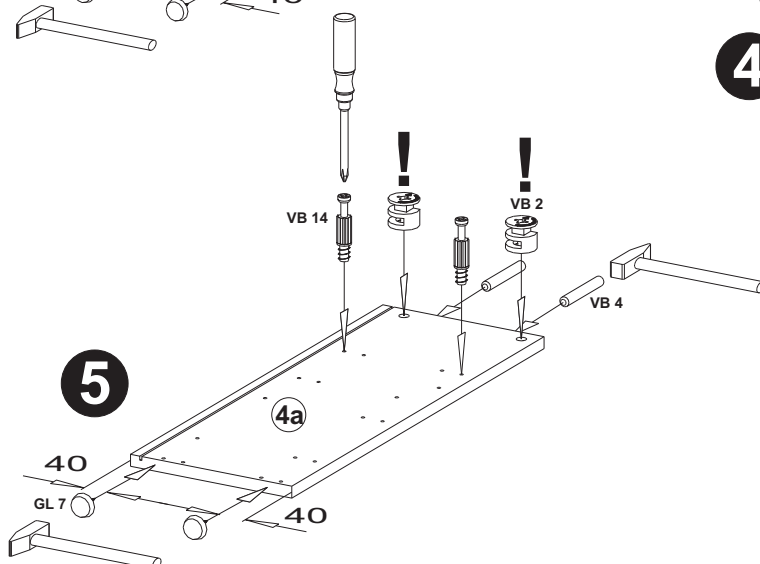


B2





B




1

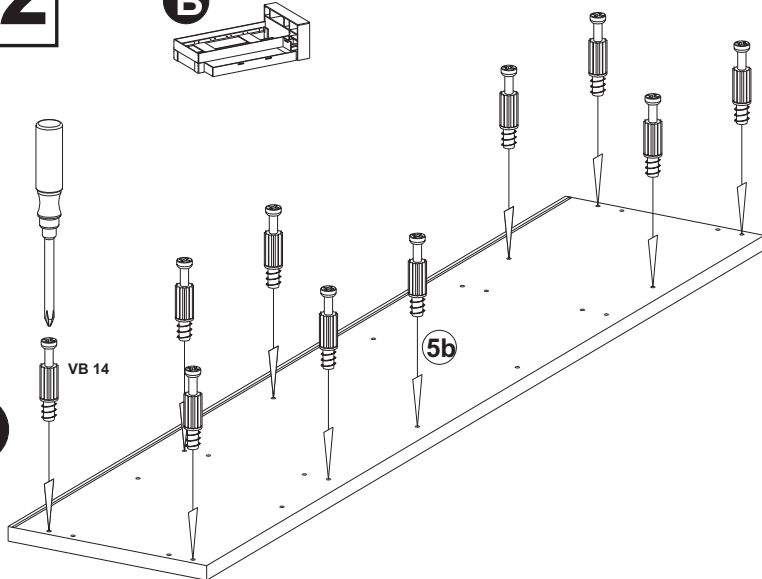

2

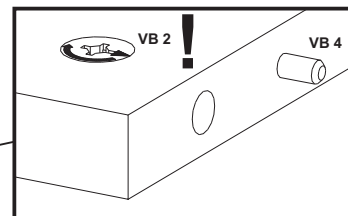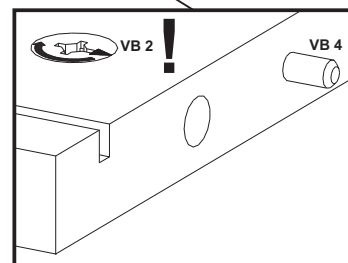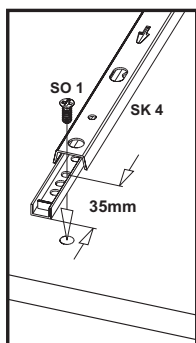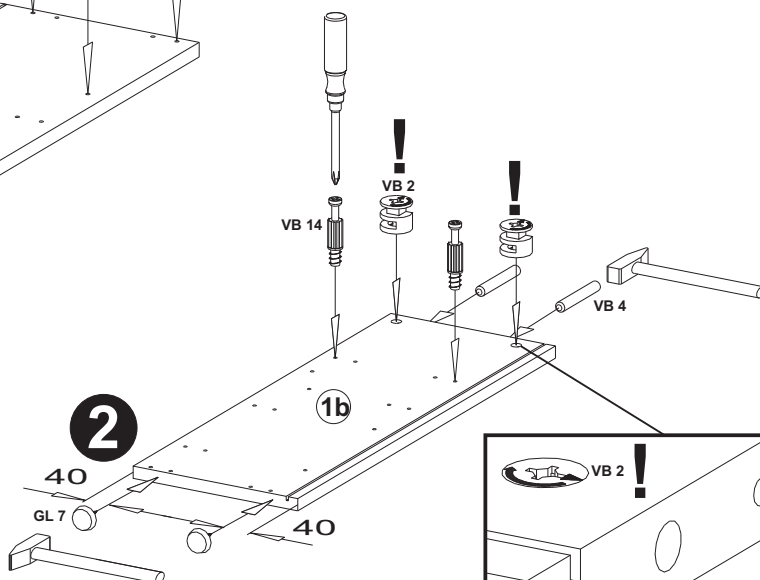


3

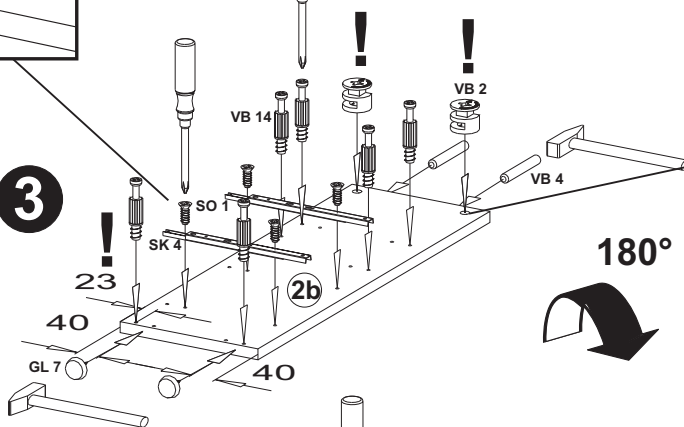


180°


4

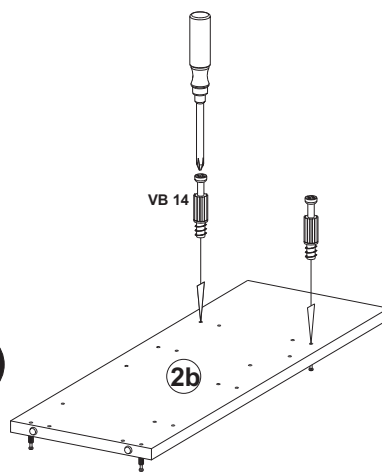

5







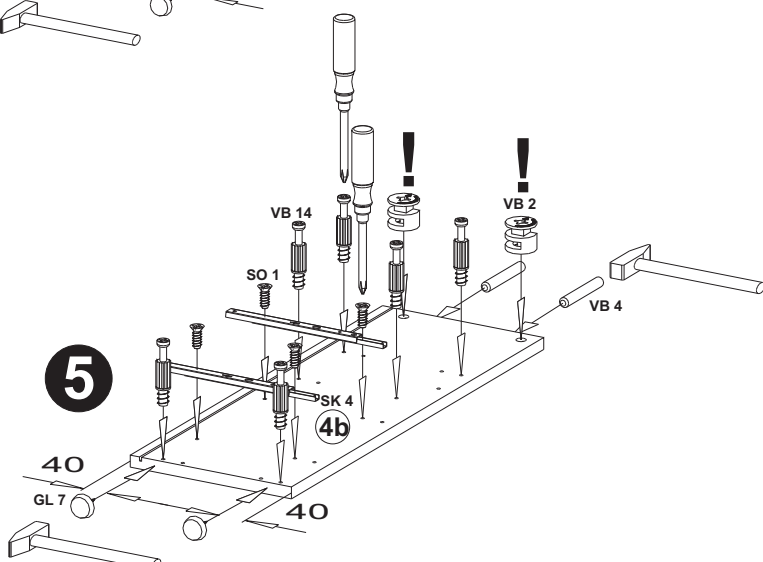


C1

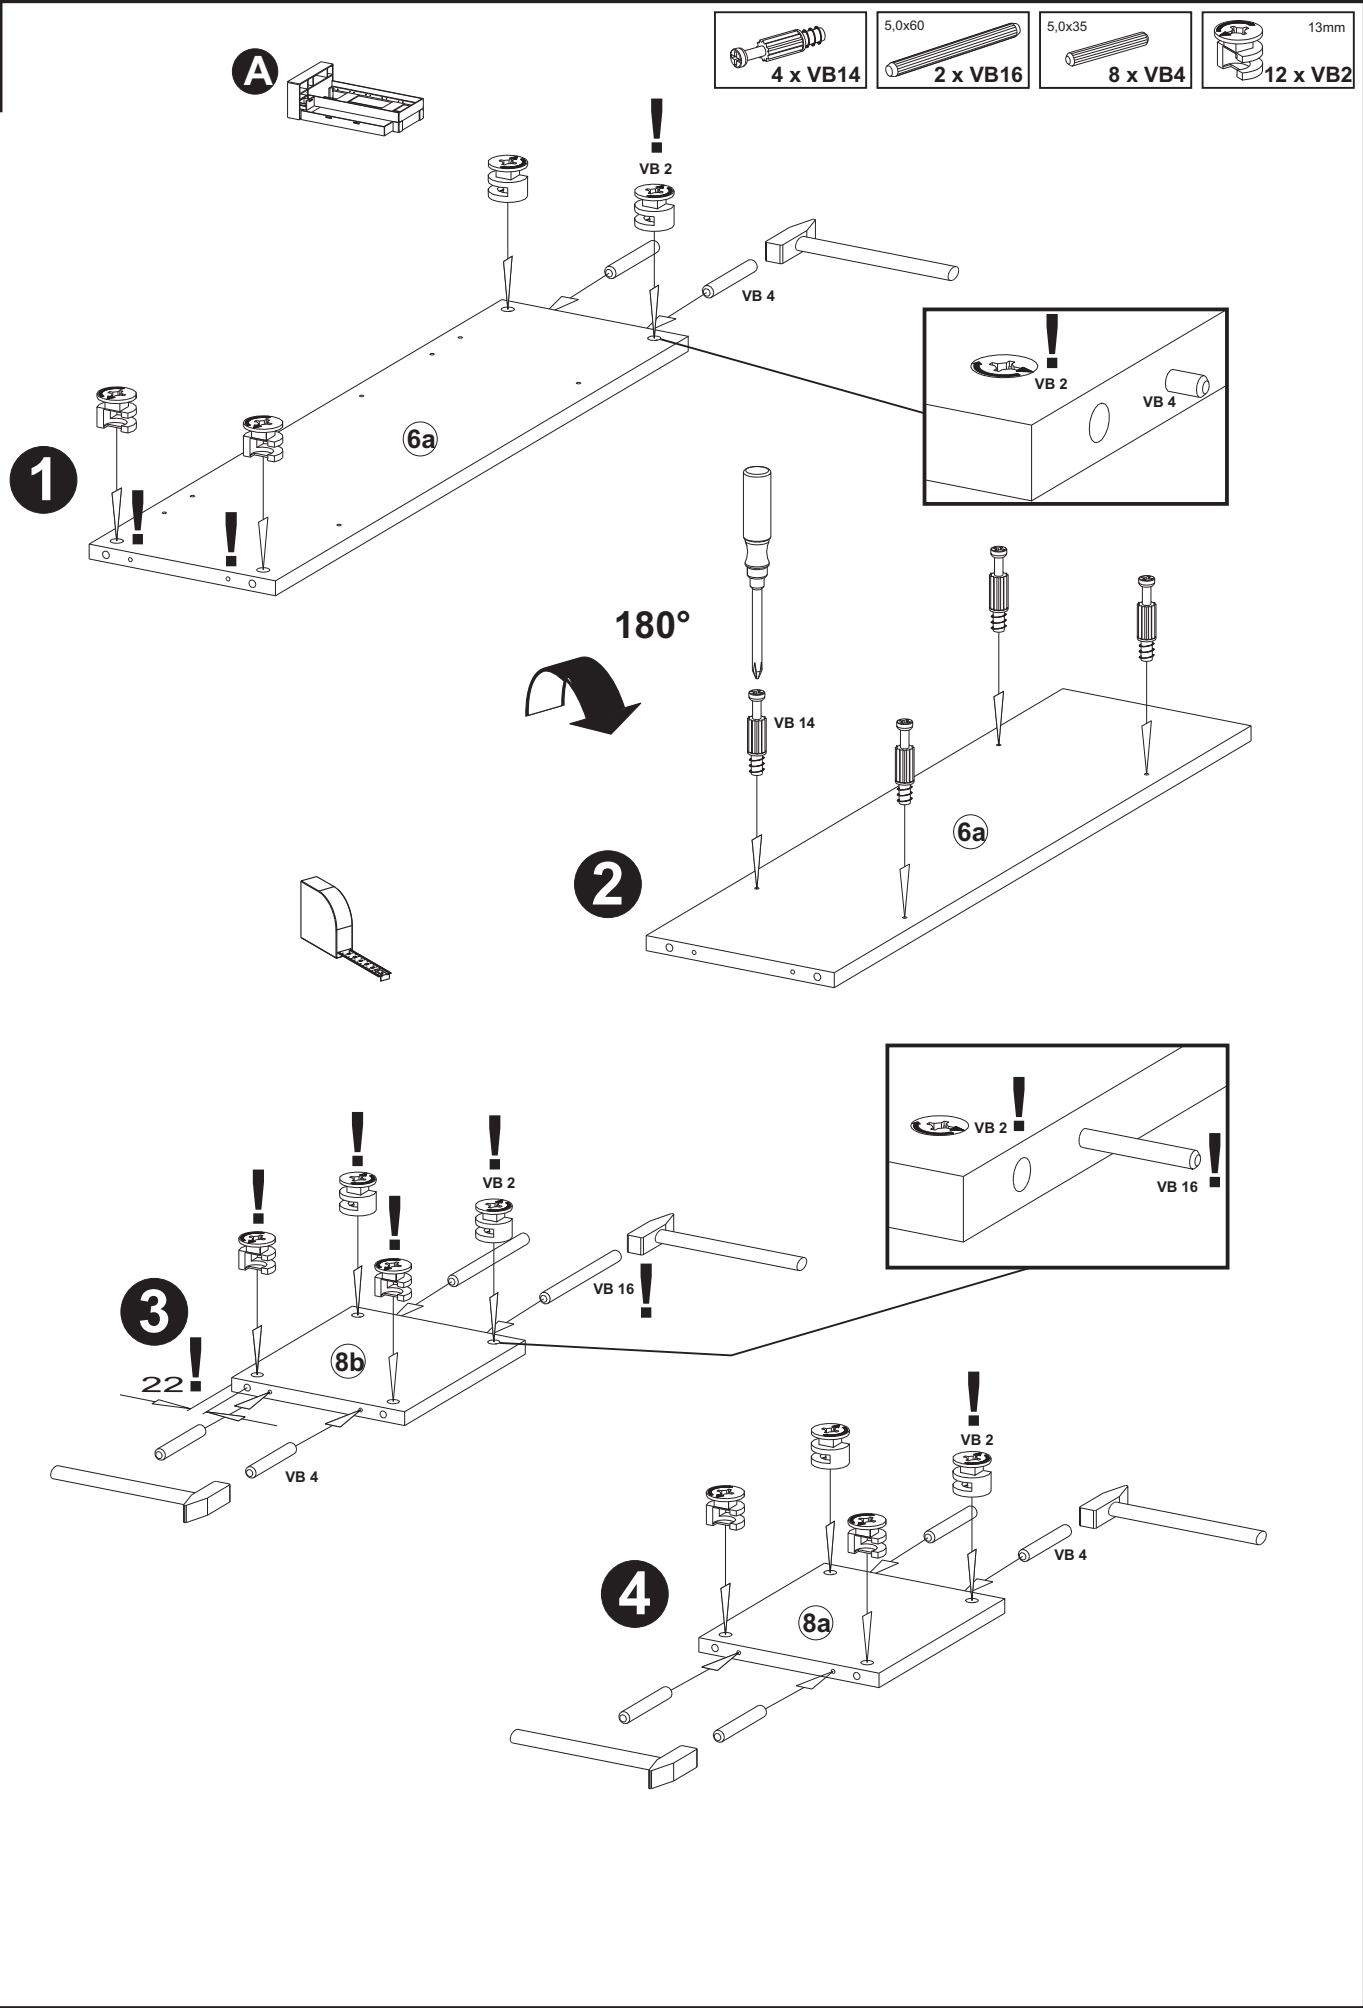

C2

B

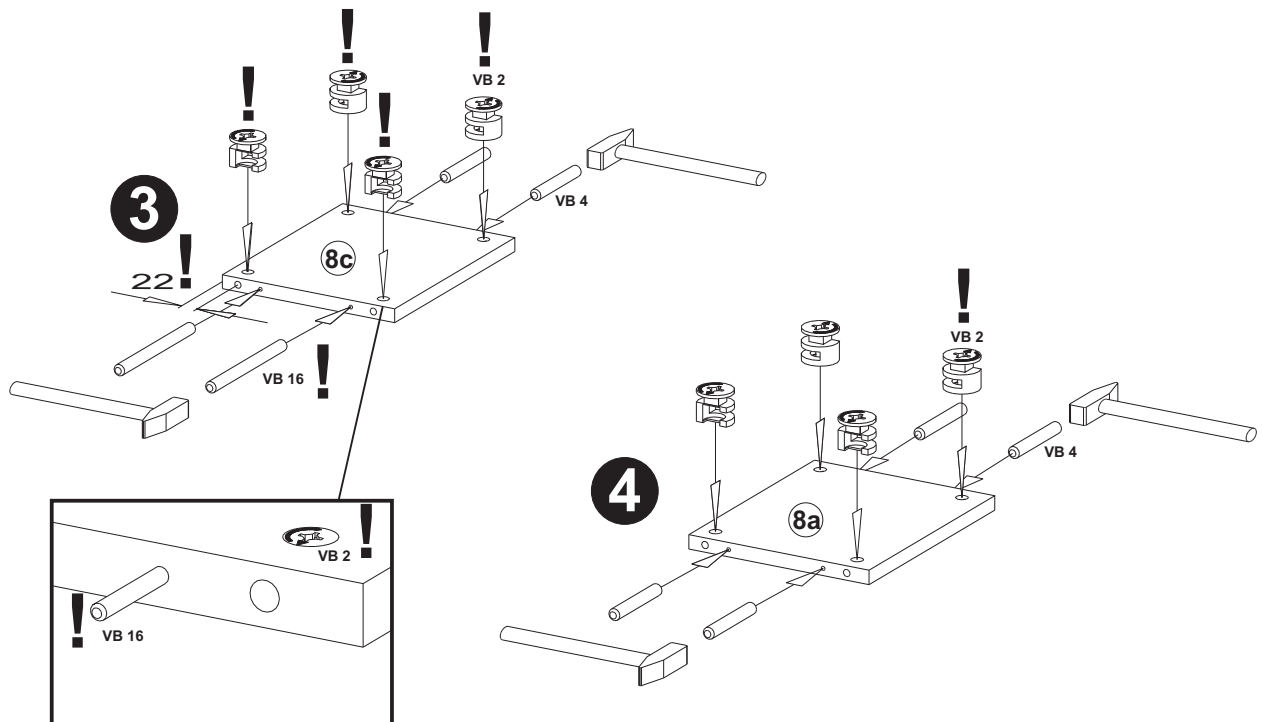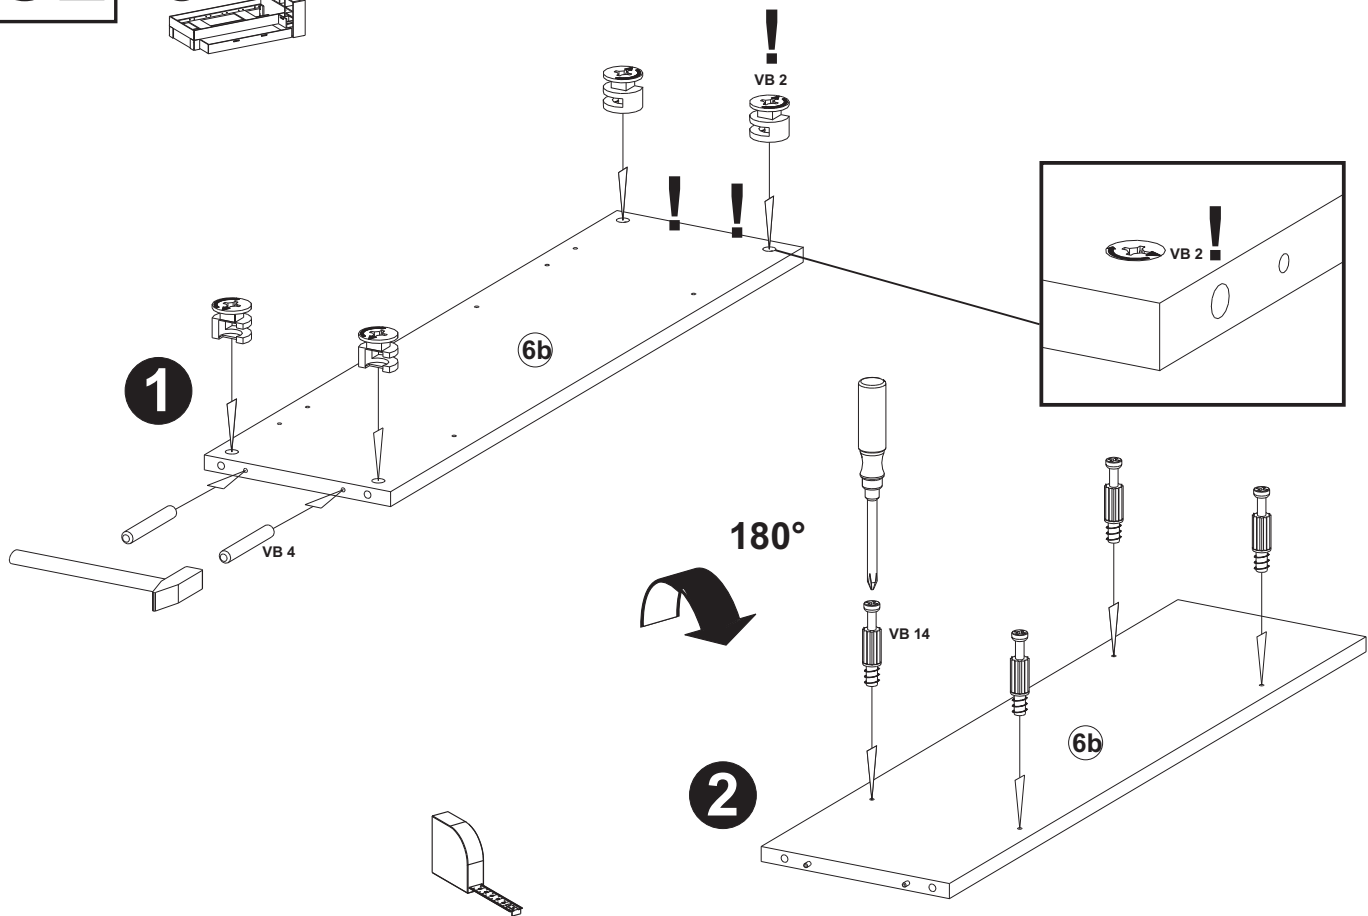

D

- 5,0x35



2 x VB4
- 13mm



12 x VB2
- 11mm



16 x VB1

1

2x

3

VB 2

2

7

VB 2

VB 4

VB 1

18

900

3

2x




VB 1

4

2x

26

870

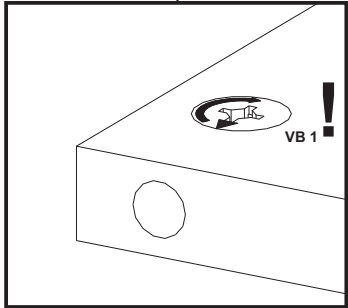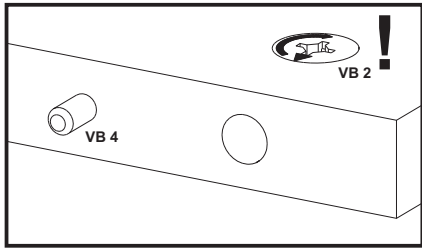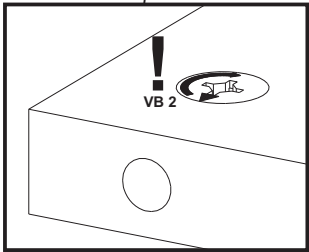

E


- 

4 x
GL7
- 

5,0x35
8 x VB4
- 

8 x VB14
- 

8,0x35
8 x VB18

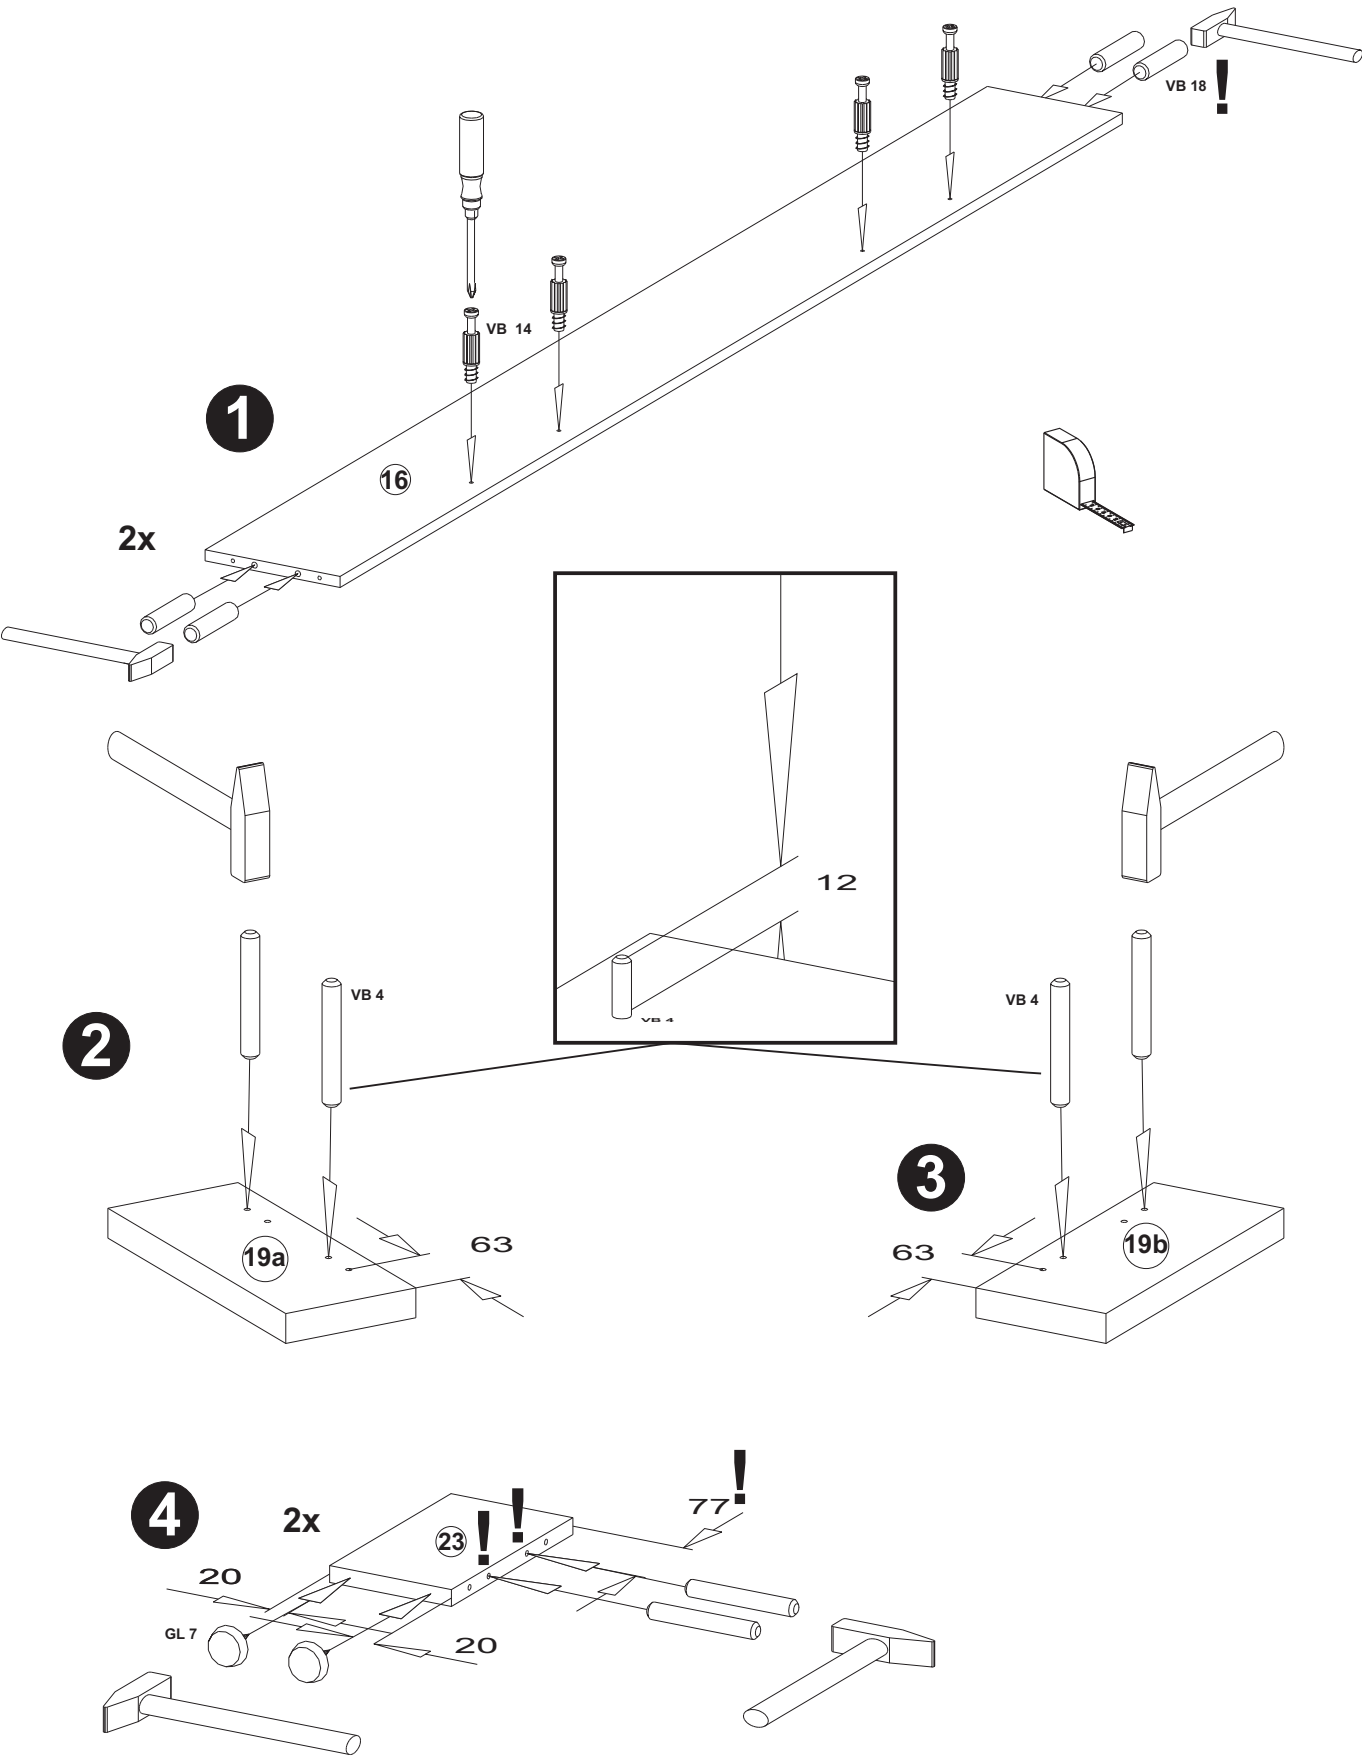



F







7 x
GL7



10 x
VB5

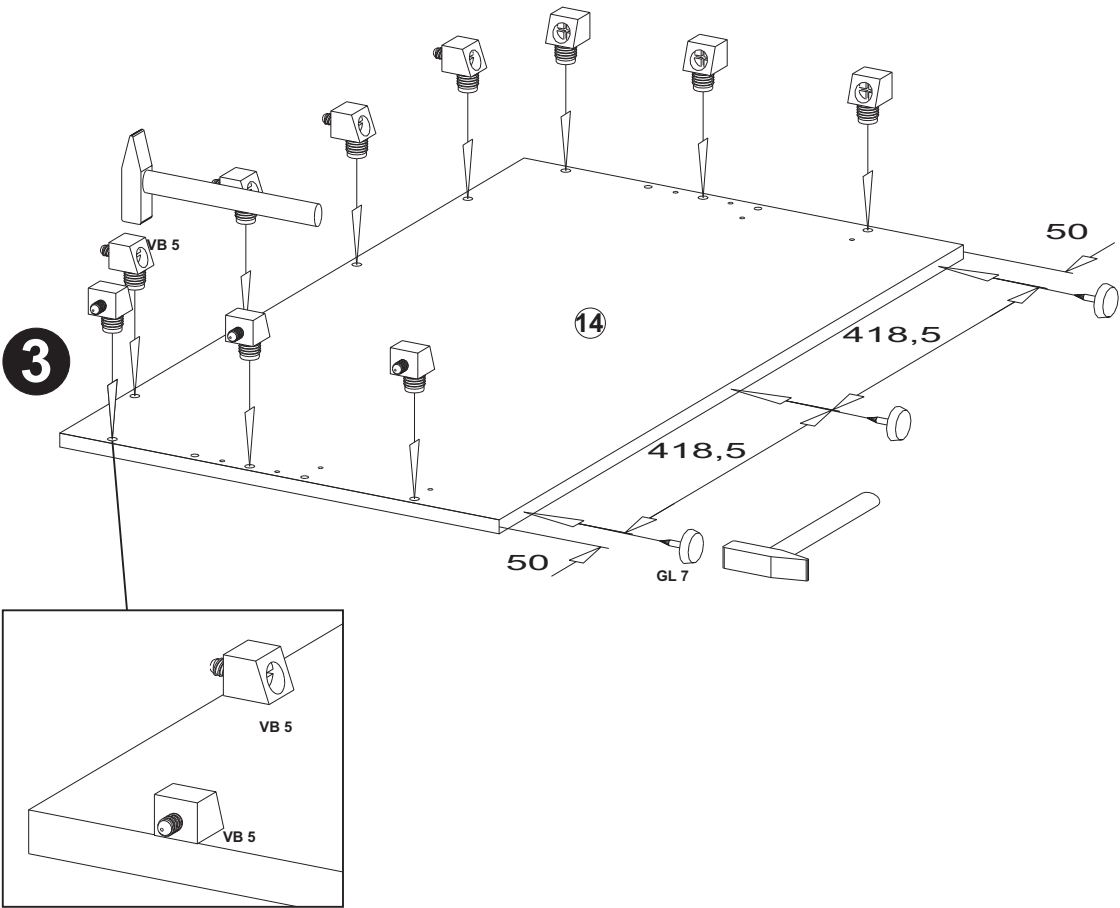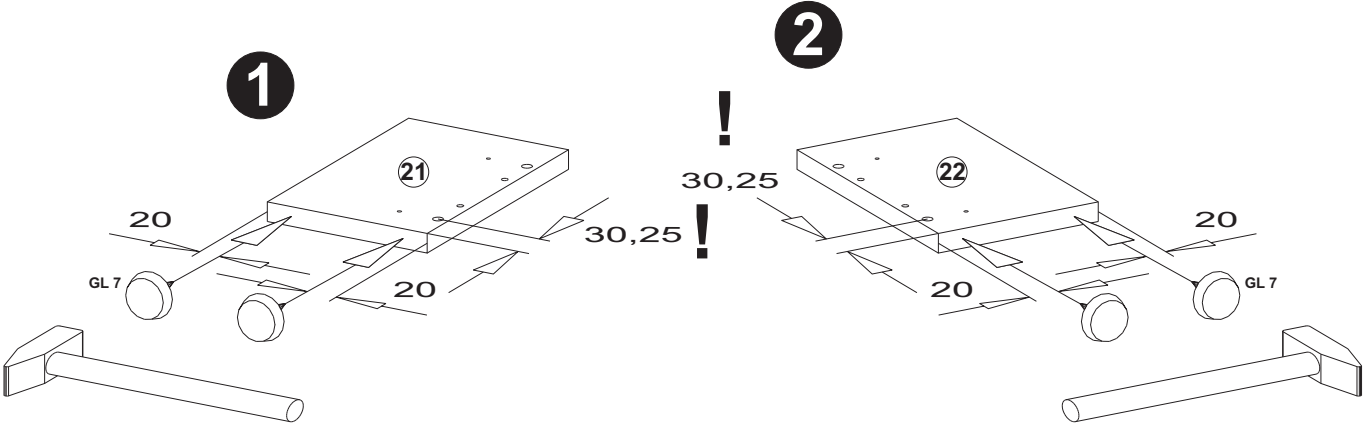

G

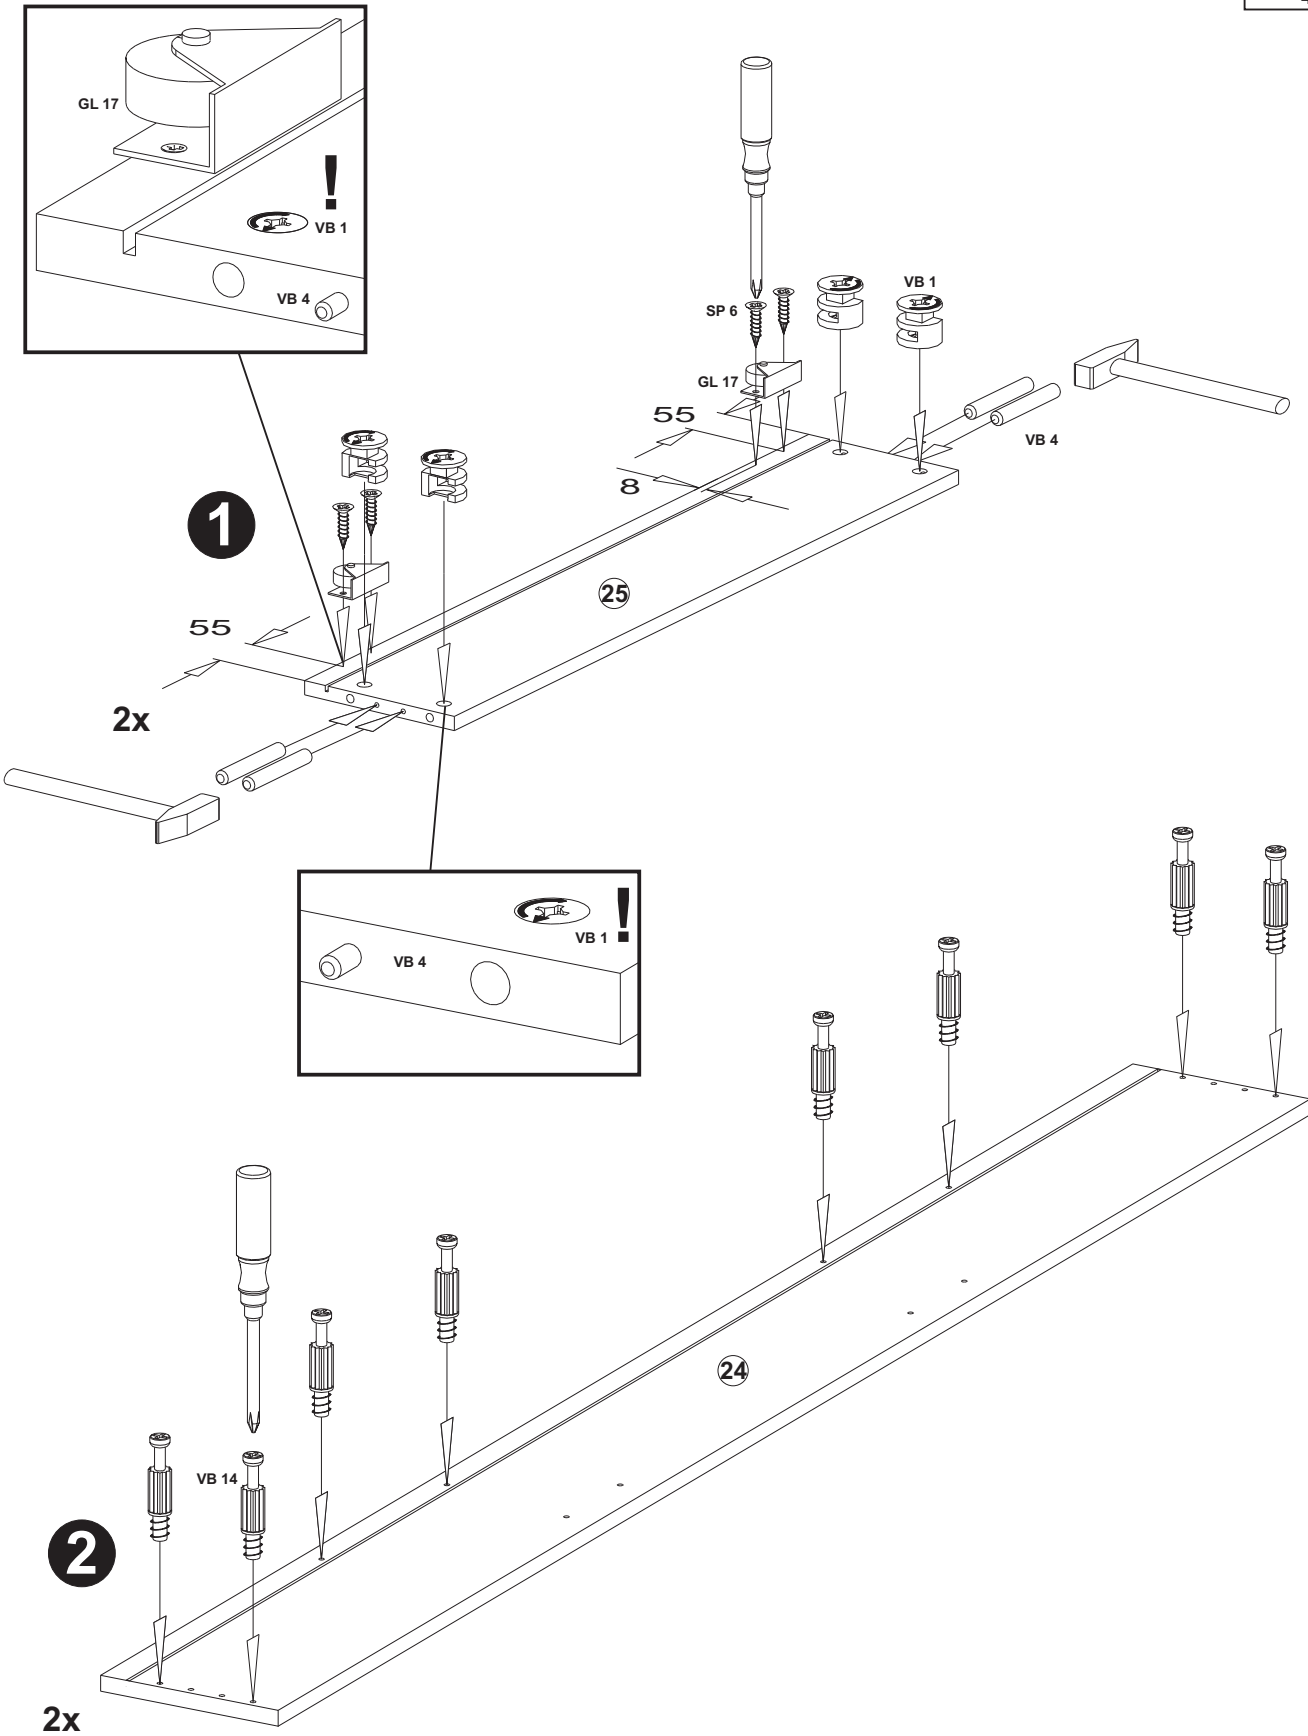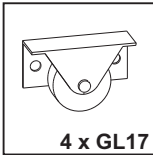





H



4x GR18



3,5x25
8x SR1

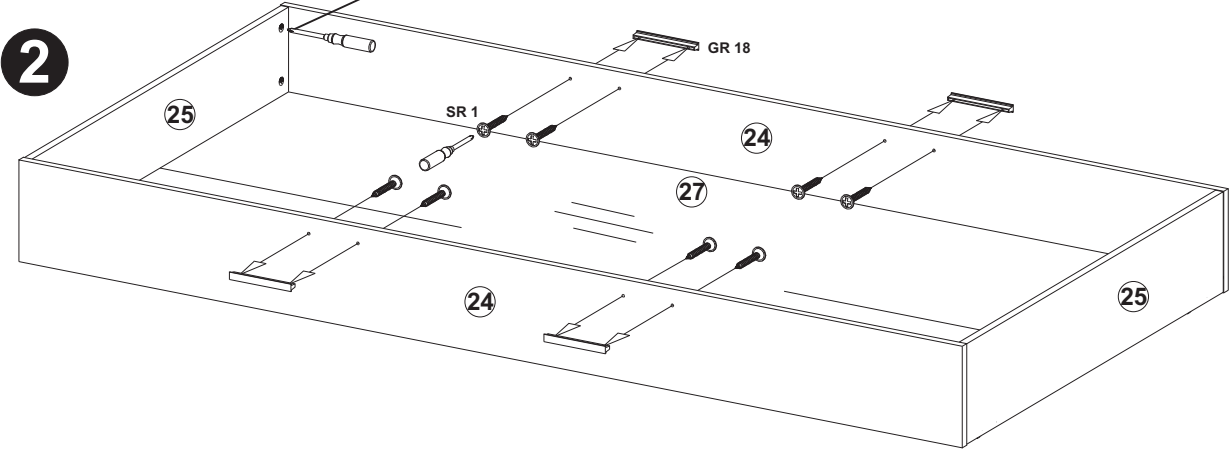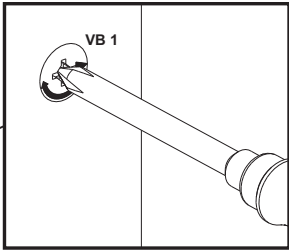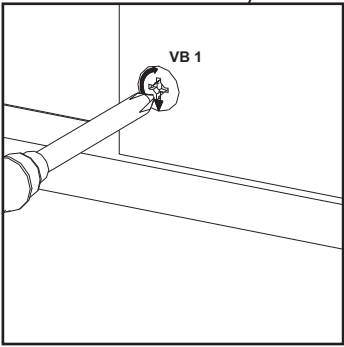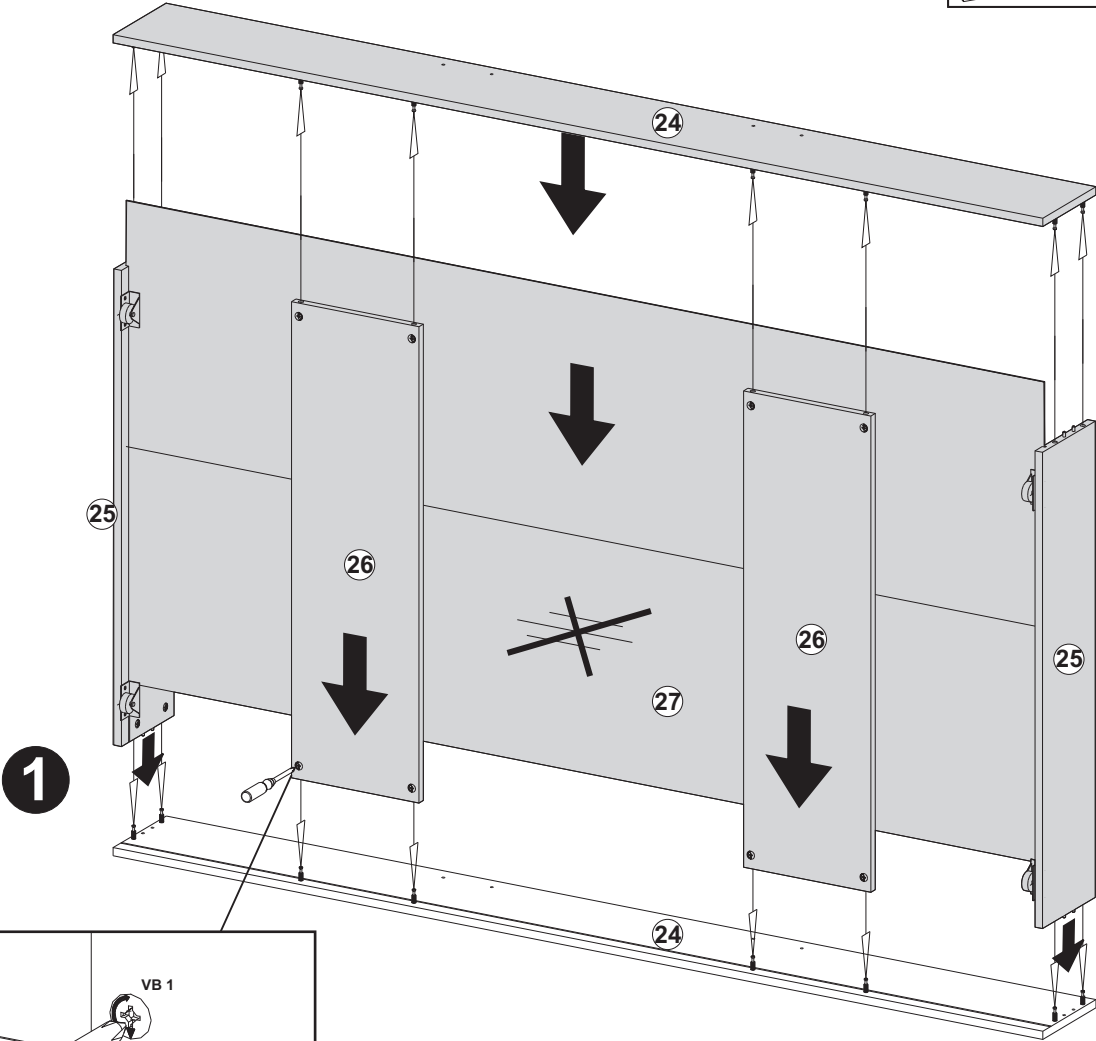

I





4x AK1



7,0x50
4 x VB3





W2

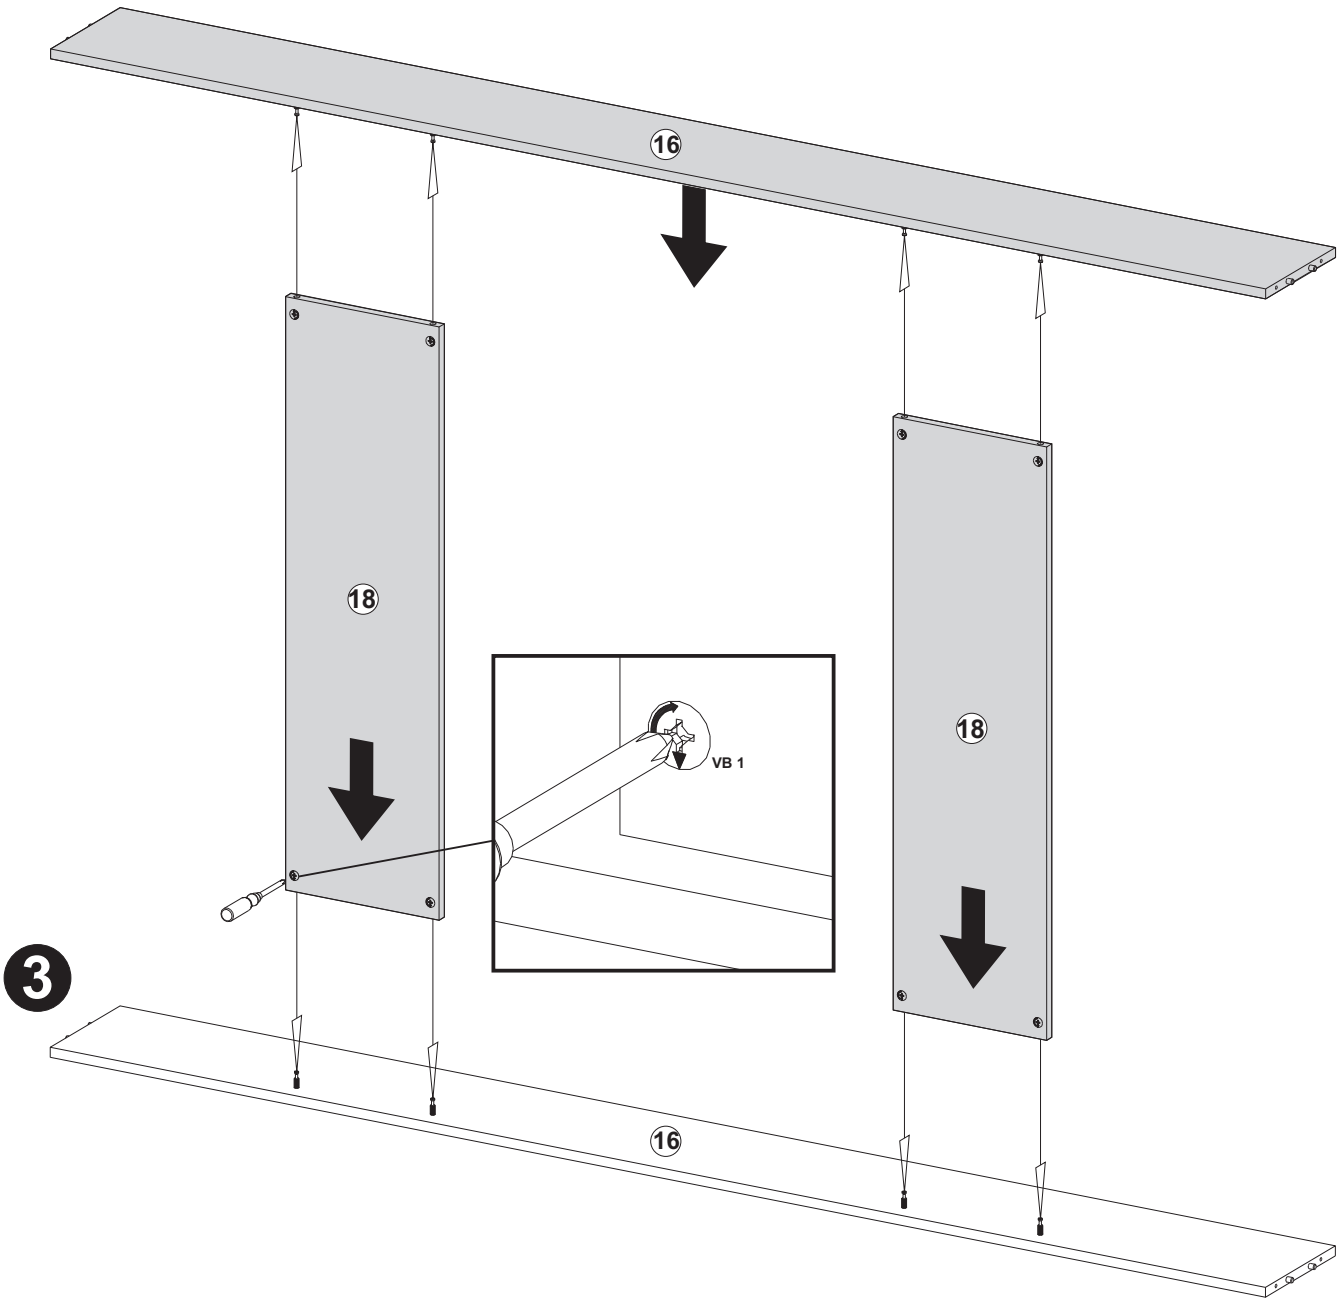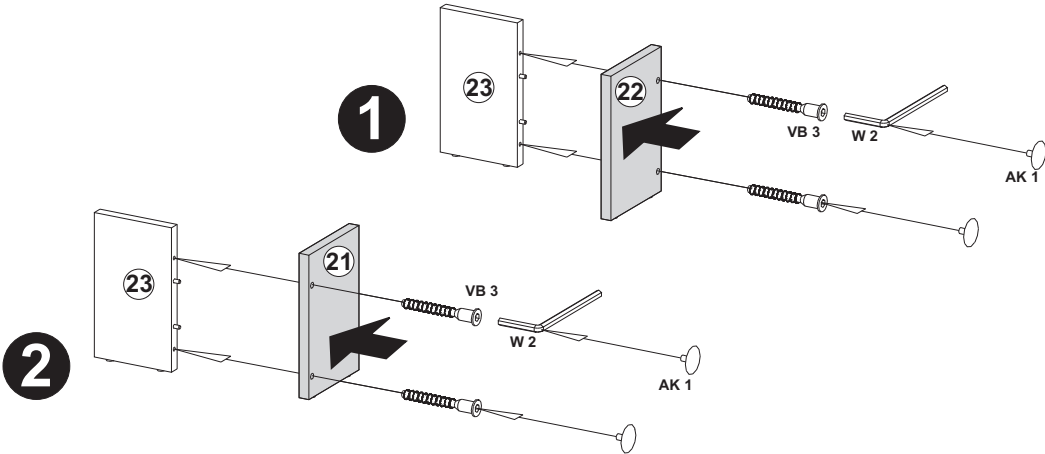

J

- 3,5x25
16 x SO10
- 4,0x35
4 x SO13

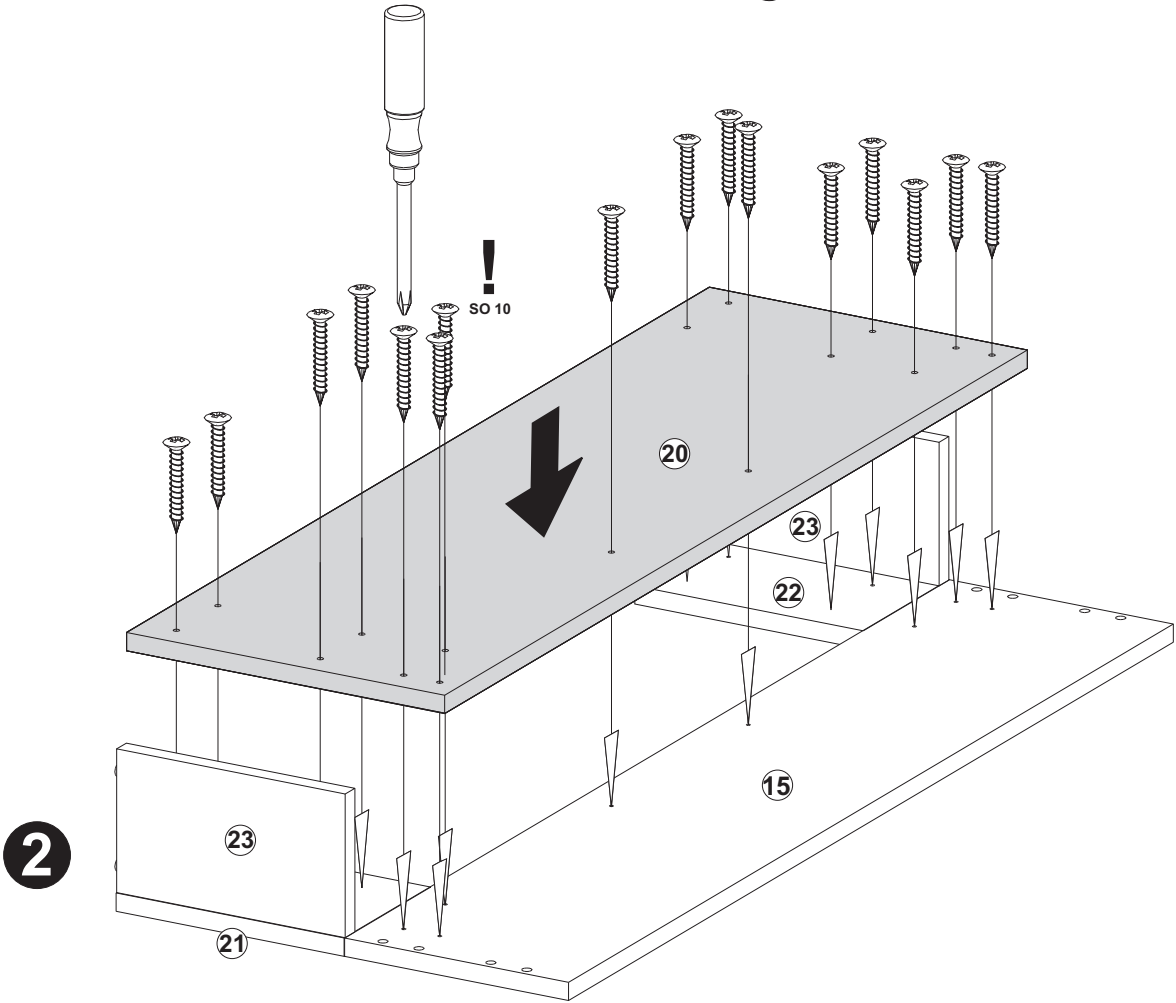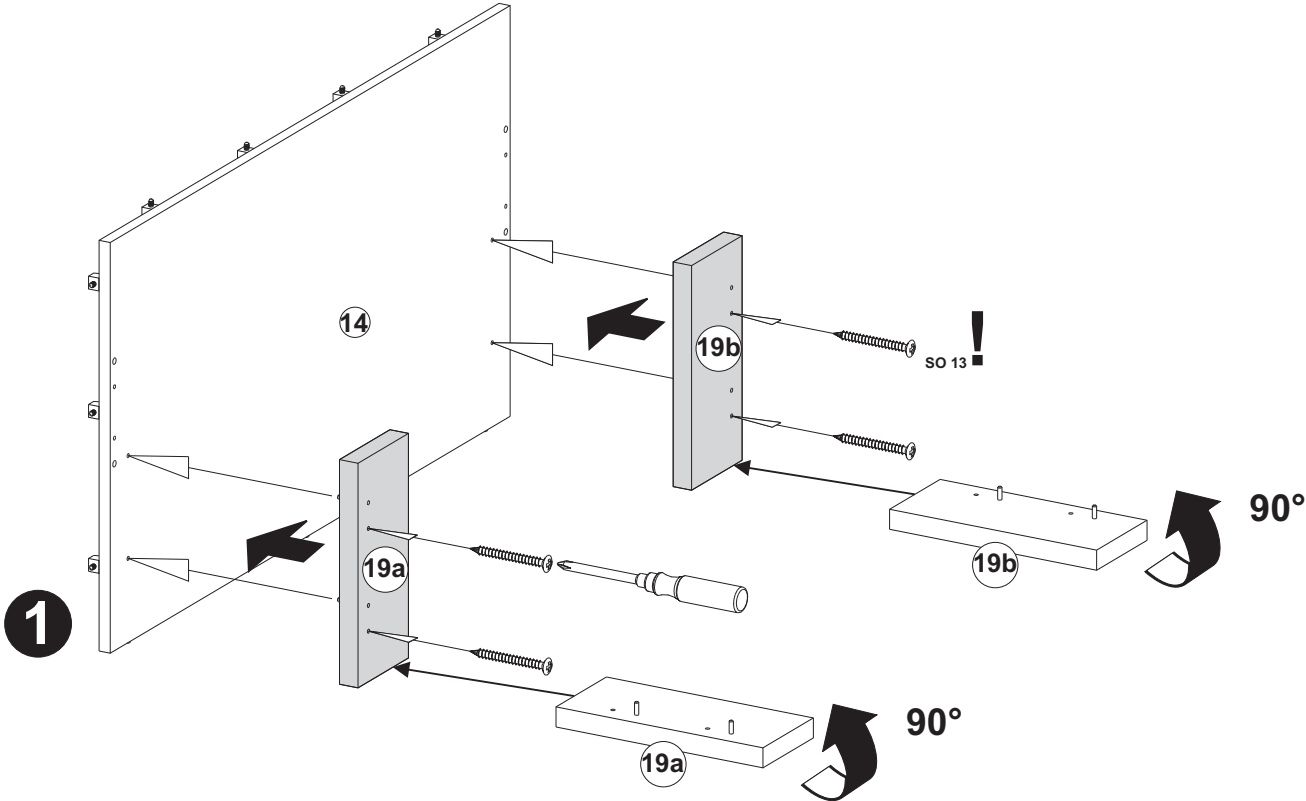

K

- 3,5x15



16 x SP1
- 4 x WI18


- 4,0x35







24 x SO13
- 4x AK1


- 7,0x50





8 x VB3
- W2





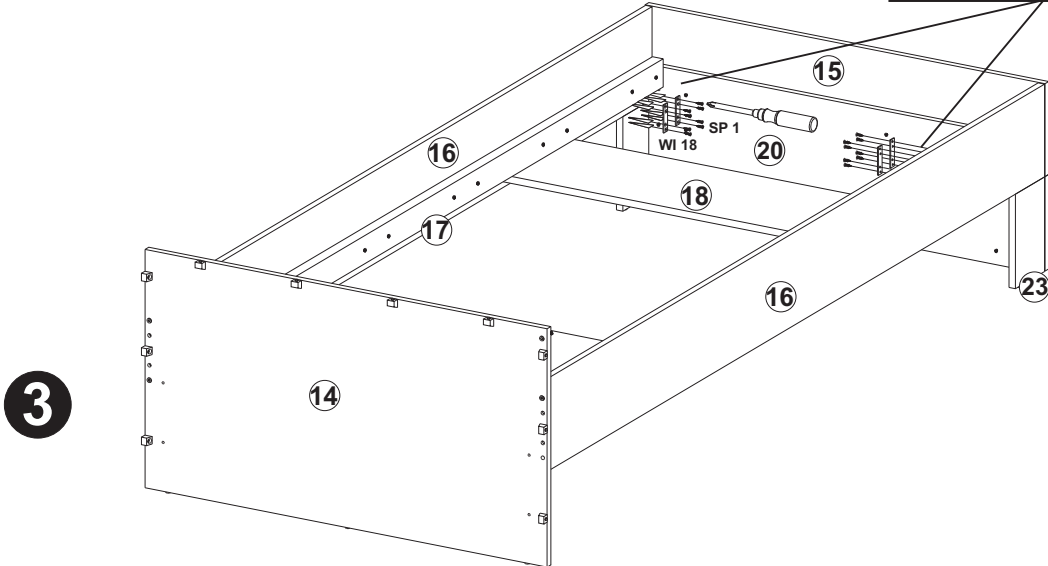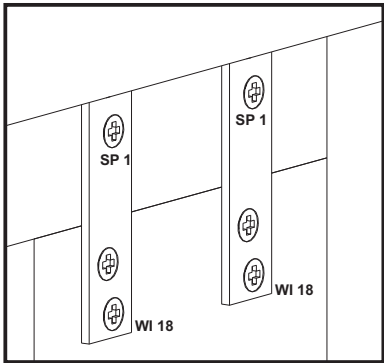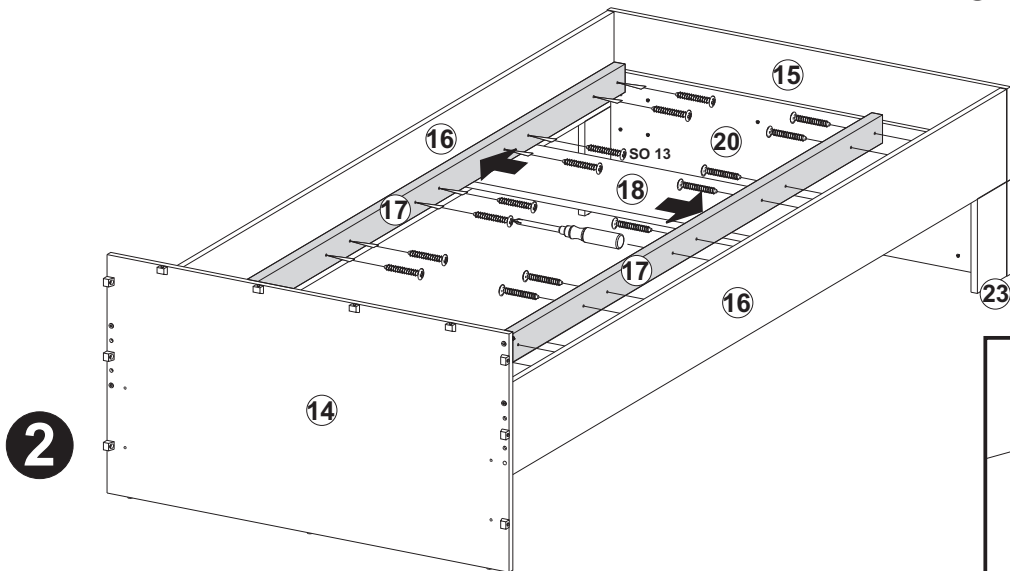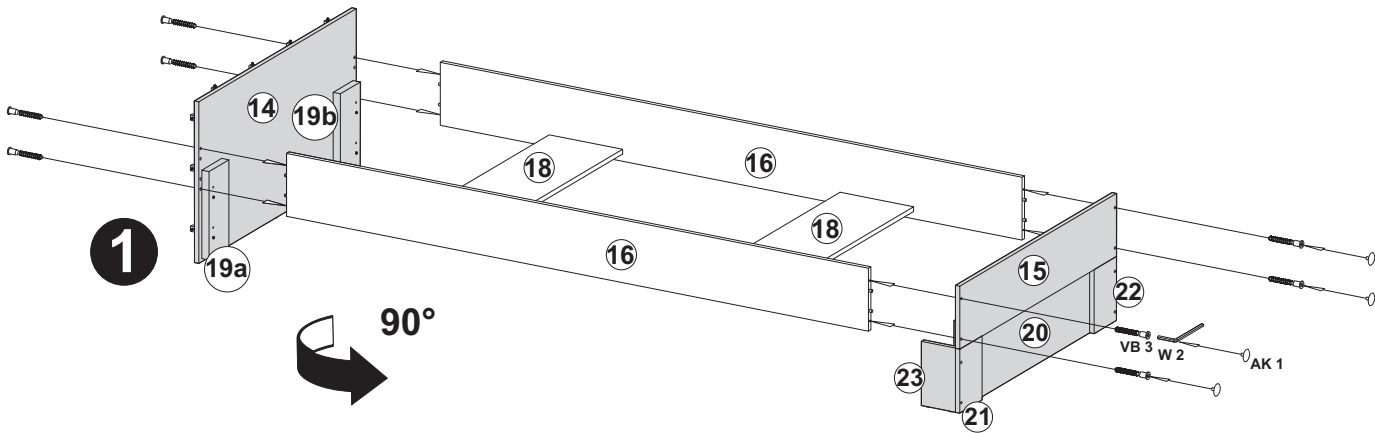


K1

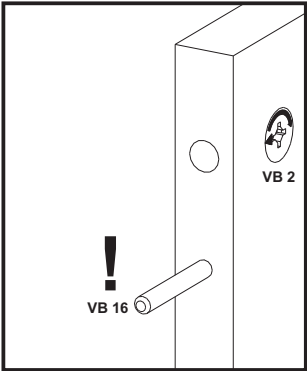




1

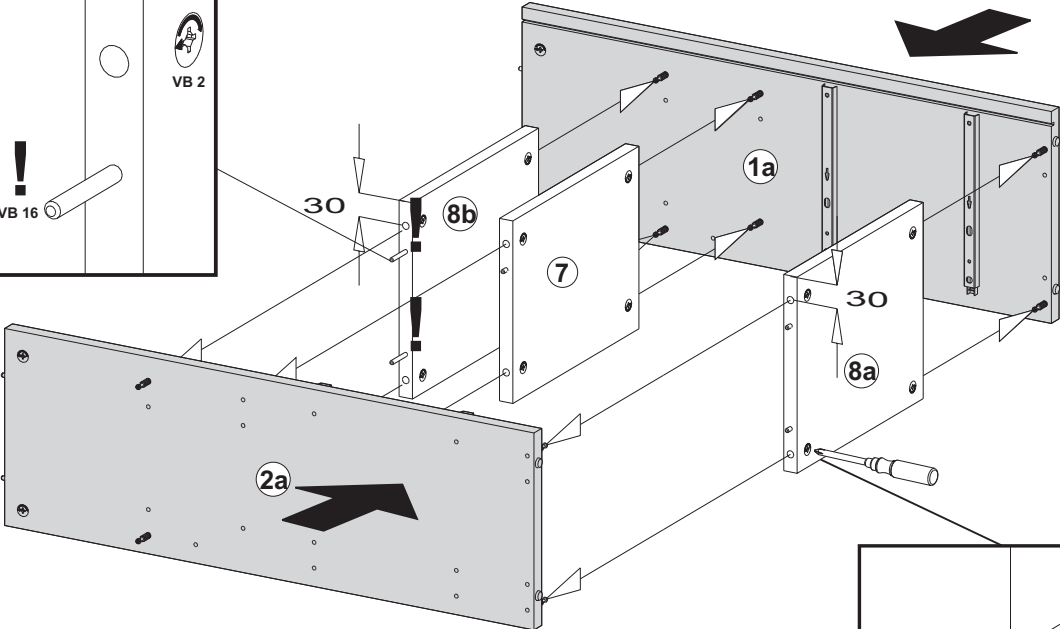

2

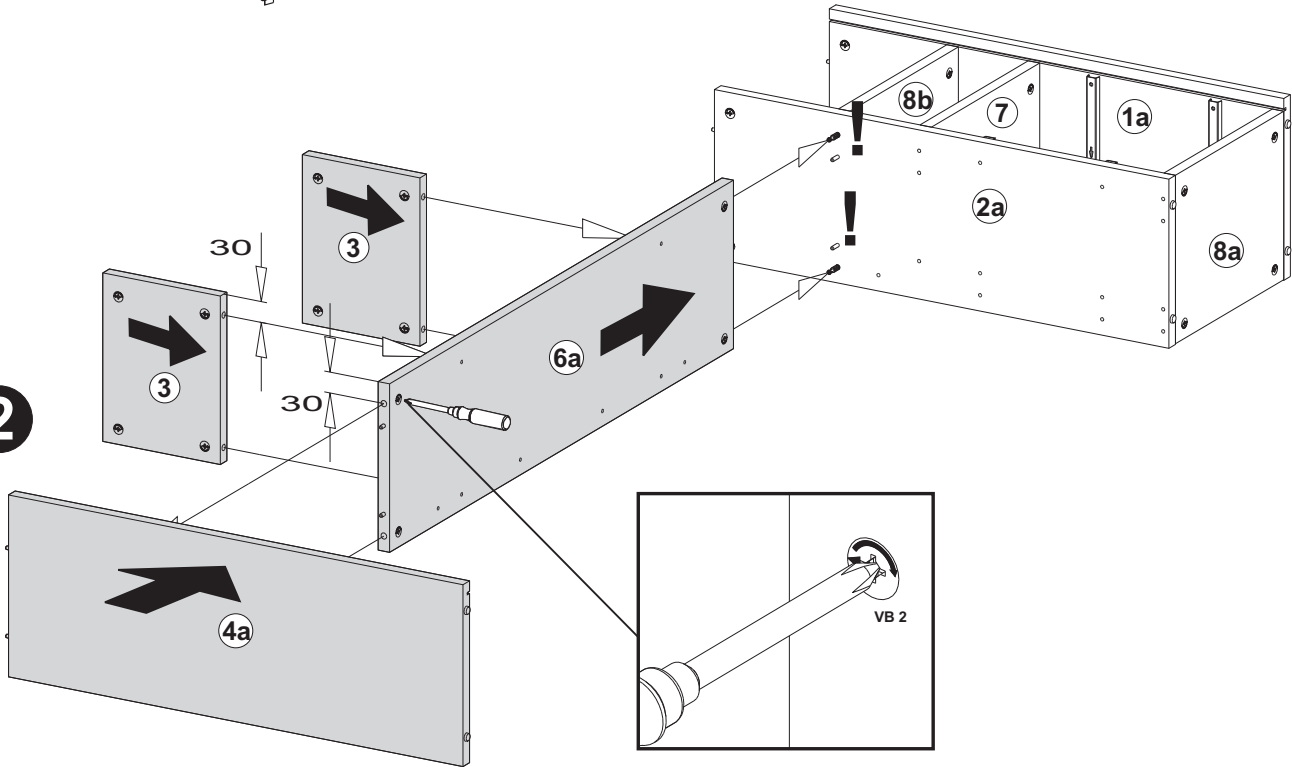


L1

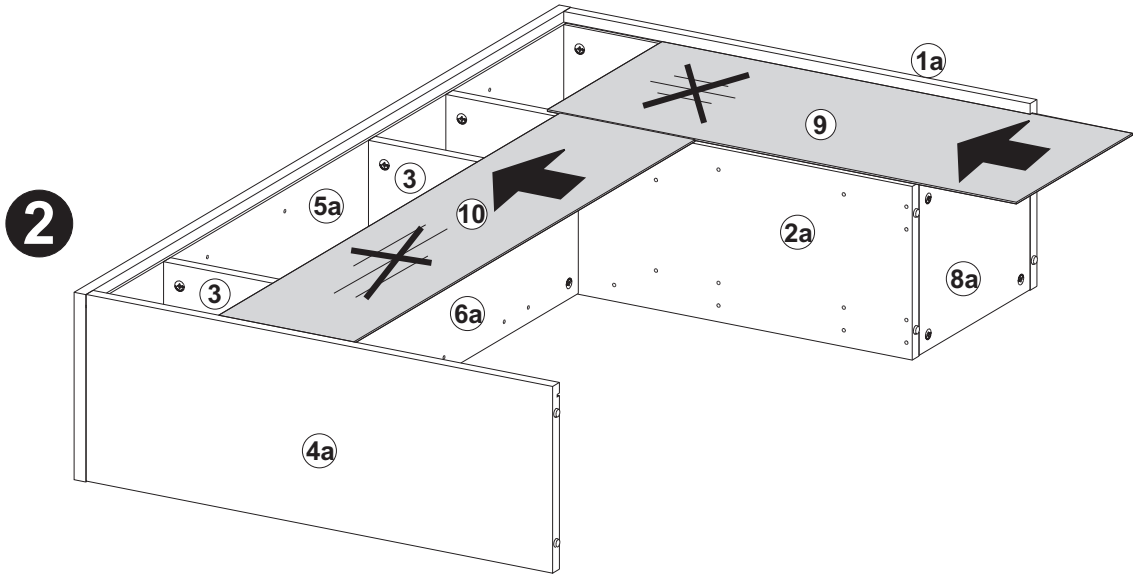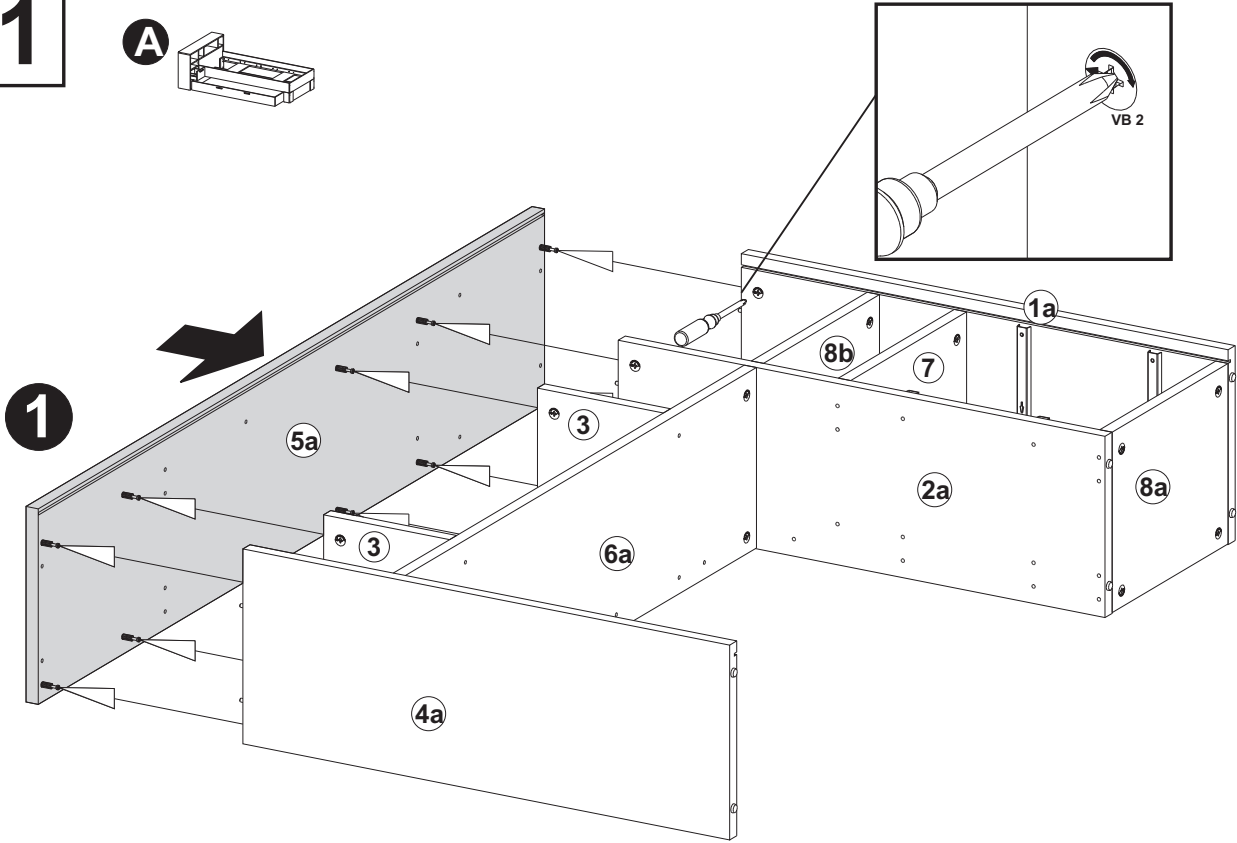

M1

A



2,7x20



3 x SR2




25 x SO3


3,5x20




7 x SP3



7	x
3	4




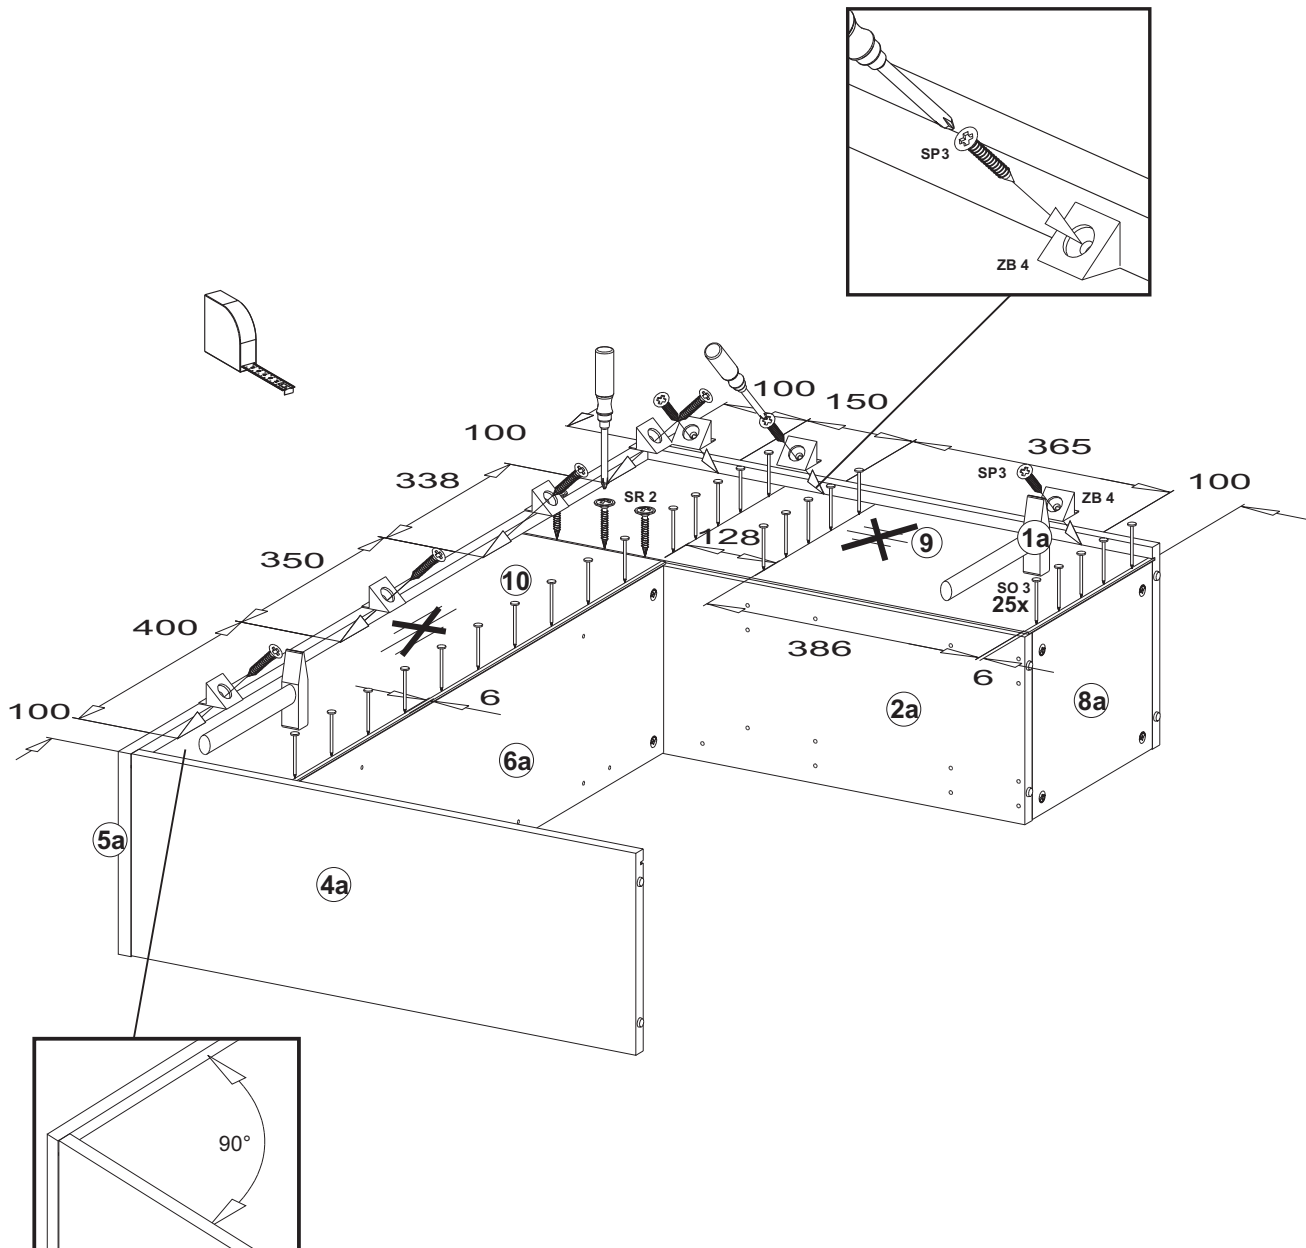


N1




M4x8
4 x SG1

14 x AK3

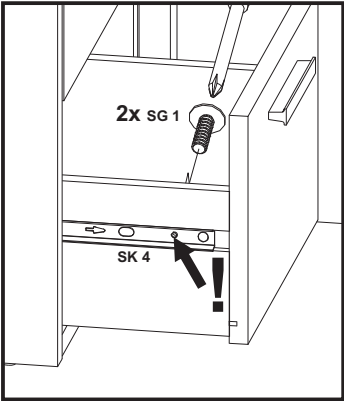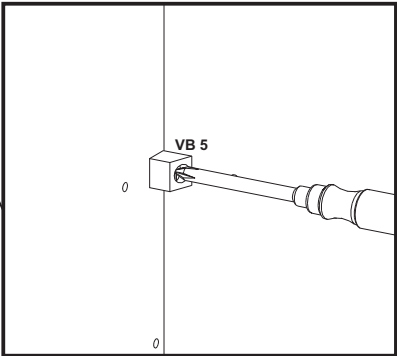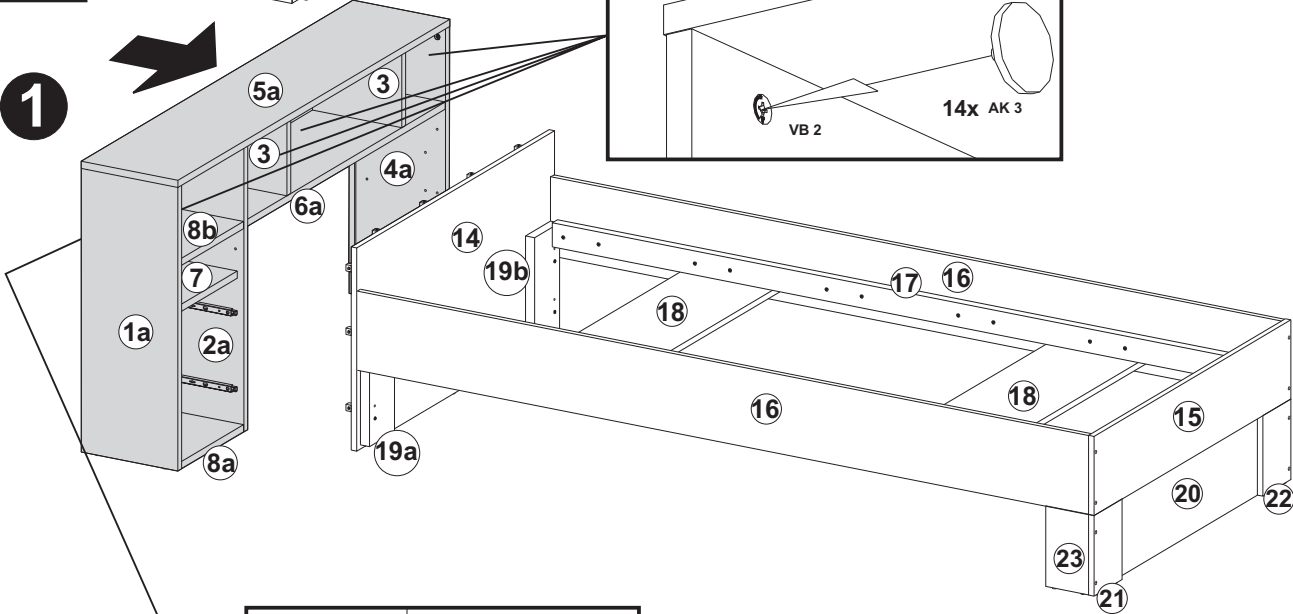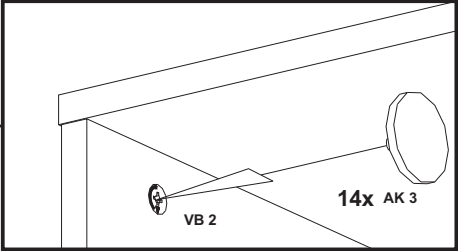








2

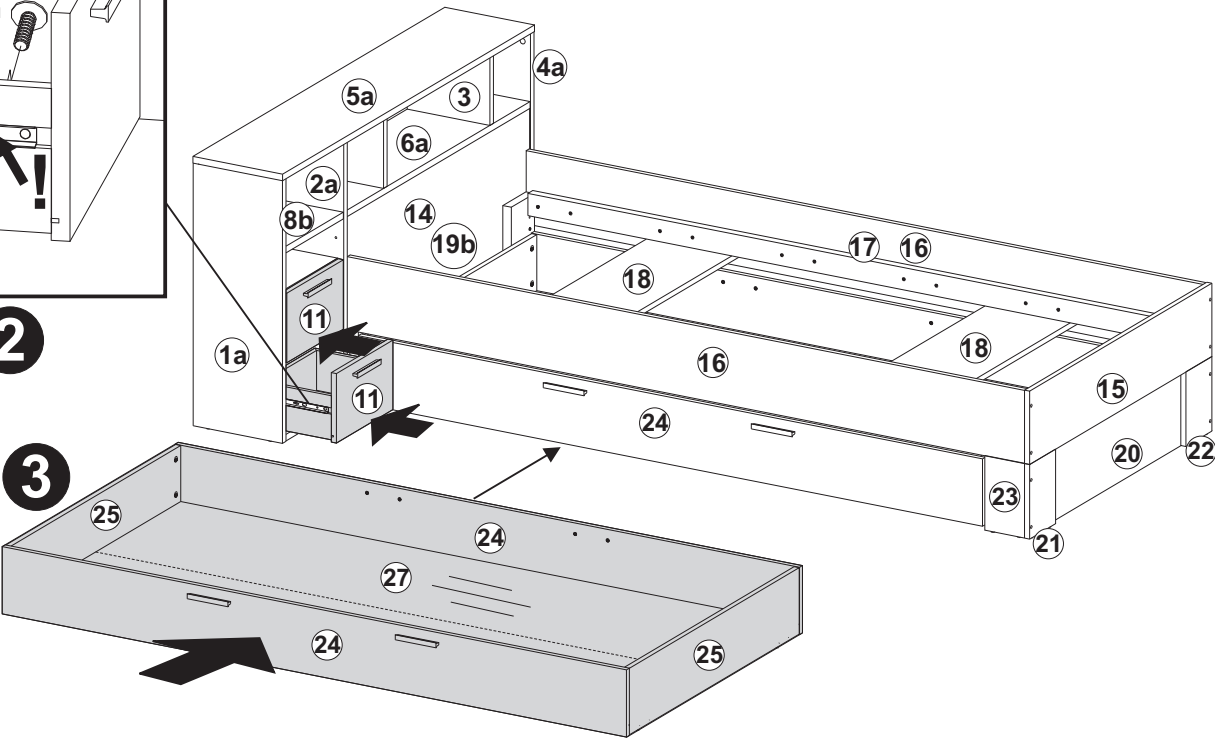




3

K2


B

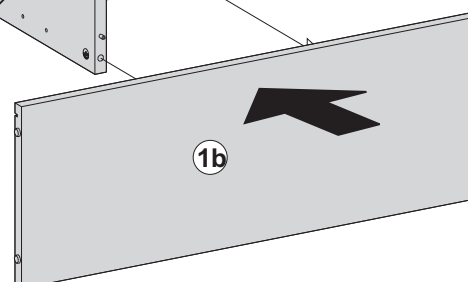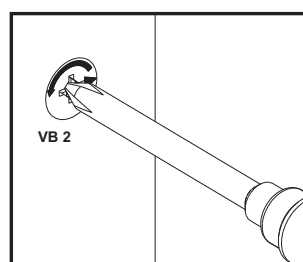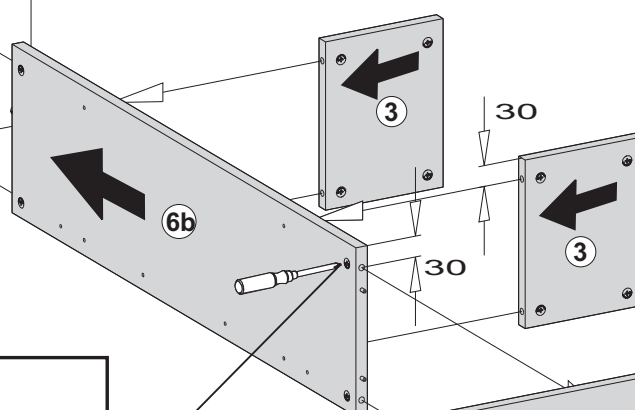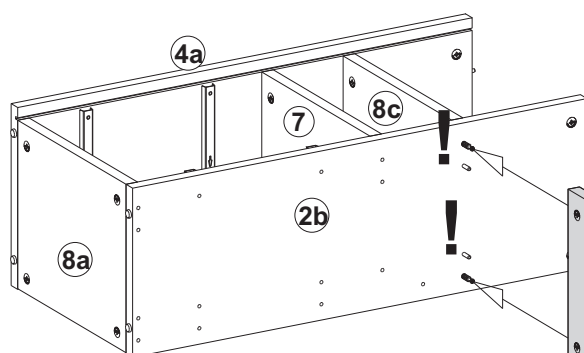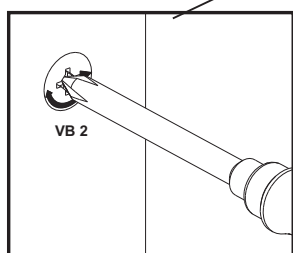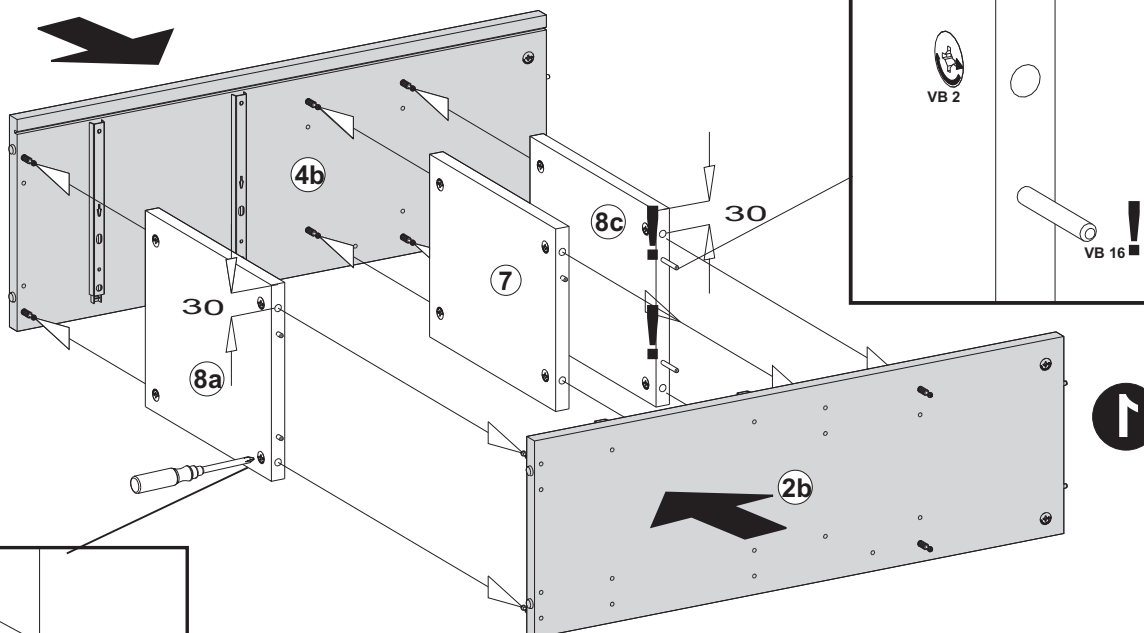



L2

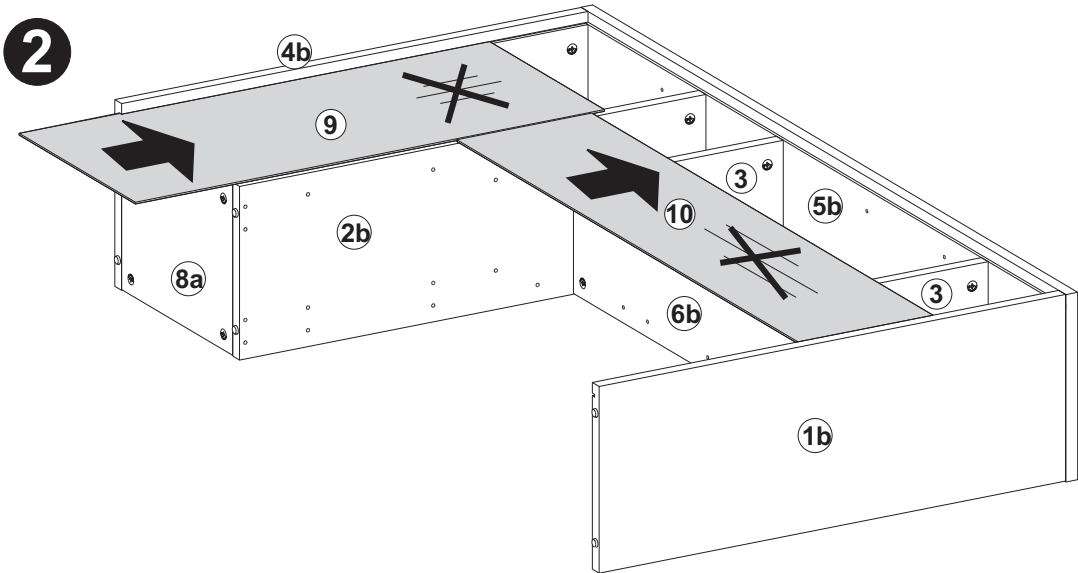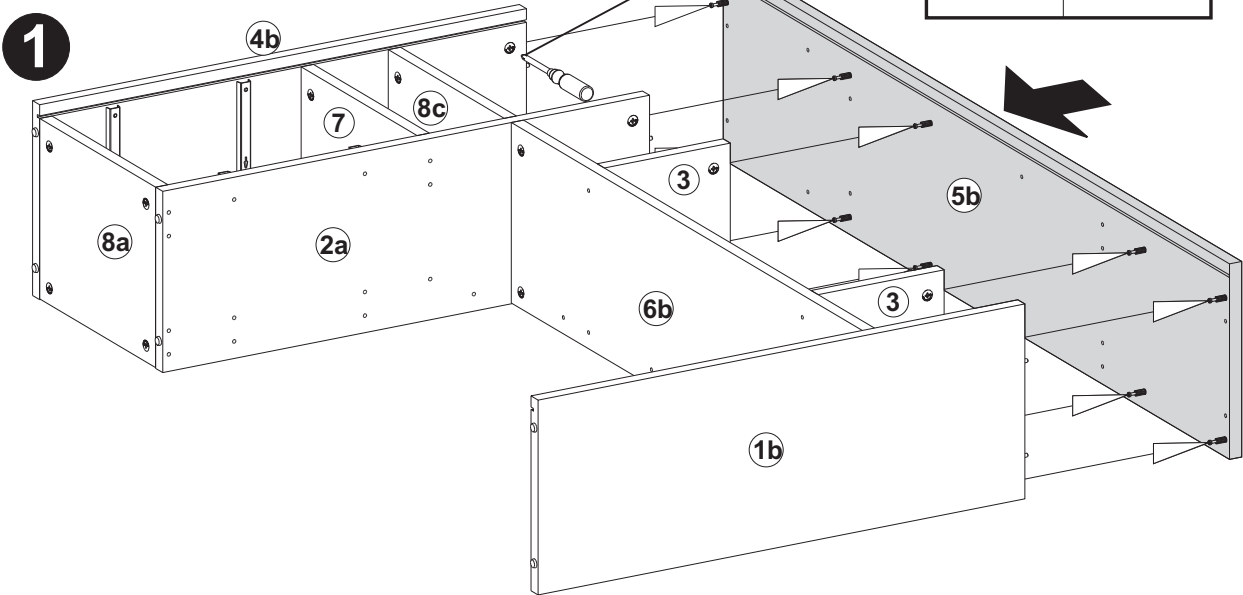


M2



- | | | | |
|-----------------------|--------------|-----------------------|-----------------|
|
2,7x20
3 x SR2 |
25 x SO3 |
3,5x20
7 x SP3 |
7 x
ZB 4 |
|-----------------------|--------------|-----------------------|-----------------|

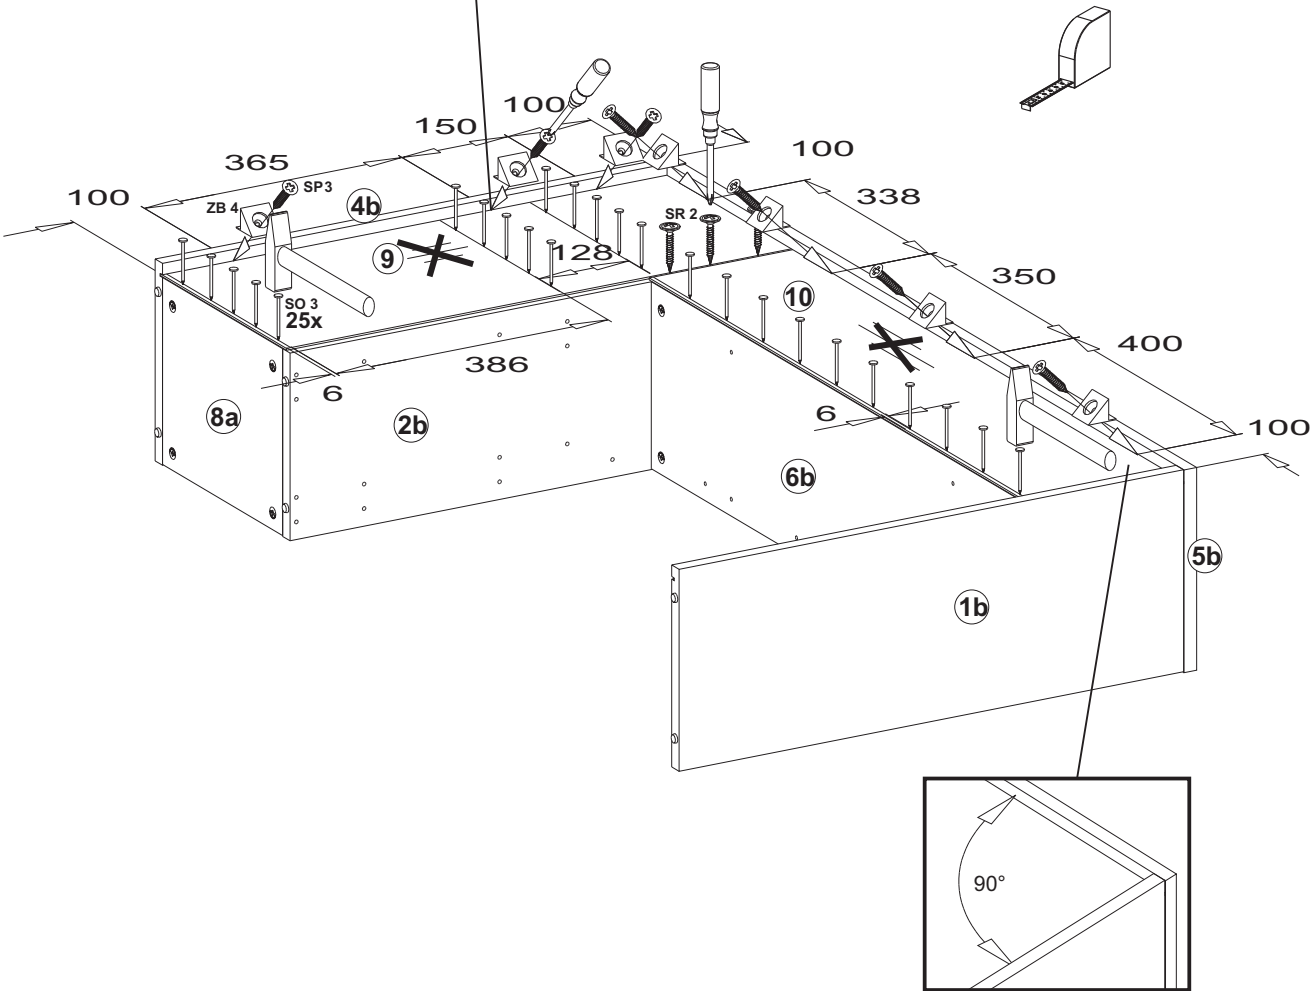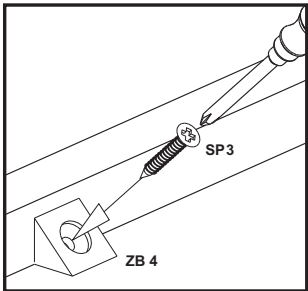




N2



M4x8
4 x SG1

14 x AK3

1

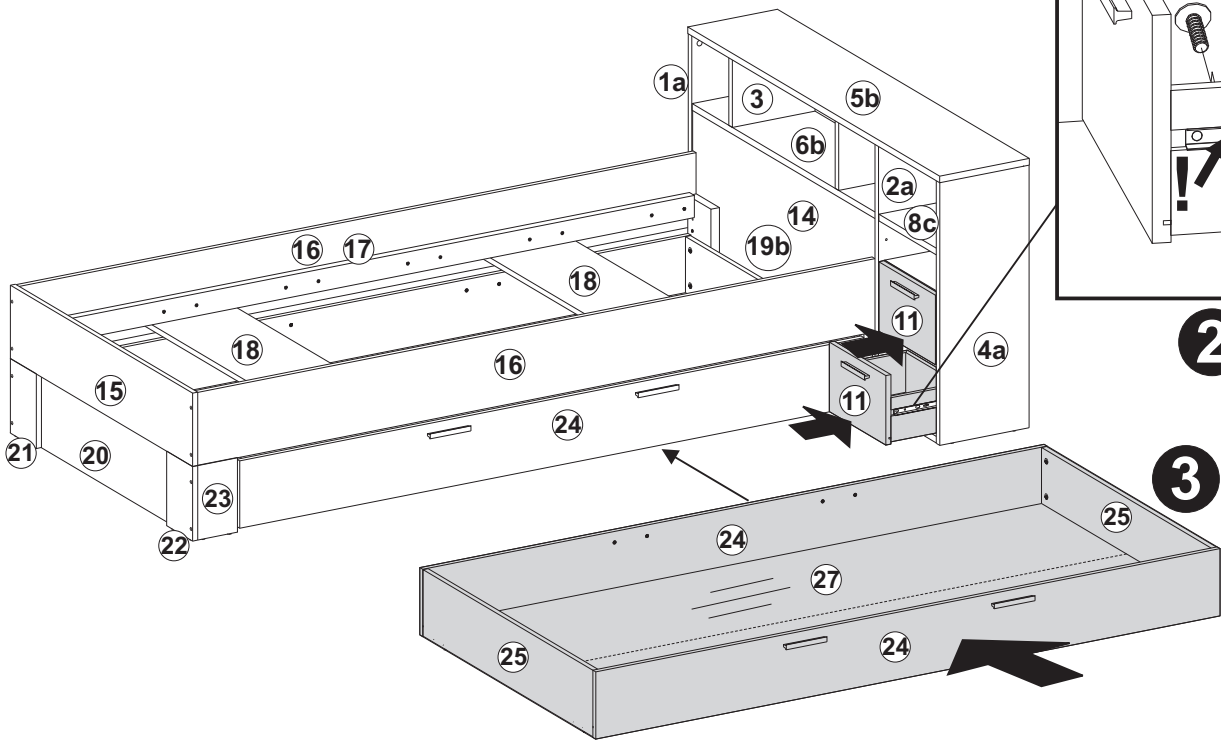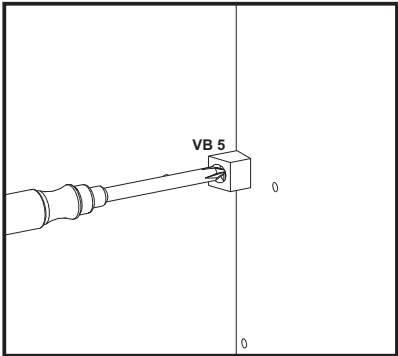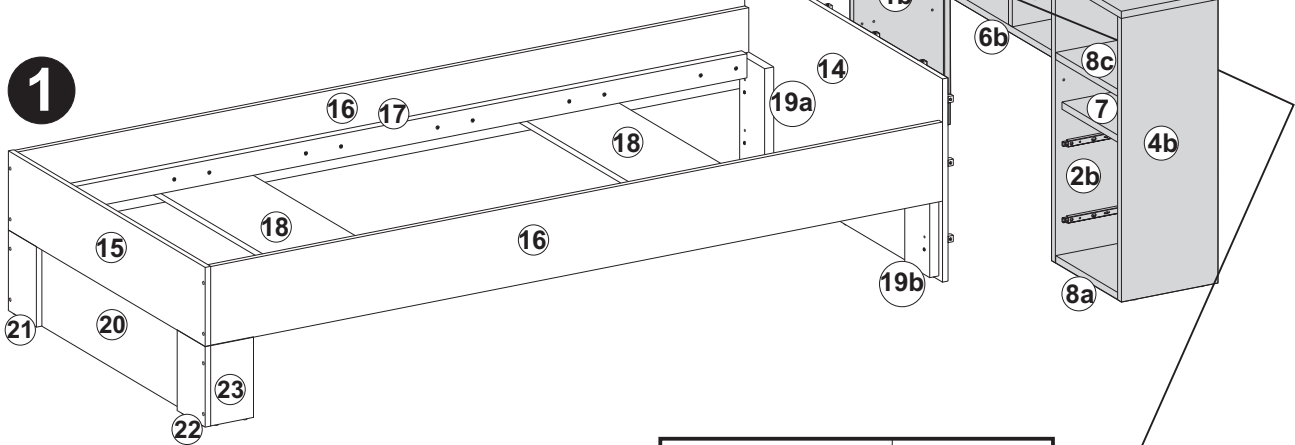

2

3