



ASSEMBLY INSTRUCTION

9620 - 9621

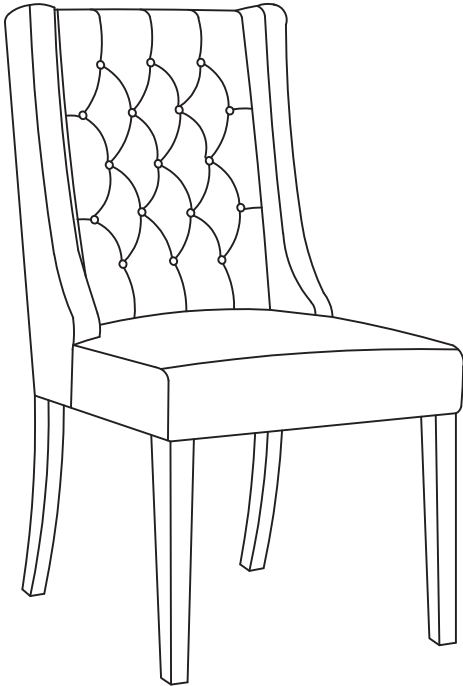


1

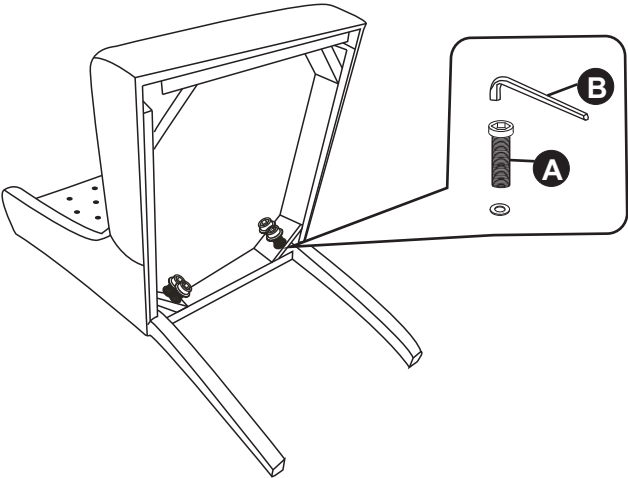




Put the screws in the holes, tight the screws, but not too tight, 90% is ok.

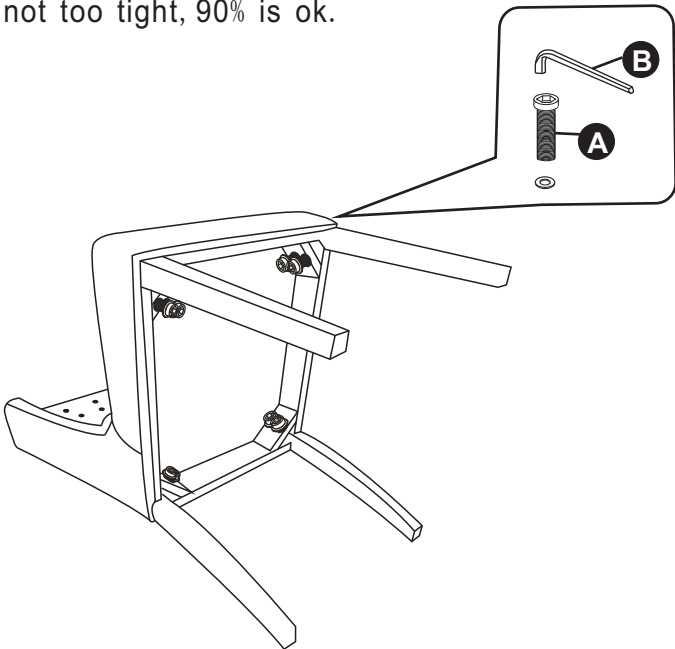
2



Put the screws in the holes, tight the screws, but not too tight, 90% is ok.


HARDWARE LIST	CODE	PARTS	QTY.
	A	M8x60MM  	8
	B	ALLEN KEY 	1

3

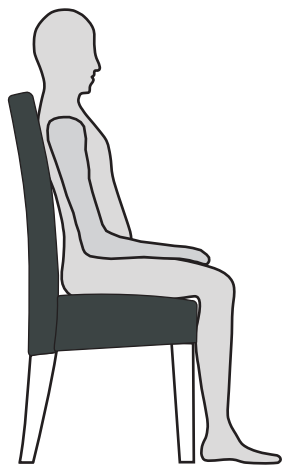


Then adjust the balance
of the chair.

5

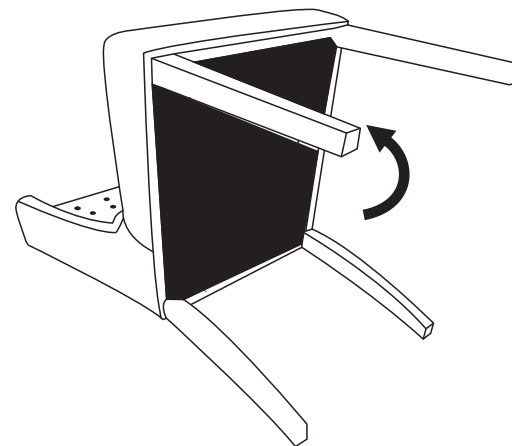

Stick the black part on the seat

4

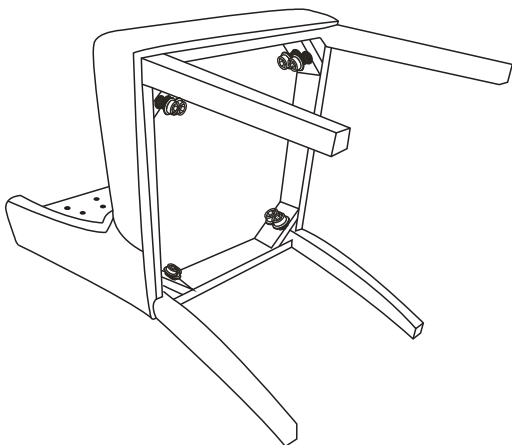

Tight all the screws to 100%