







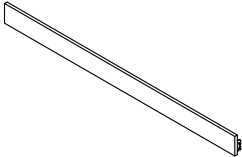

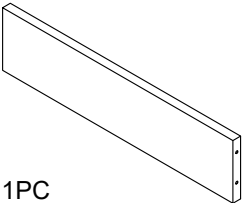
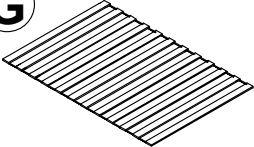




Assembly Instruction

ITEM NO : BED5334-90x200








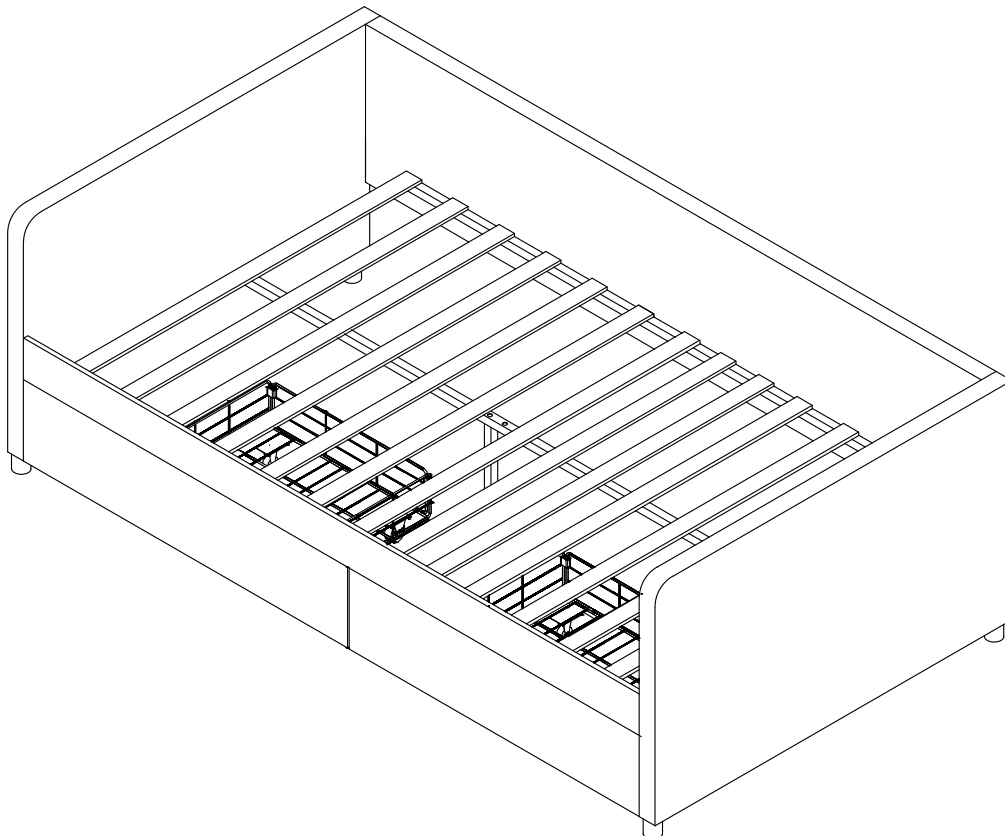


**IMPORTANT: PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPETTO
AVOID THE PARTS FROM BEING SCRATCHED
KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP
DO NOT TIGHTEN ALL SCREWS UNTIL THE BED IS FULLY SET-UP**

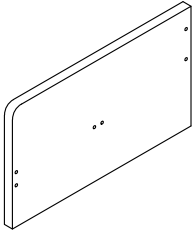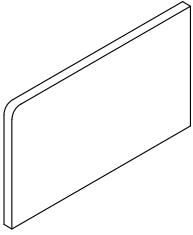


PARTS LIST:

A  Armrest-Left=1PC	B  Armrest-Right=1PC	C  Plastic Legs=4PCS	D  Side Rail=1PC
E  Support Bar=1PC	F  Backrest=1PC	G  Slats=12PCS	H  Drawer Panel=2PCS
I  Support Leg=1PC	J  Mesh Drawer=2PCS	K  Pulley=8PCS	

HARDWARE LIST:


1 Allen Key 5/16"=1pc 	2 Bolt 5/16"*2"=2pcs 	3 Bolt 5/16"*1"=8pcs 
4 Bolt 5/16"*4"=4pcs 	5 Bolt 1/4x15MM=6pcs 	6 Flat Washer 5/16"*19mm=16pcs 
7 Nut=6pcs 	8 Wrench=1pc 	9 Allen Key 1/4"=1pc 
10 Drawer connector =4pcs 		

STEP 1: Turn the 2 Armrest (partⒶ & partⒷ) over and screw in the Armrest legs (partⒸ) for this step you will need 4 partⒸ

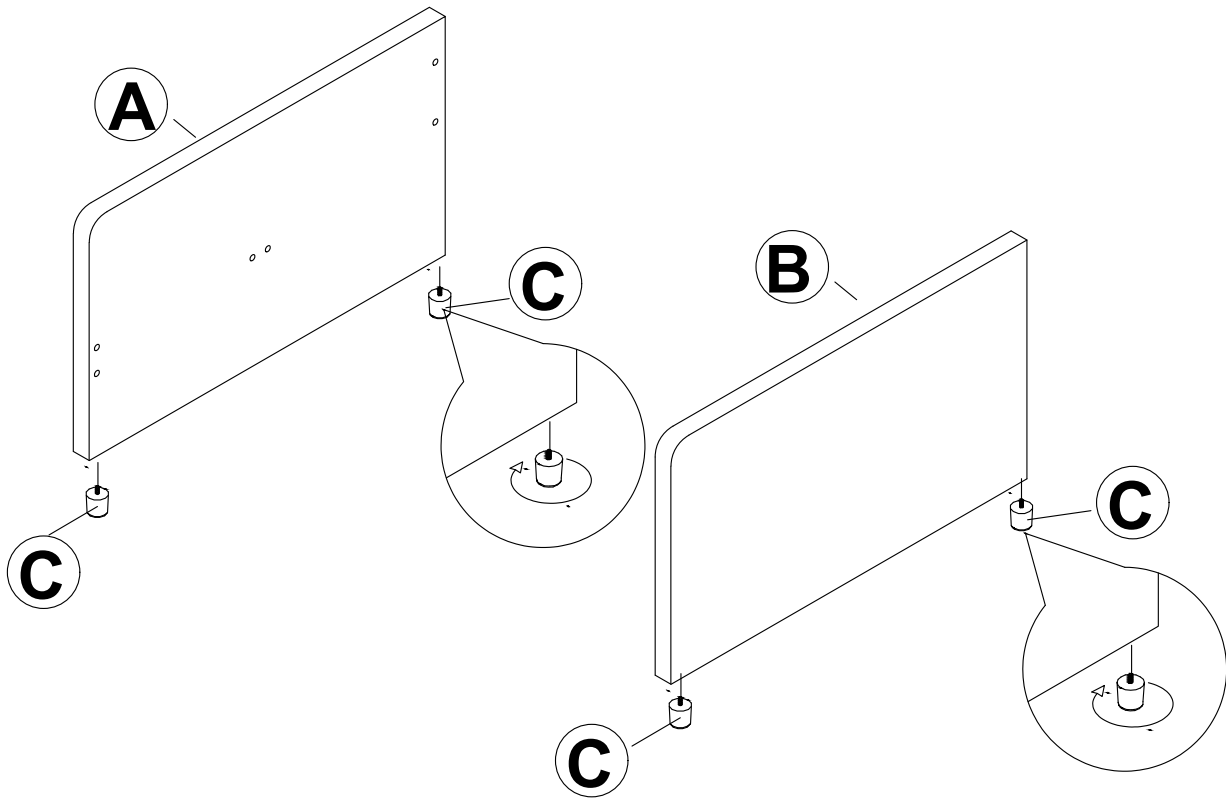


Ⓒ x 4PCS

STEP 2: Screw the bolts on the left Armrest and right Armrest, you will need 4 part④

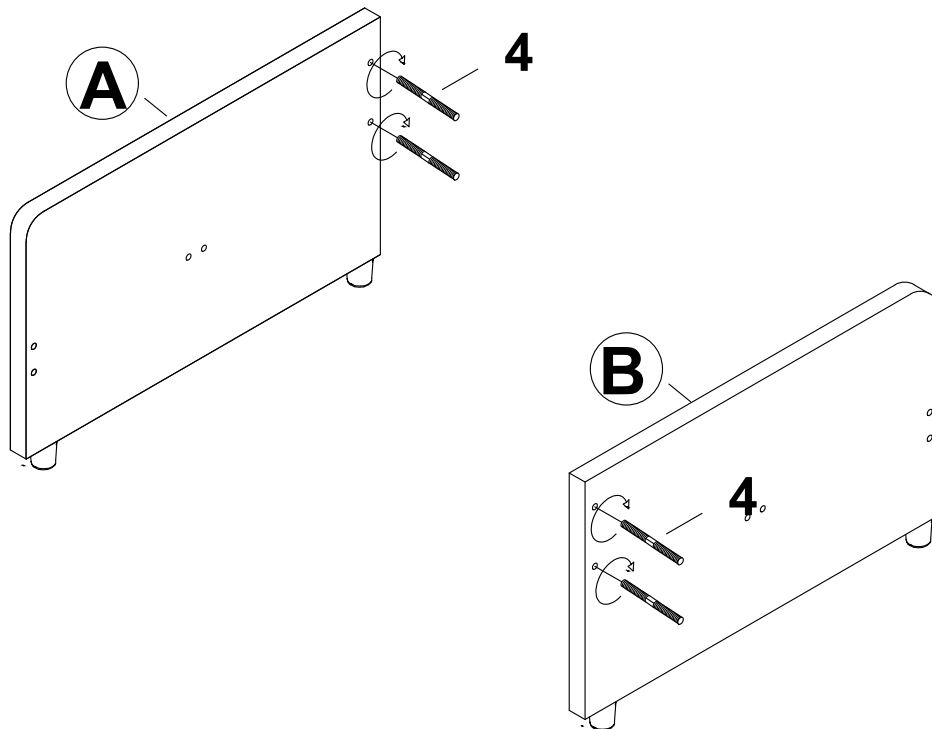




④ x 4PCS

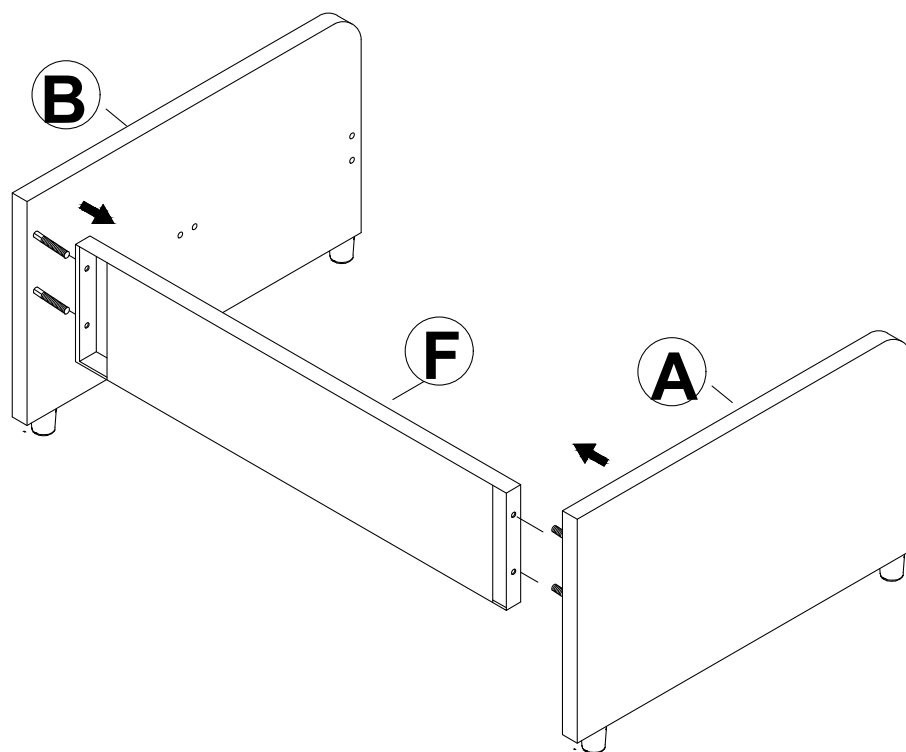STEP 3: Install the backrest unzip the cover at the back of backrest, than the bolts go through the wholes on the backrest




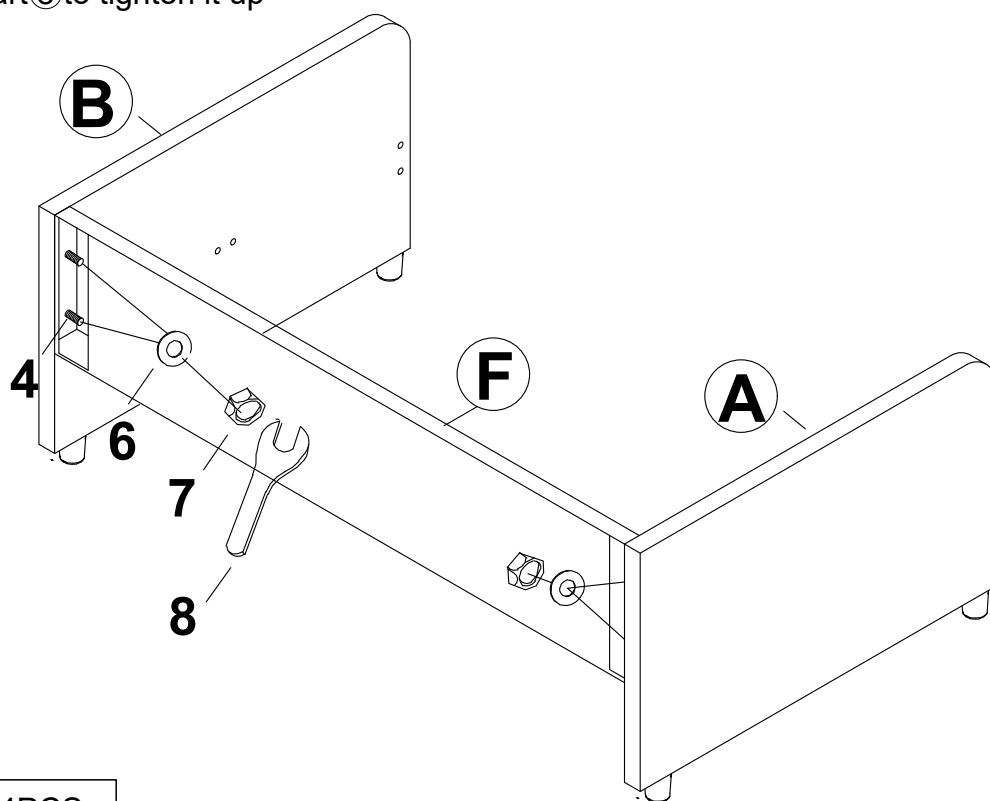

STEP 4: In this step, you will need 4 part ⑥ and 4 part ⑦, washer go firstly, than nut, use the wrench part ⑧ to tighten it up




	⑥x 4PCS
	⑦x 4PCS

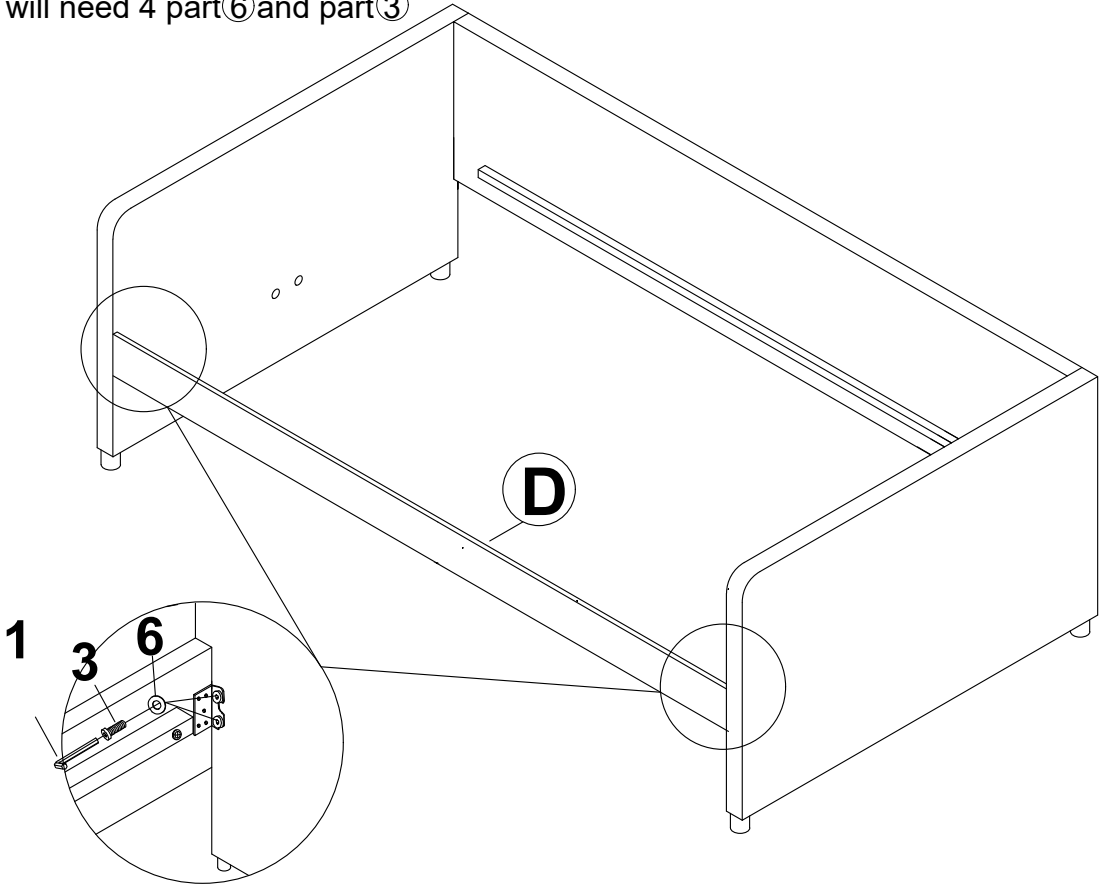

STEP 5: Lock in your siderail part④, make sure the inside of the siderail is facing inside, for this step you will need 4 part⑥and part③




	⑥x 4PCS
	③x 4PCS

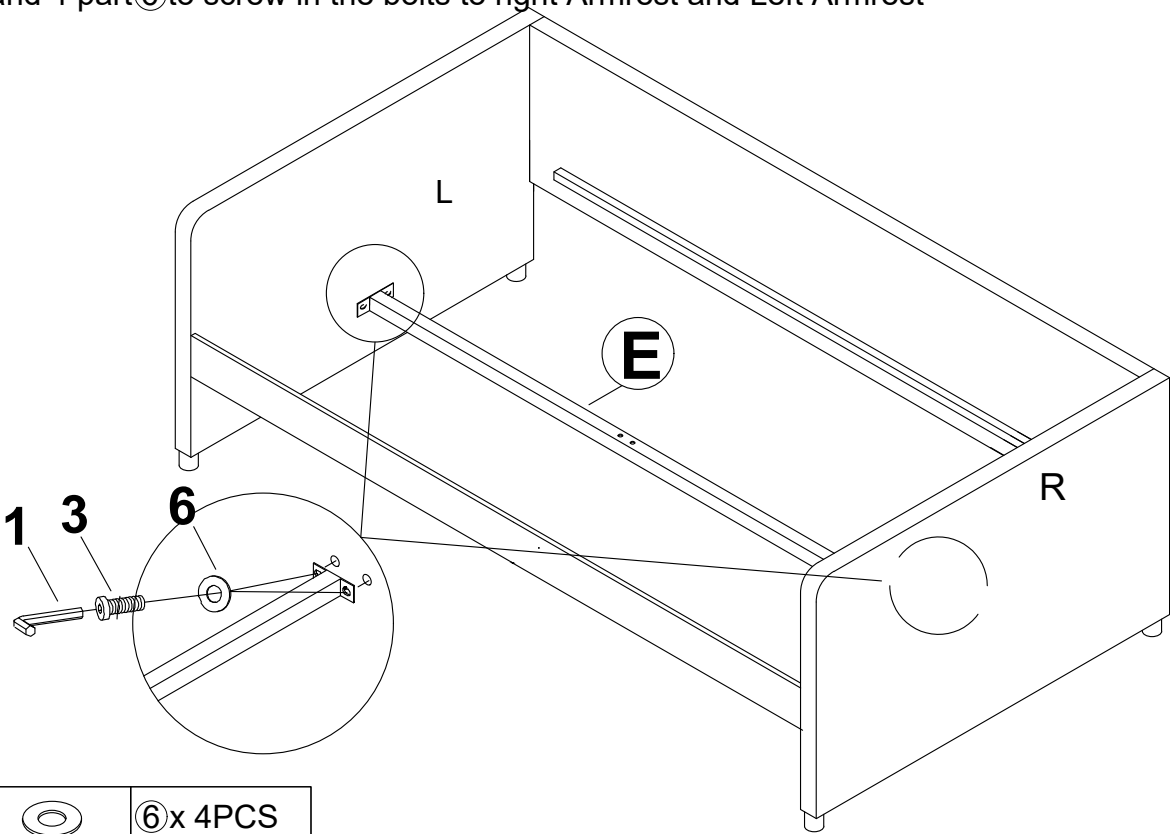


STEP 6: Take the support bar (part⑤) and lay it in the middle of the bed using 4 part③ and 4 part⑥to screw in the bolts to right Armrest and Left Armrest




	⑥x 4PCS
	③x 4PCS

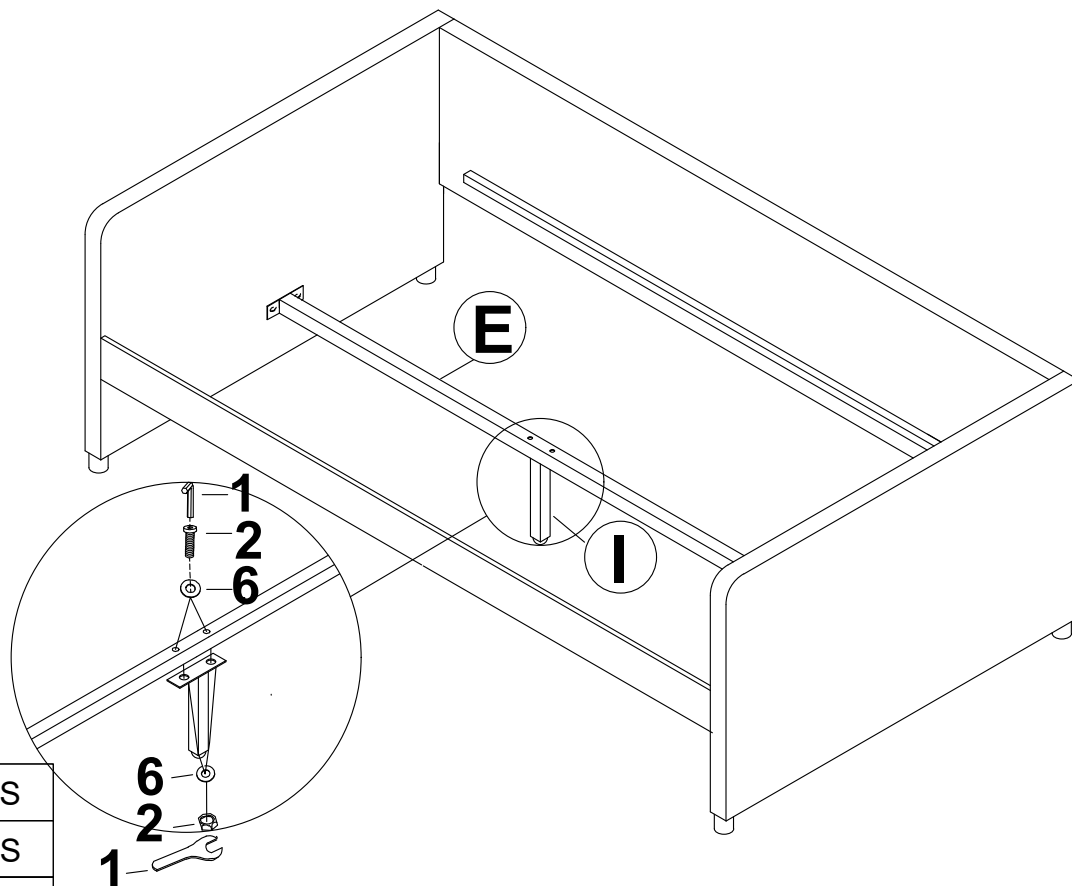STEP 7: Simply put the support leg below the support bar, use 2 bolts on the leg, on top (washer first then bolt) and use a nut on the bottom, hold on to the bolt and use an Allen key to tighten it up.




	⑥x 4PCS
	②x 2PCS
	⑦x 2PCS


STEP 8: Simply lay the slats on the side of siderails (on the inside) you can roll them out, and the velcro will stick right on (part ⑥)

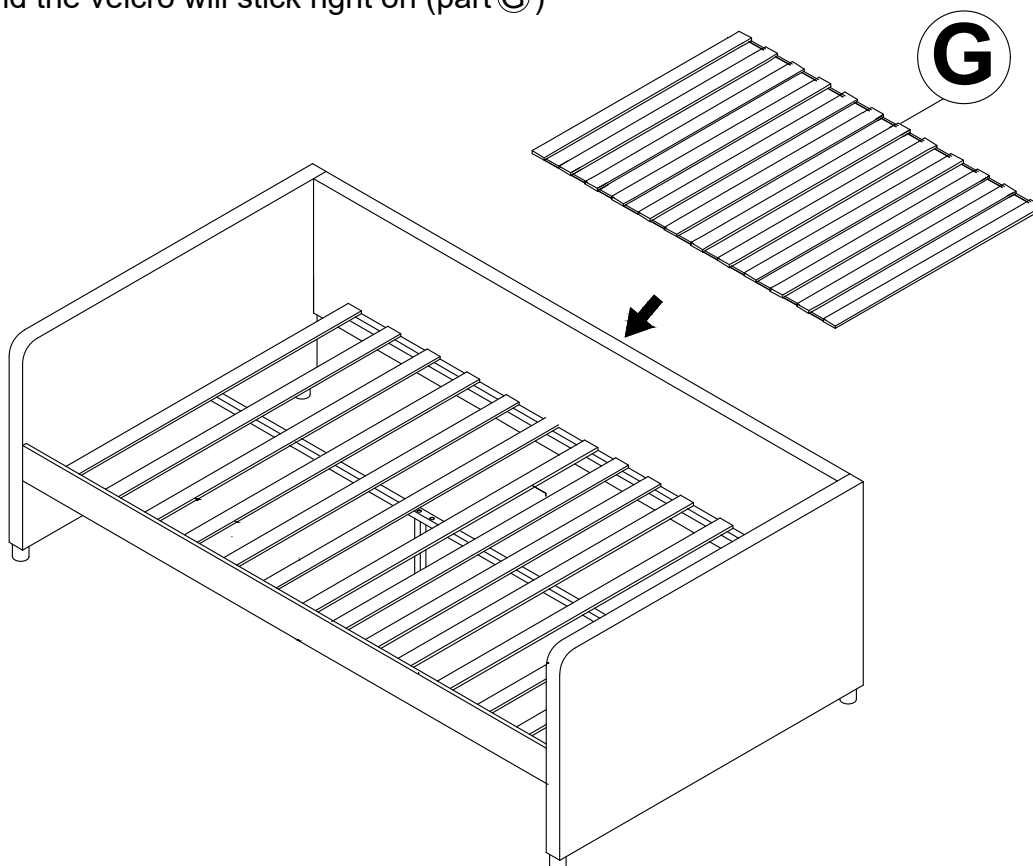

STEP 9

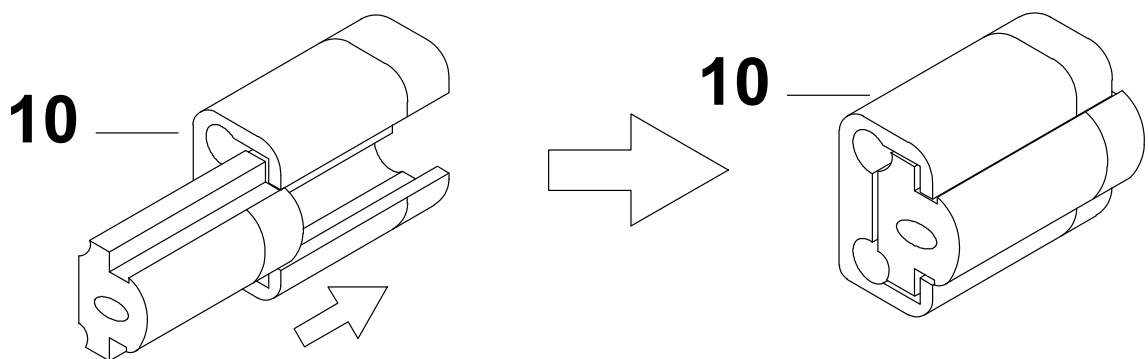


Follow the diagram, This is the only direction that can be locked

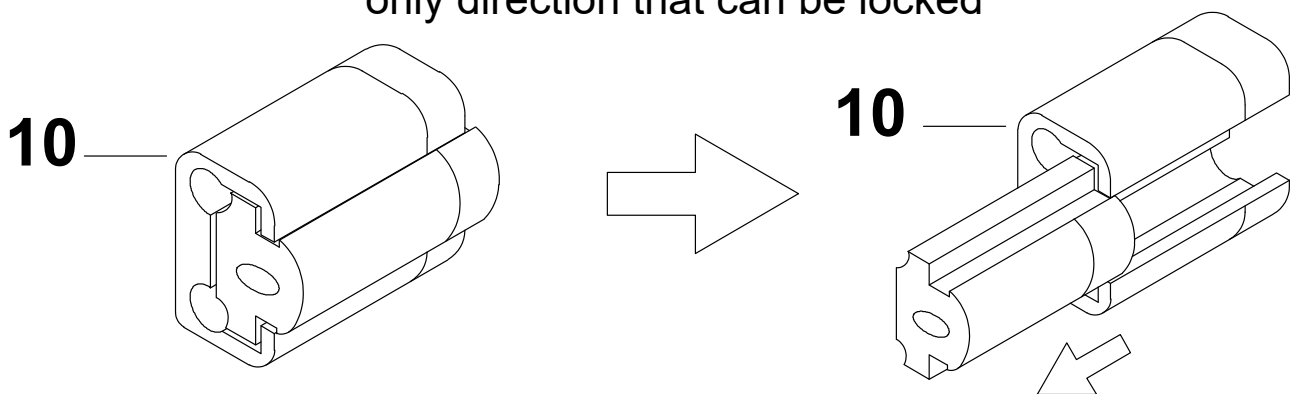


You can pull the buckle out by following the direction indicated by the arrow

STEP 10: Pull up the 3 sides of the drawer, please note there is 2 drawers need install

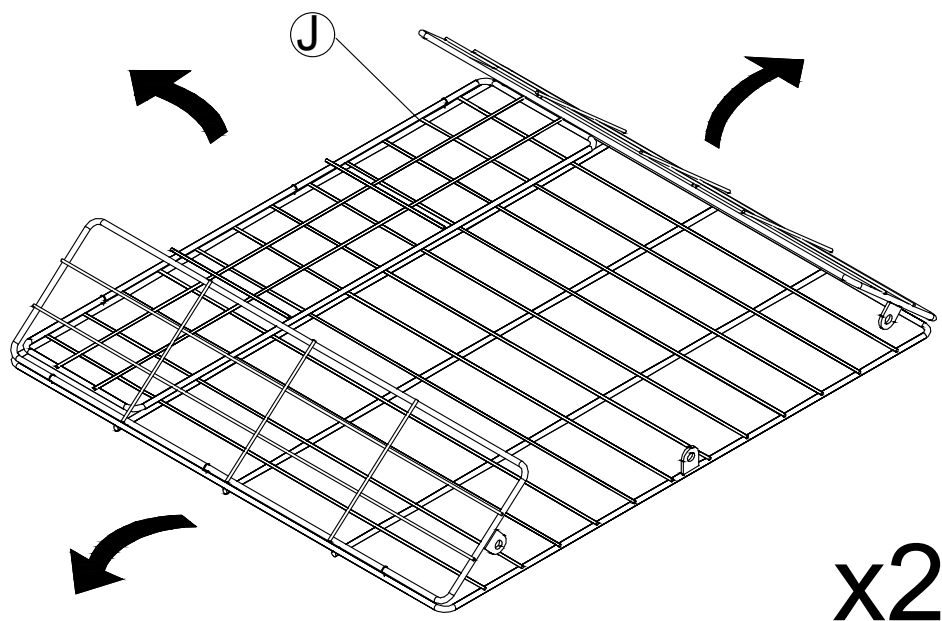


STEP 11: Lock it with plastic buckle part ⑩, each drawer need 2 buckles
Pull up the side and rearwall of the drawer and lock it with plastic buckle(10)

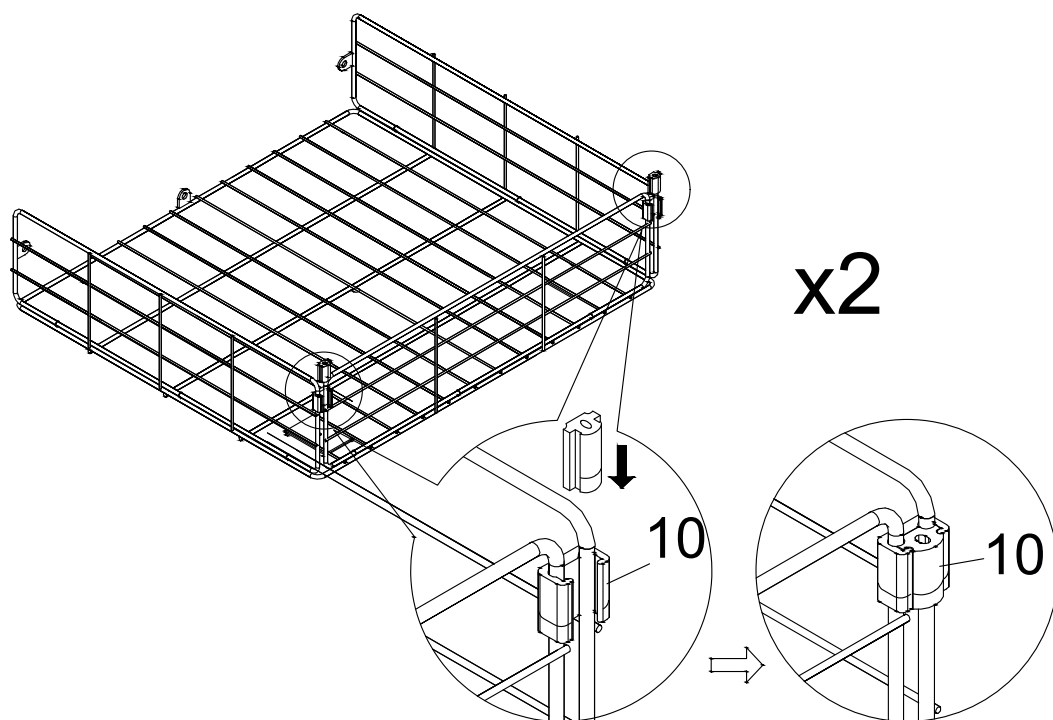

⑩ x 4PCS


STEP 12

Push the pulley to the side
At the same time, clamp the iron wire at the edge
It takes a little strength

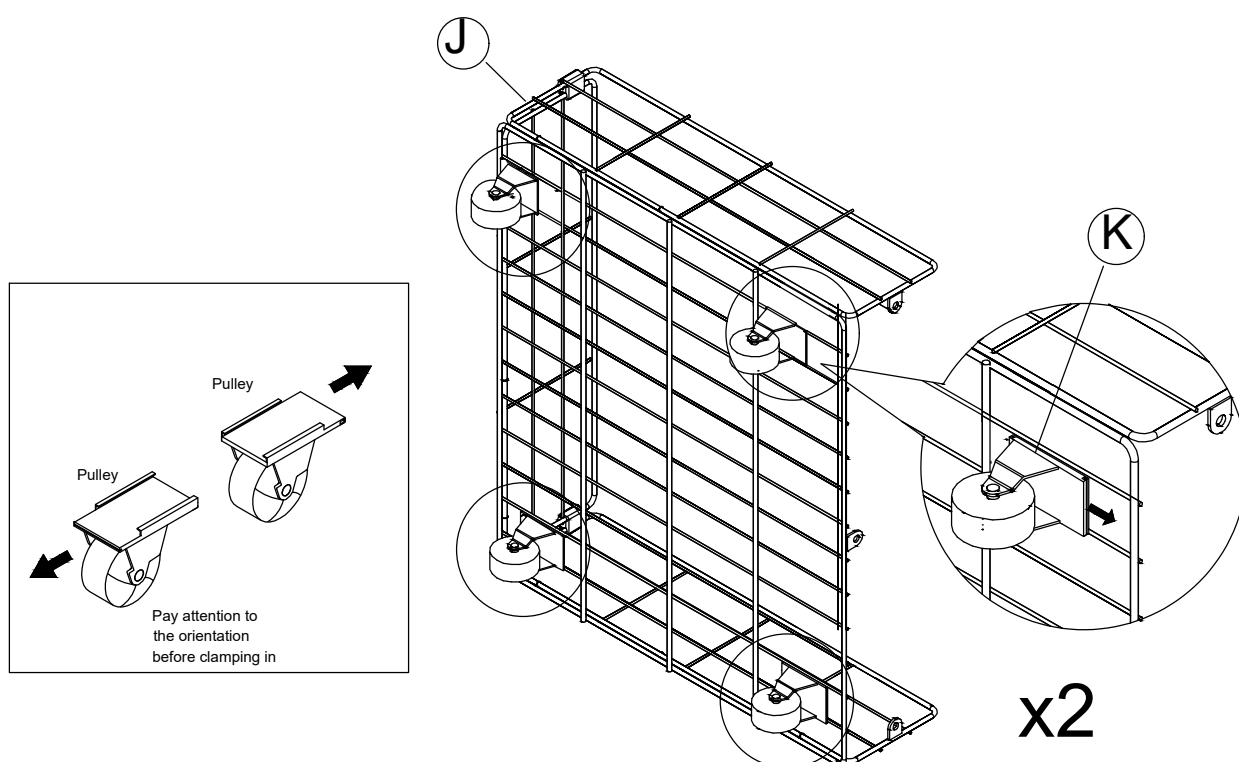

K x 8PCS

STEP 13: Attached the drawer panel to the mesh by use 3 part ⑤ and tighten it up by Allen key

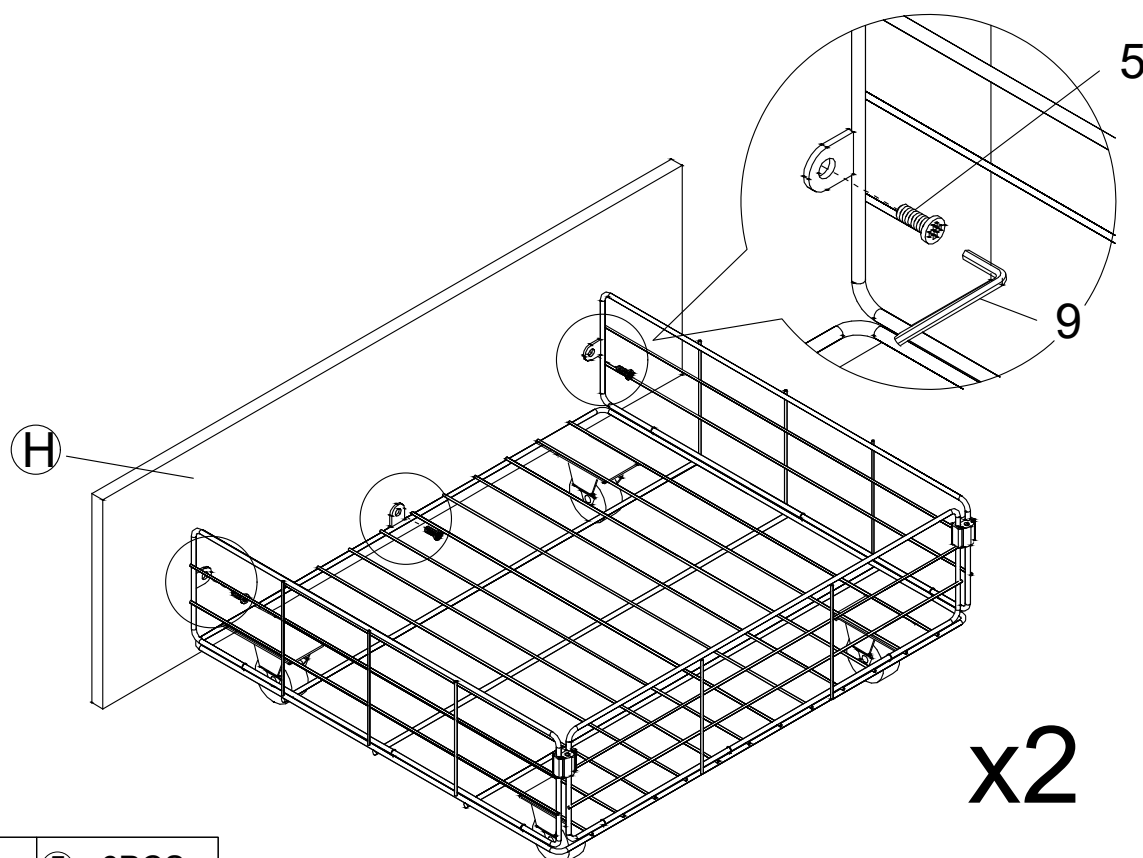

⑤ x 6PCS

STEP 14: Congralucation! you made it to the end ! Time to sleep like a baby and don't forget to leave as a positive review when you wake up !

