




317001013

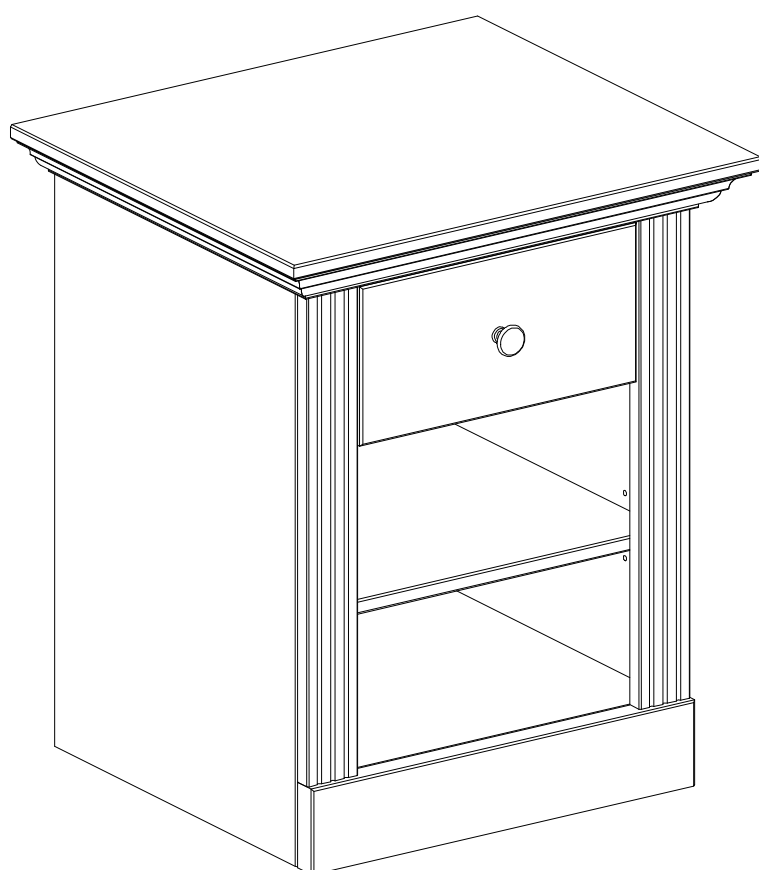








1.

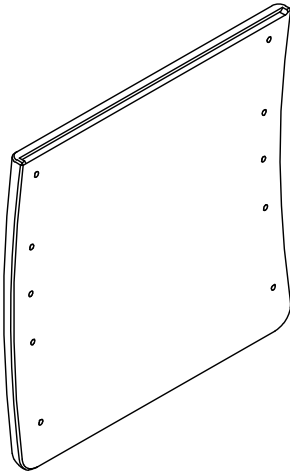








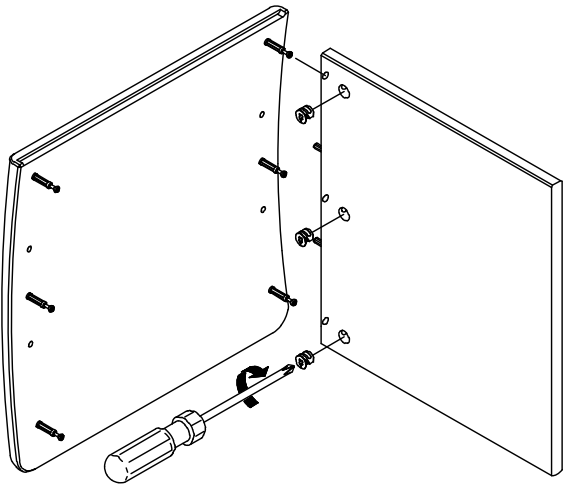









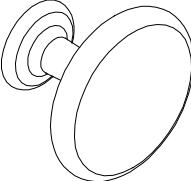
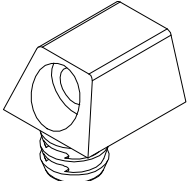
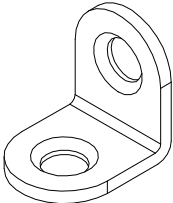
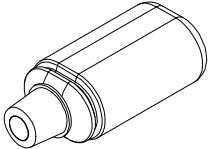
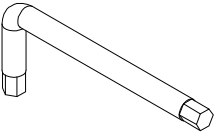
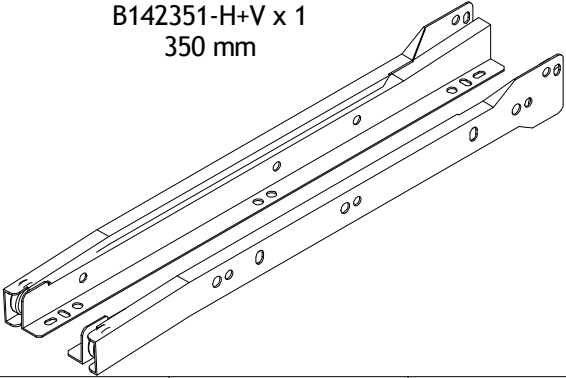

2.

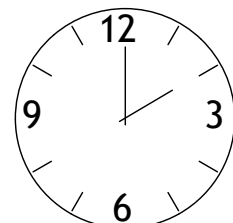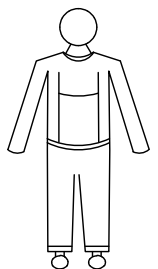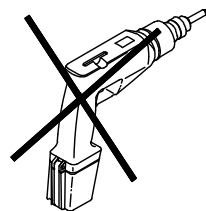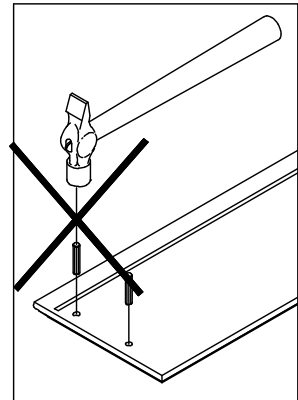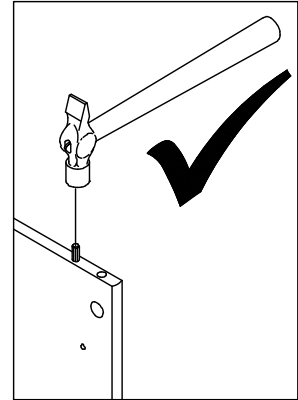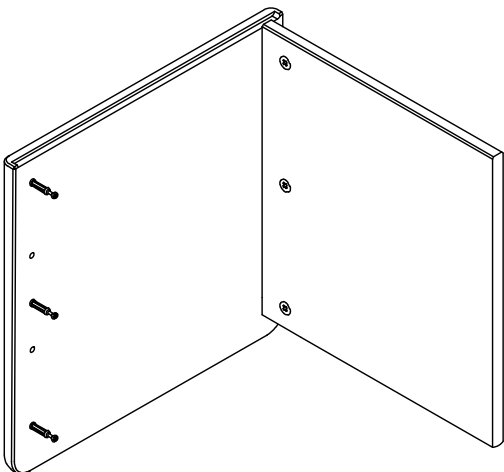

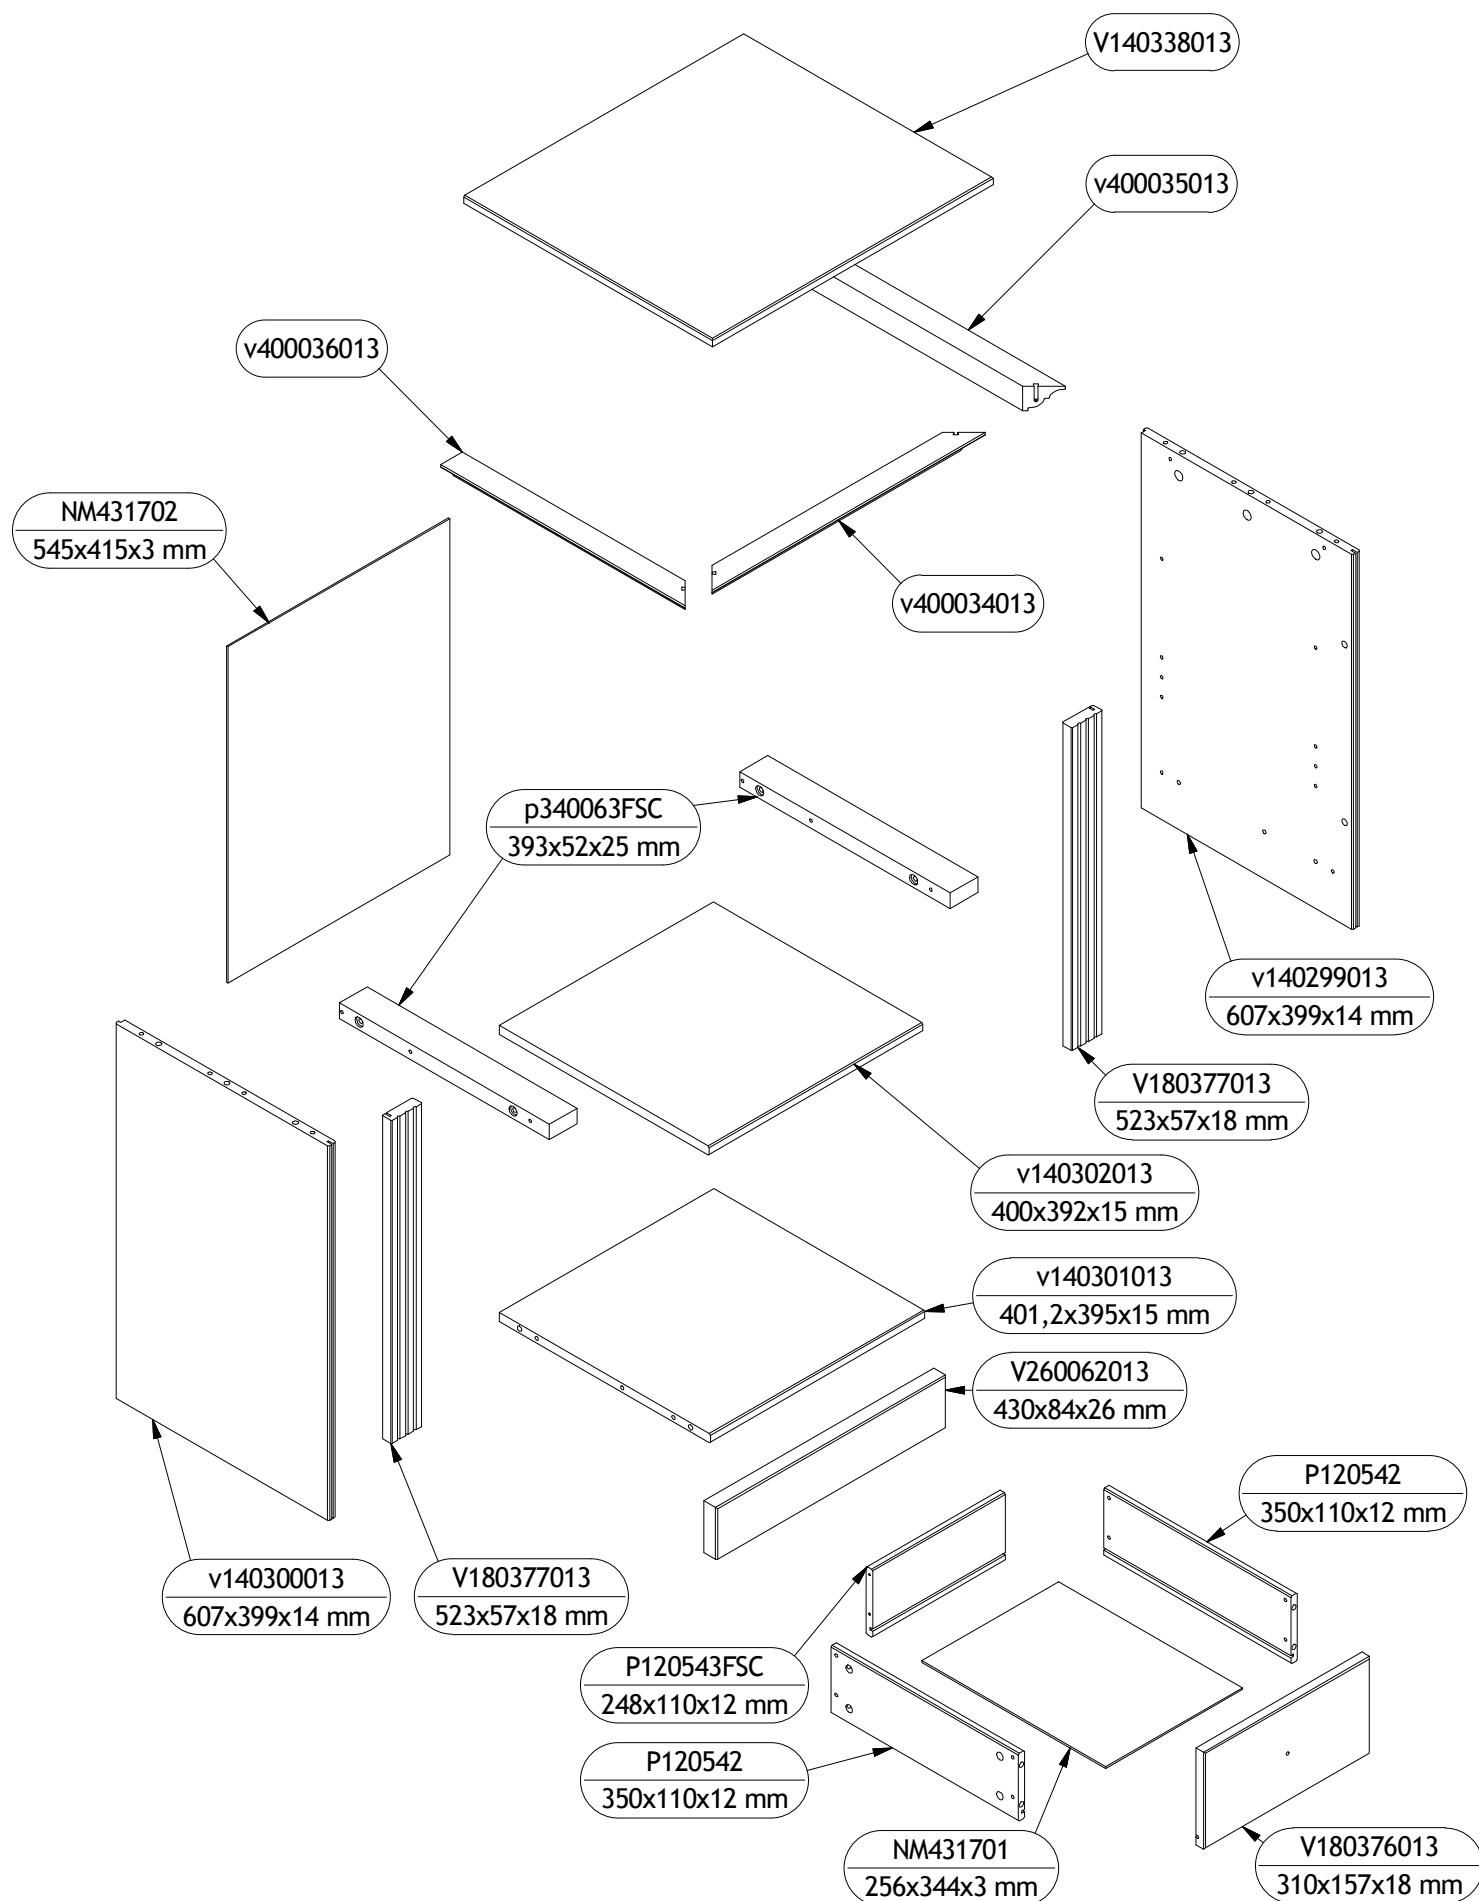
3.








<p>BA10400 x 14 ø6x30</p> 	<p>BA10602 x 14 ø5/8x34</p> 	<p>BA10590 x 10 ø15x9,5</p> 	<p>BA10596 x 4 ø12x9,5</p> 	<p>BA10020 x 25 ø1,2x16</p> 	<p>BA10250 x 5 6,3x11</p> 
<p>BA10103 x 4 ø3,0x12</p> 	<p>BA10050 x 5 ø3,5x15</p> 	<p>BA10110 x 4 ø3,5x25</p> 	<p>BA10045 x 4 ø3,5x35</p> 	<p>BA10144 x 6 ø4,5x30</p> 	<p>BA10221 x 1 M4x25</p> 
<p>BA10307 x 4 7x60</p> 	<p>BA10985 x 2 W-2 25,4 mm</p> 	<p>BA10981 x 6 3x16,5x80</p> 	<p>BA10848 x 4 ø5x7</p> 	<p>BA10501 x 1 ø30x23,5</p> 	<p>BA10336 x 6 22x12/ø11x10</p> 
<p>BA10801 x 3 20x20x16x2</p> 	<p>I10881 x 1</p> 	<p>BA10680 x 1 4 mm</p> 	<p>B142351-H+V x 1 350 mm</p> 		
<p>BA182002 x1</p> 					




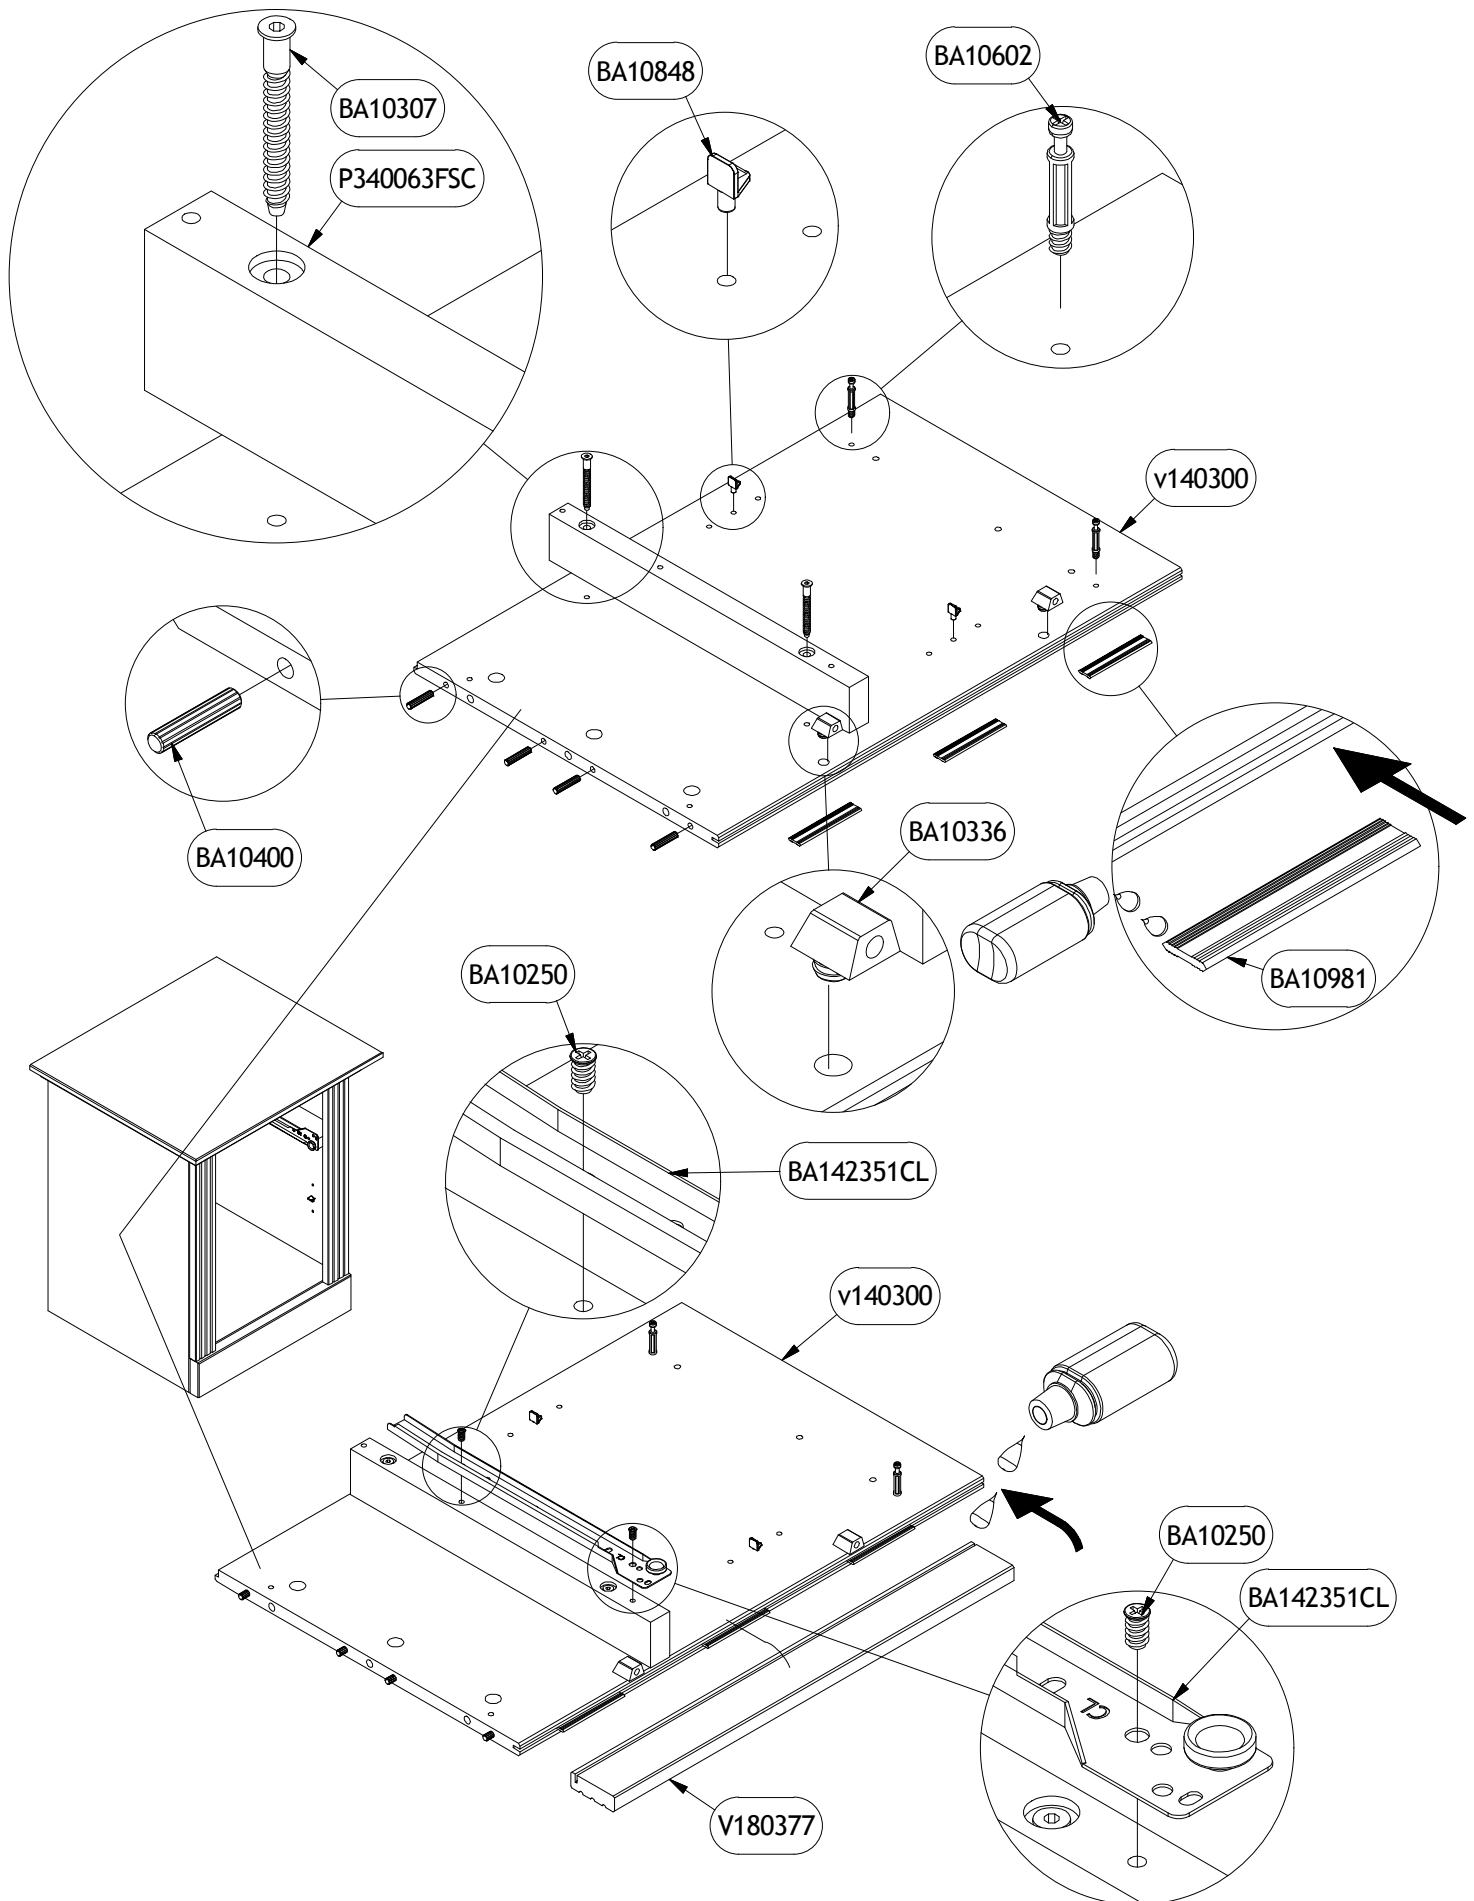



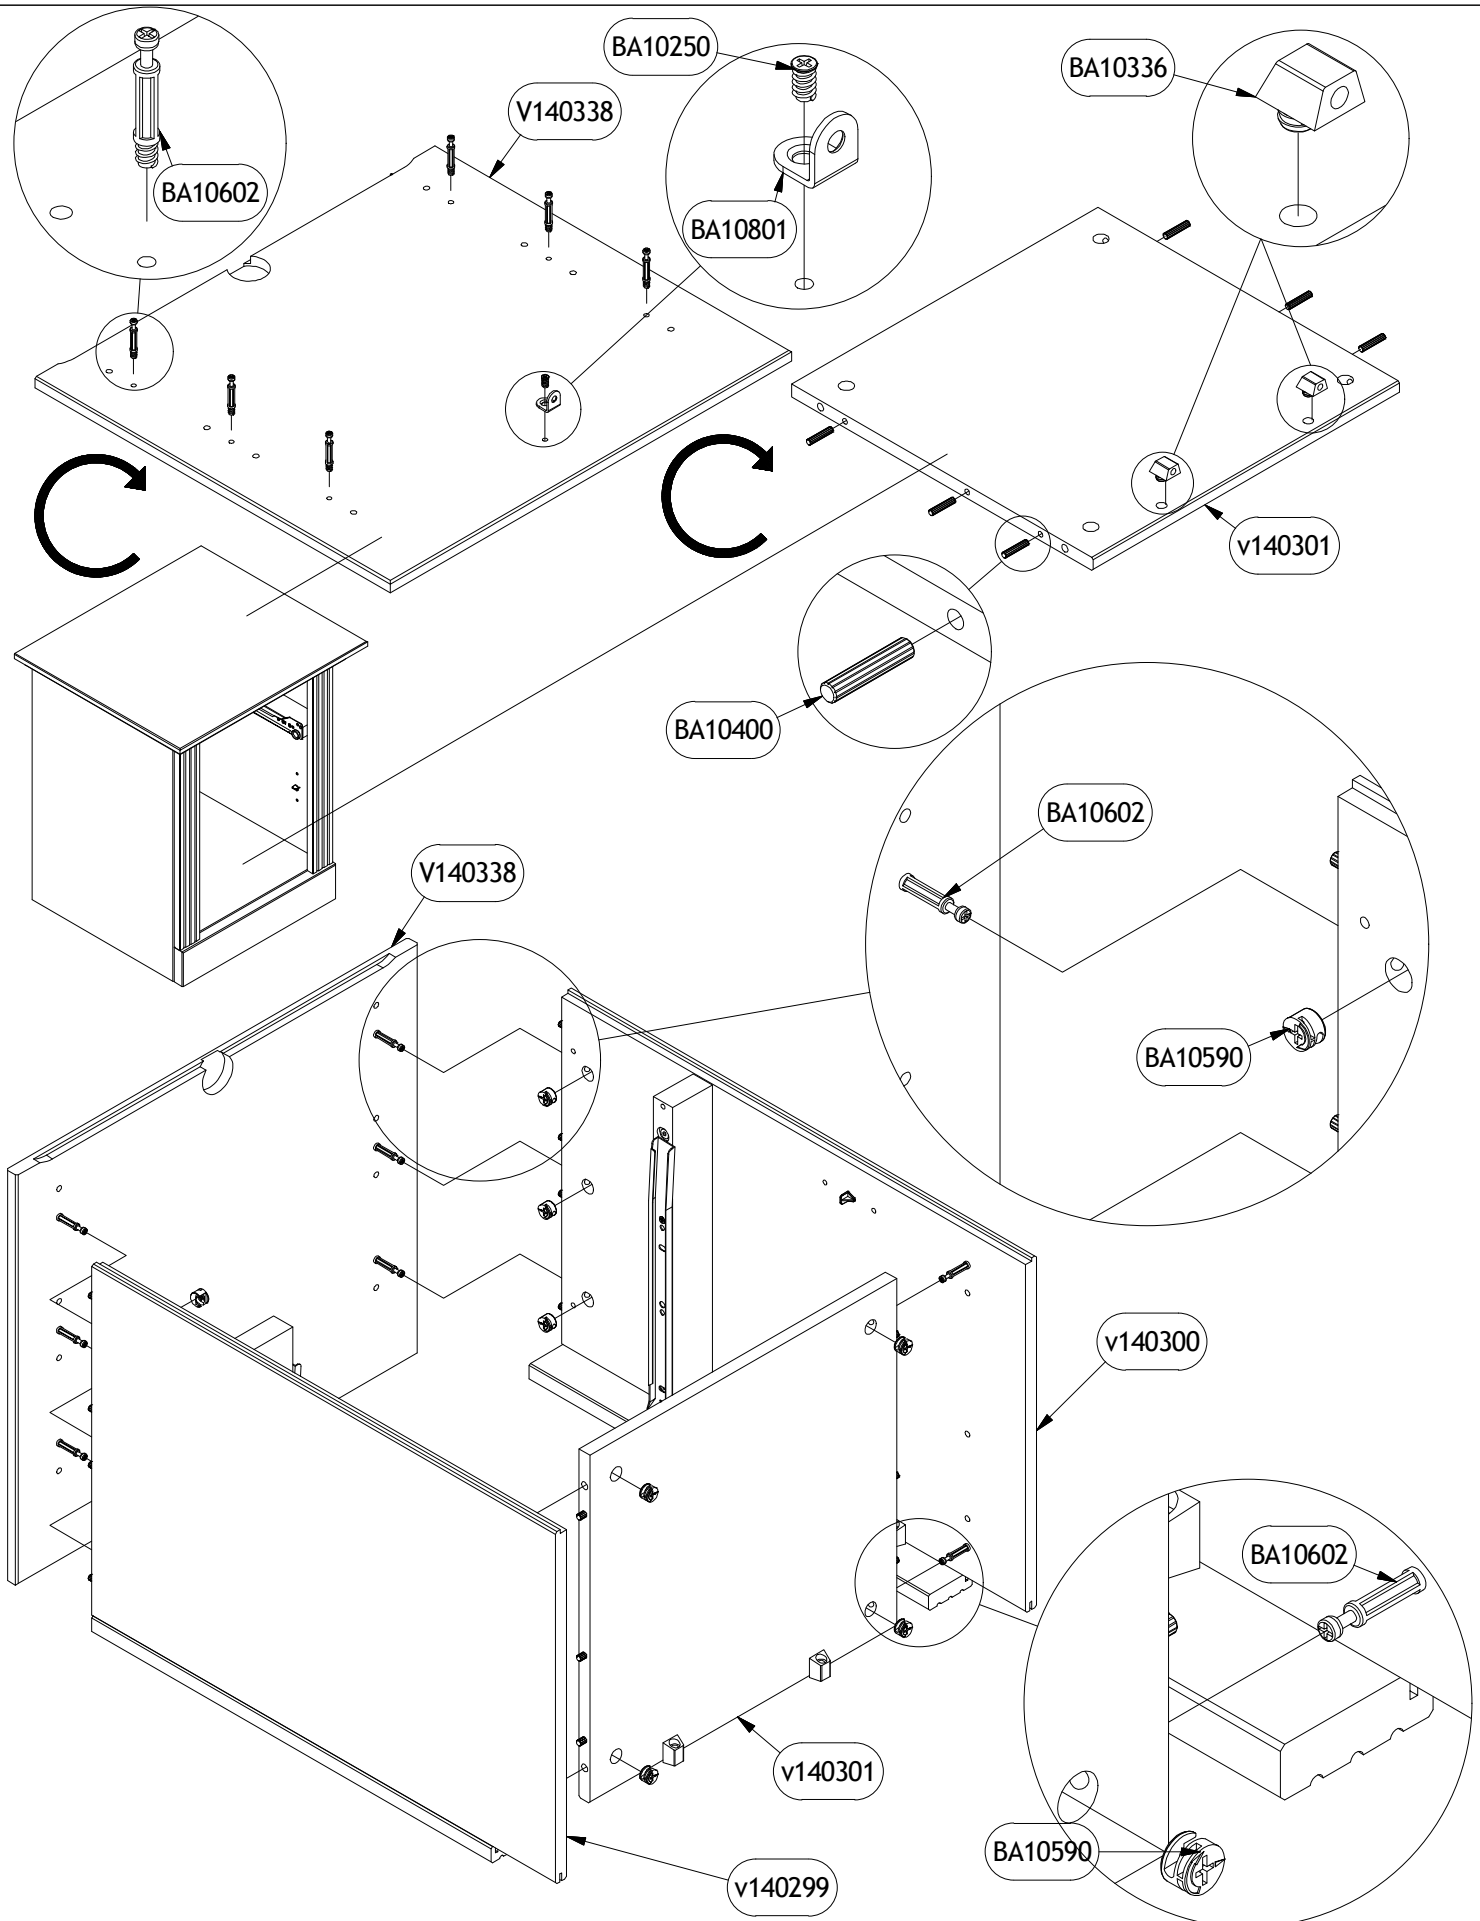


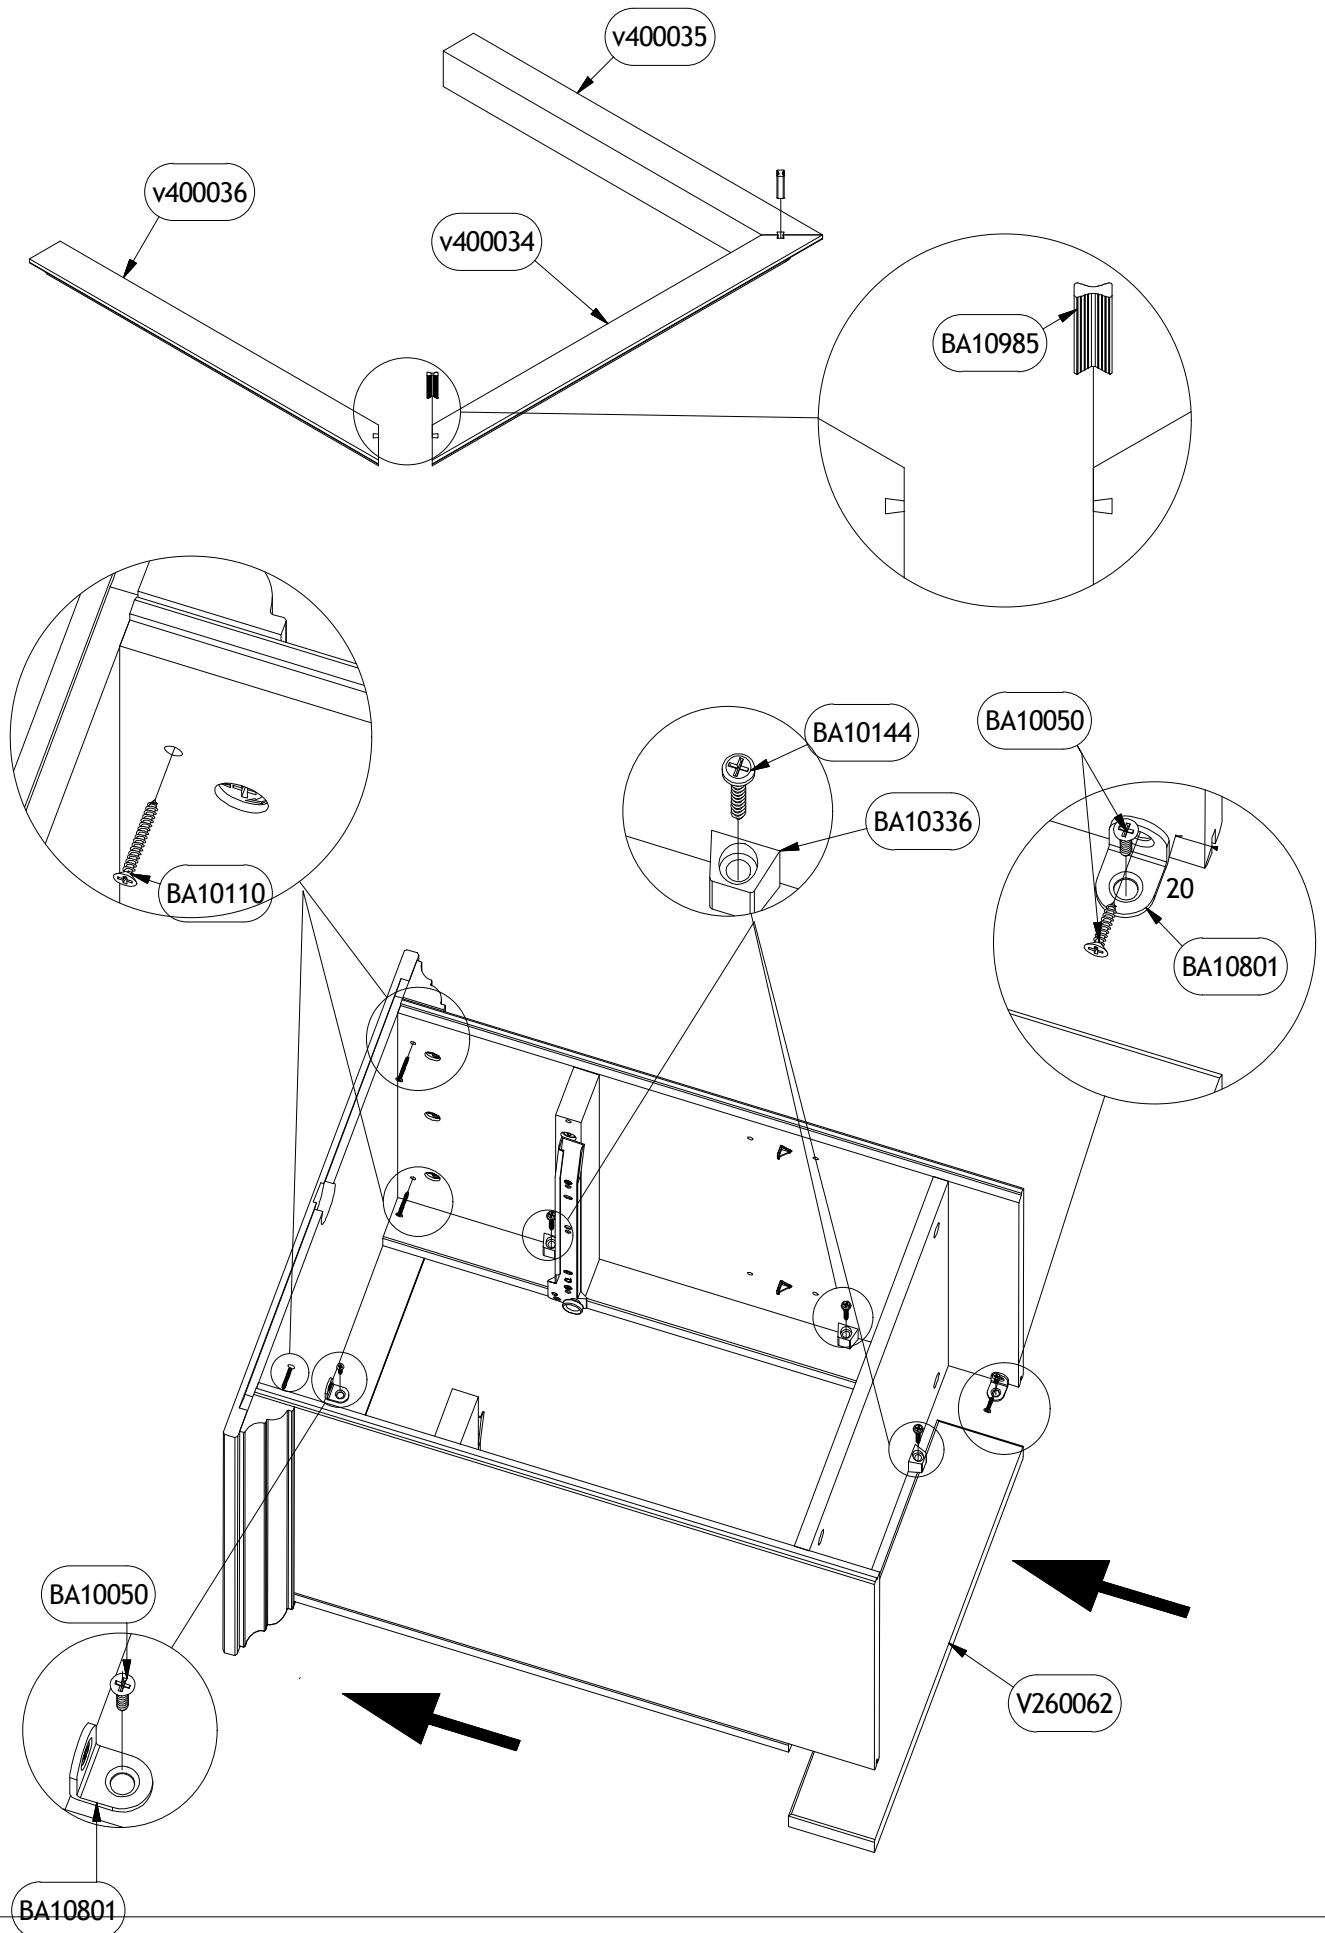


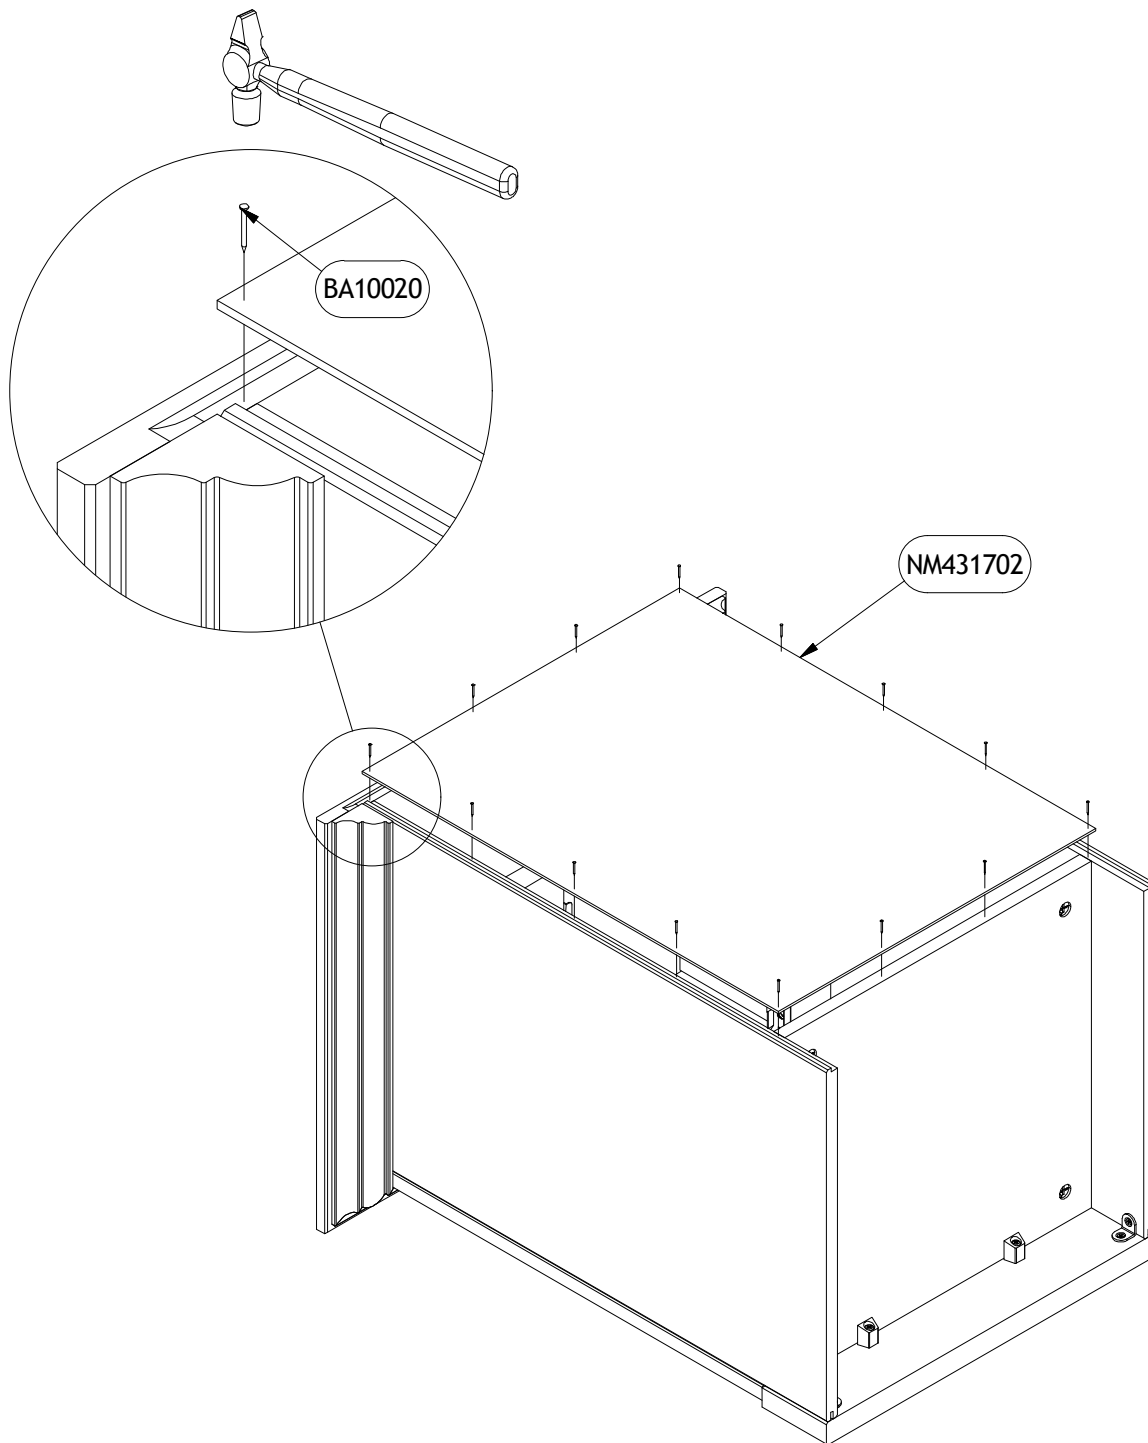


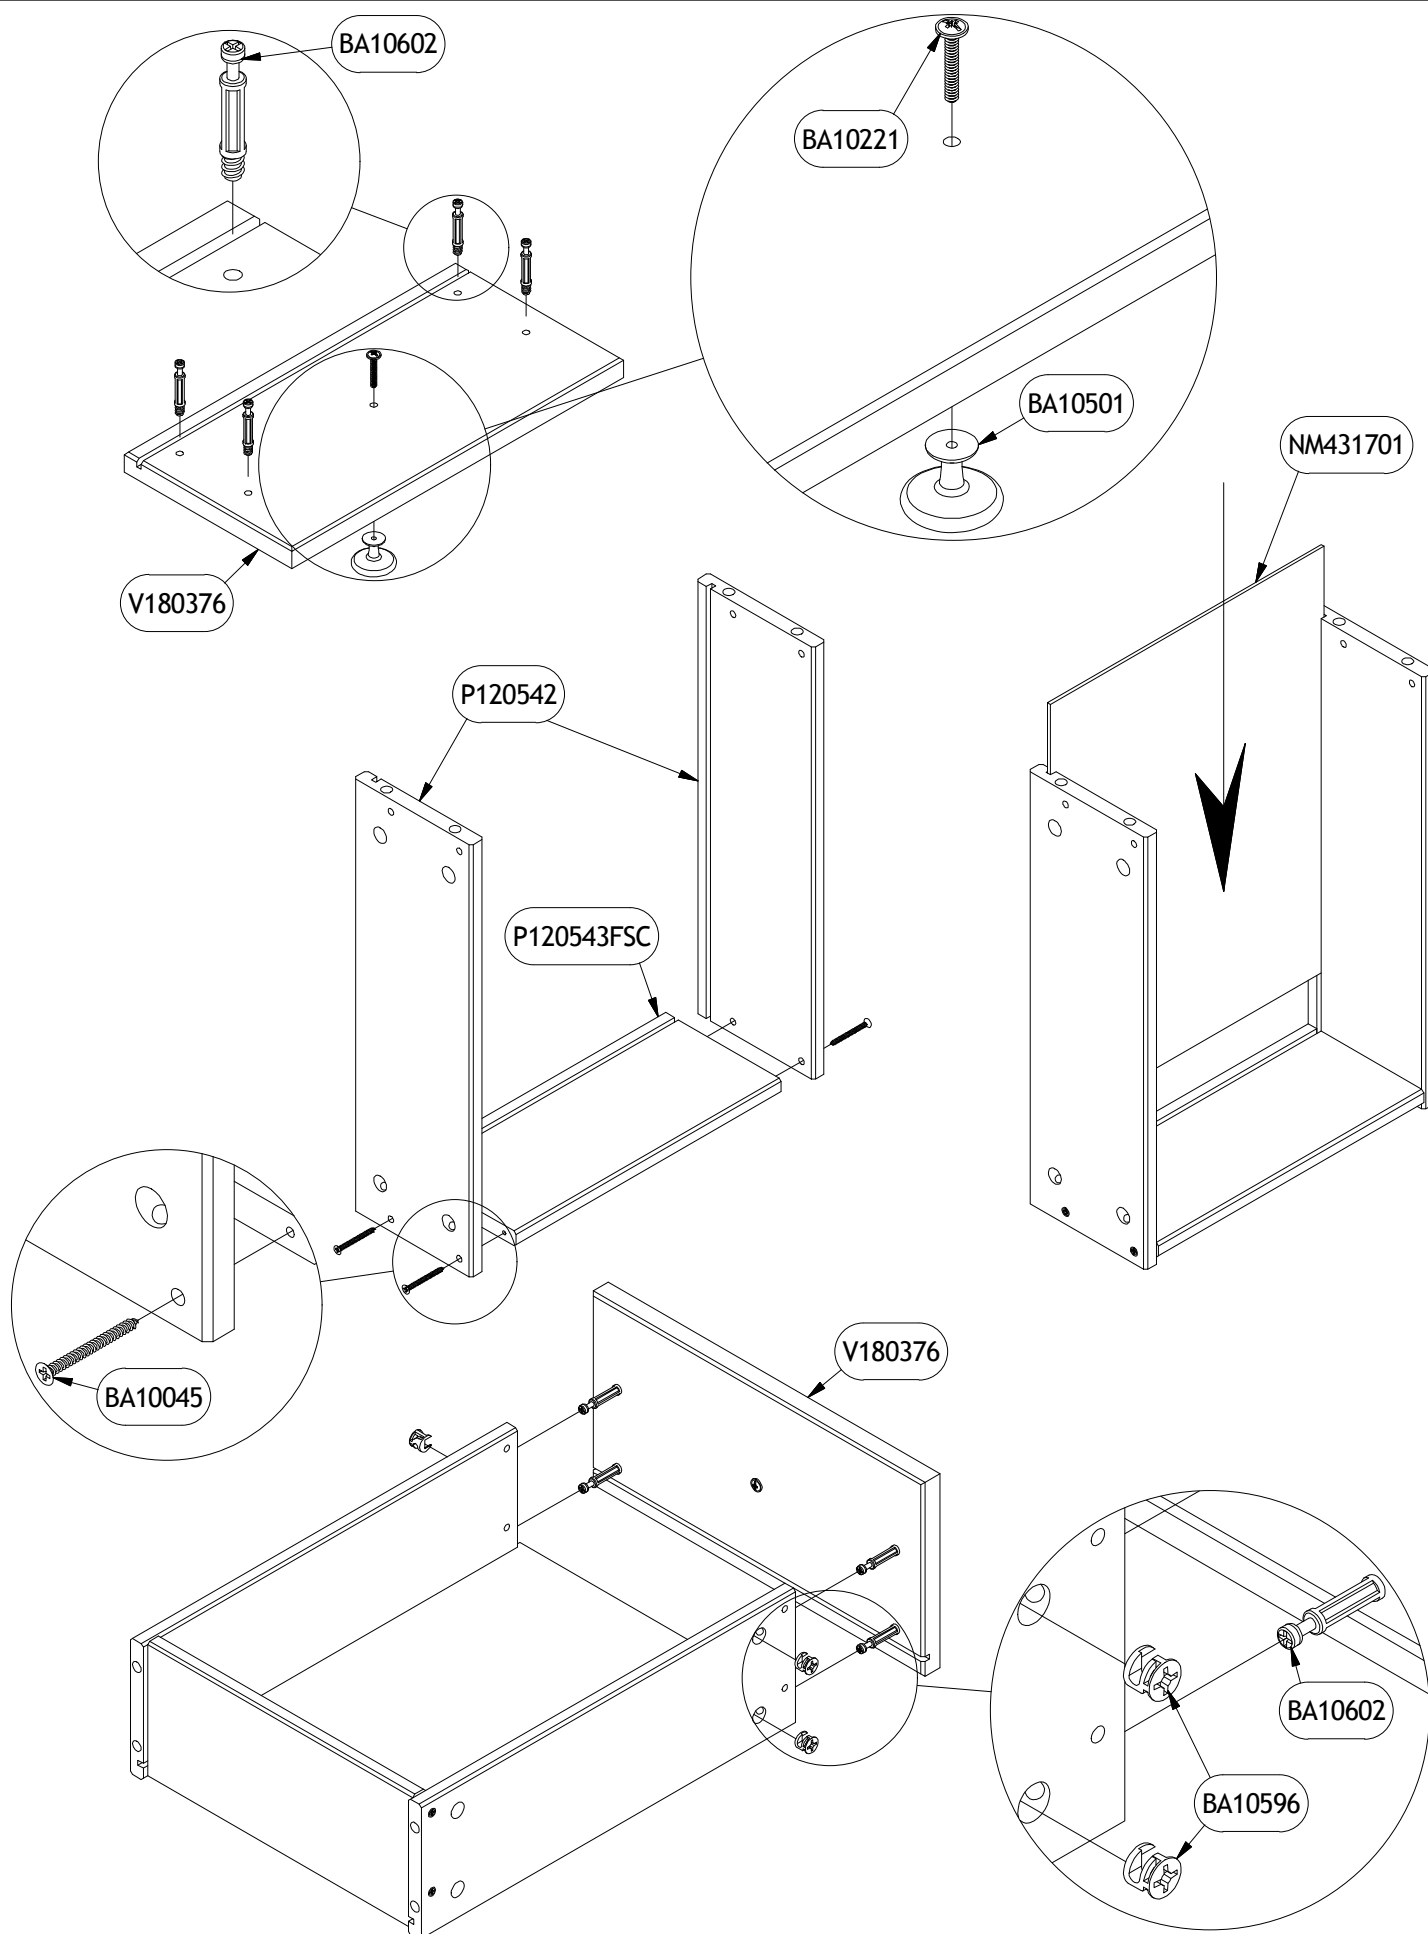




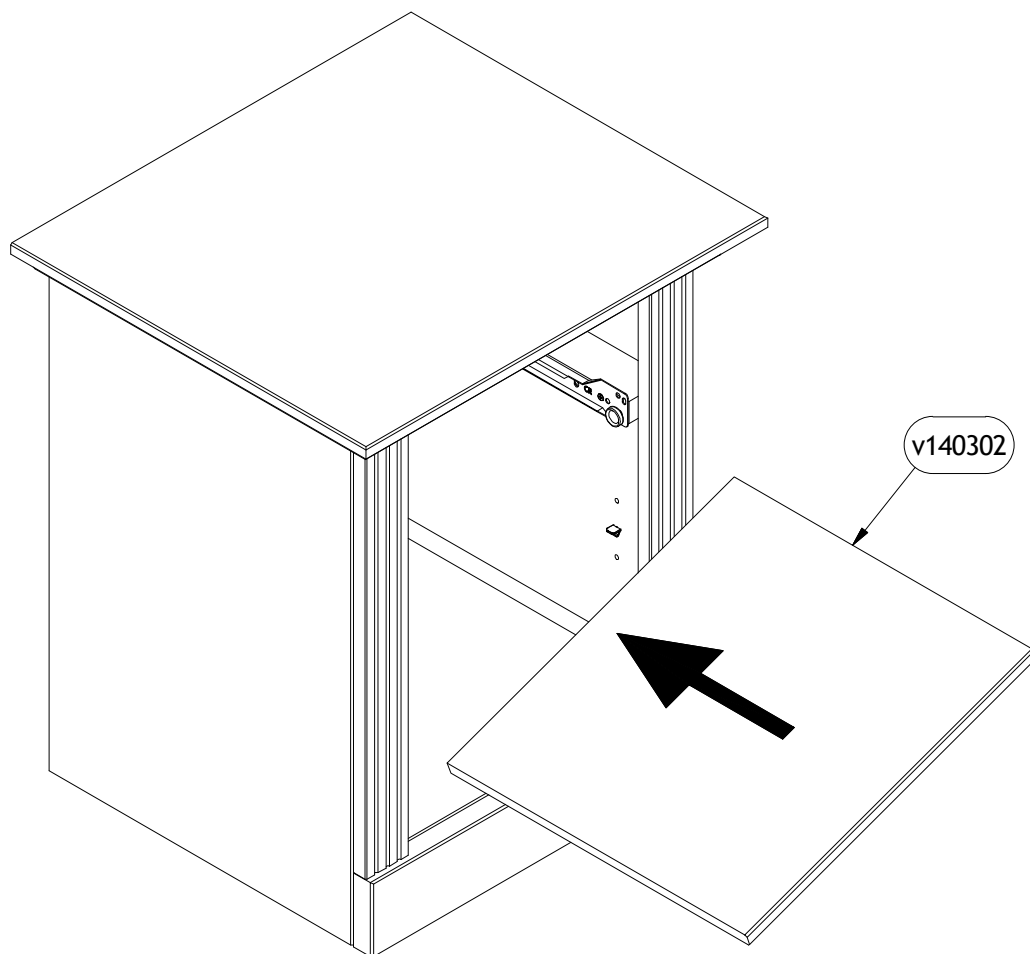


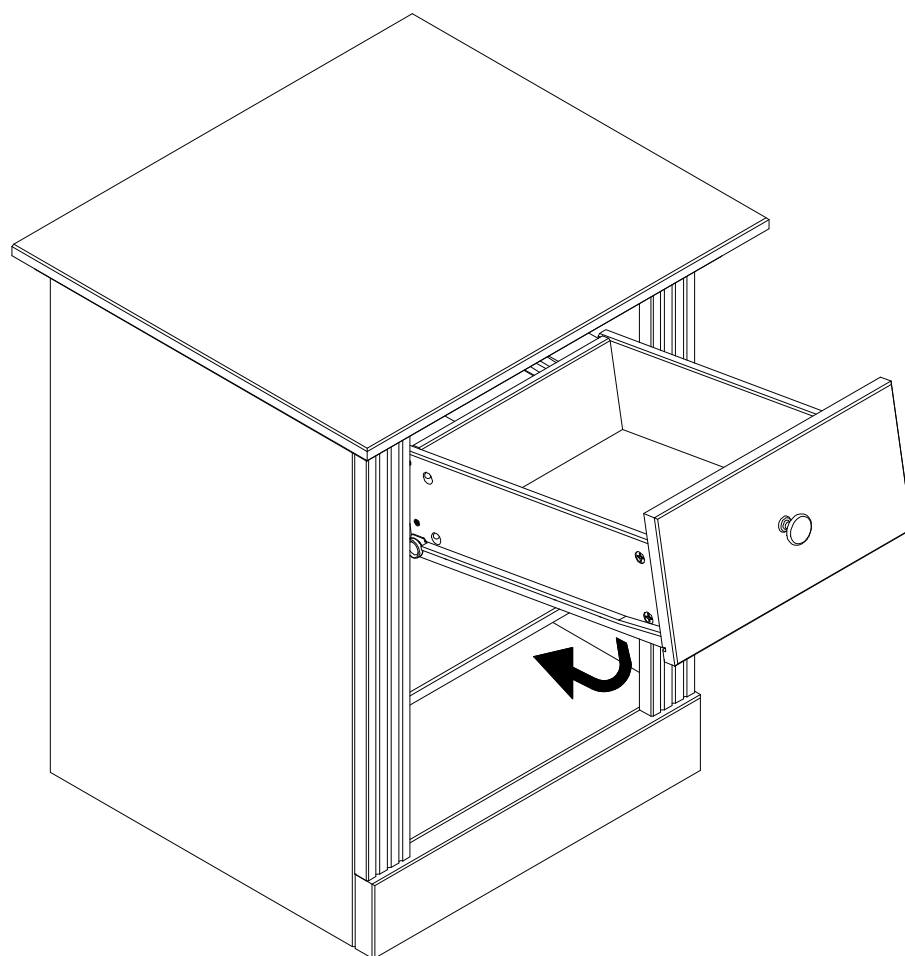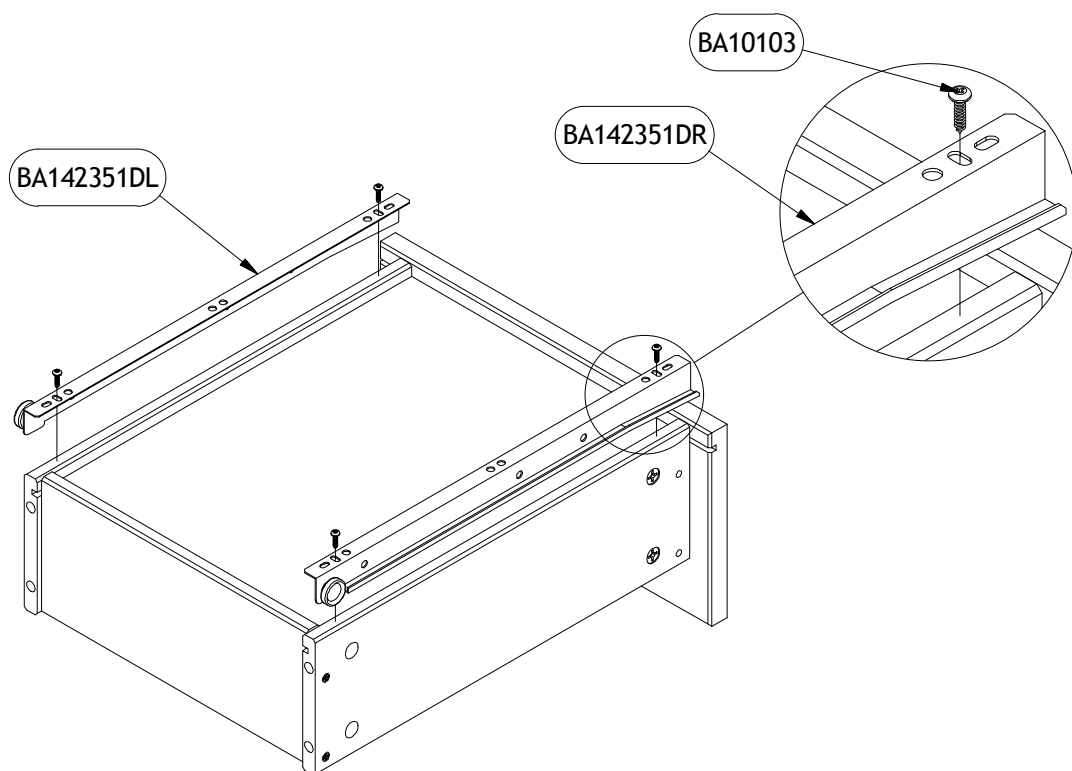

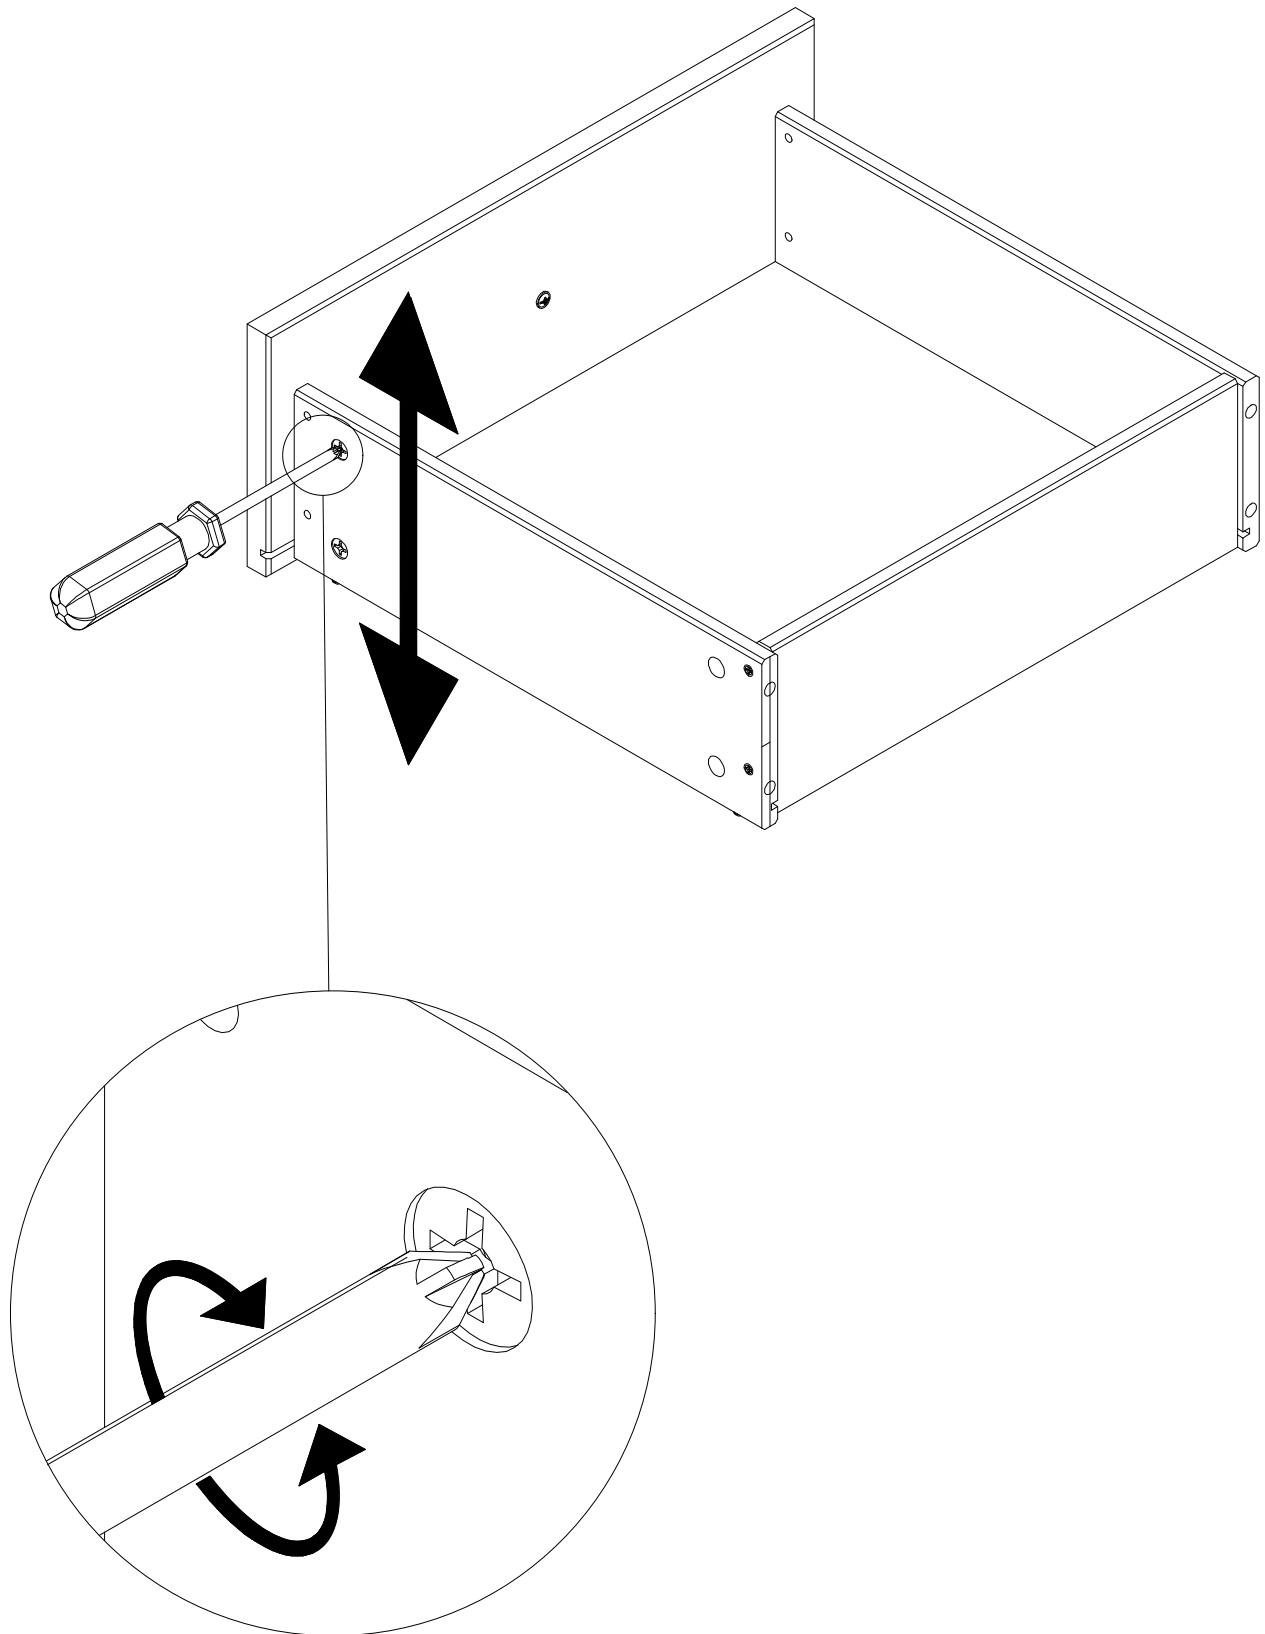


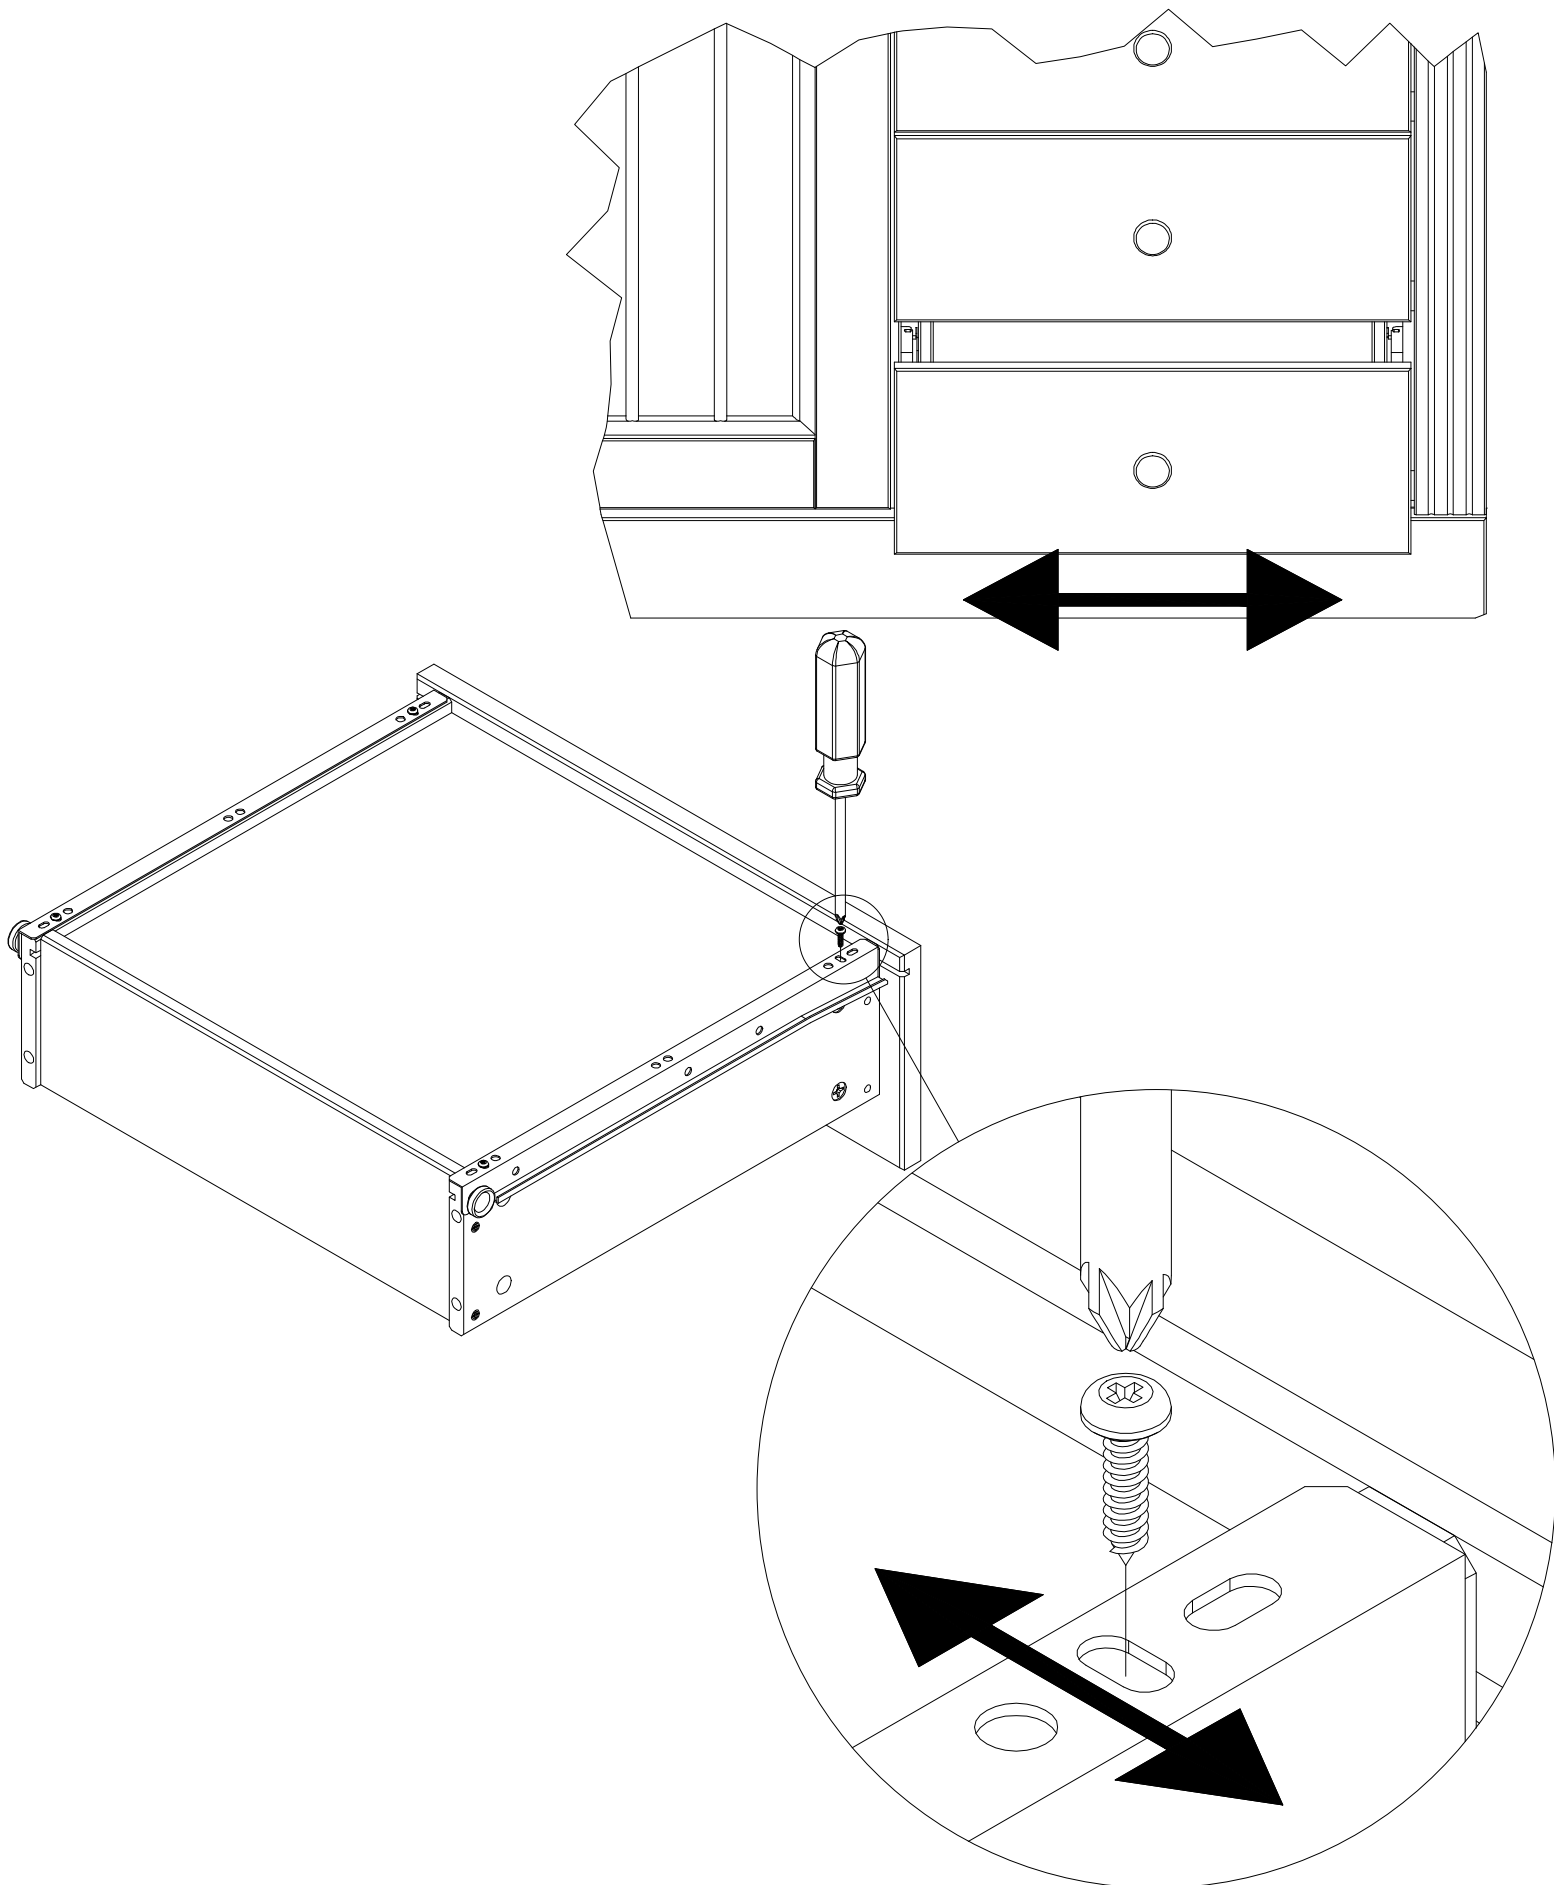

11

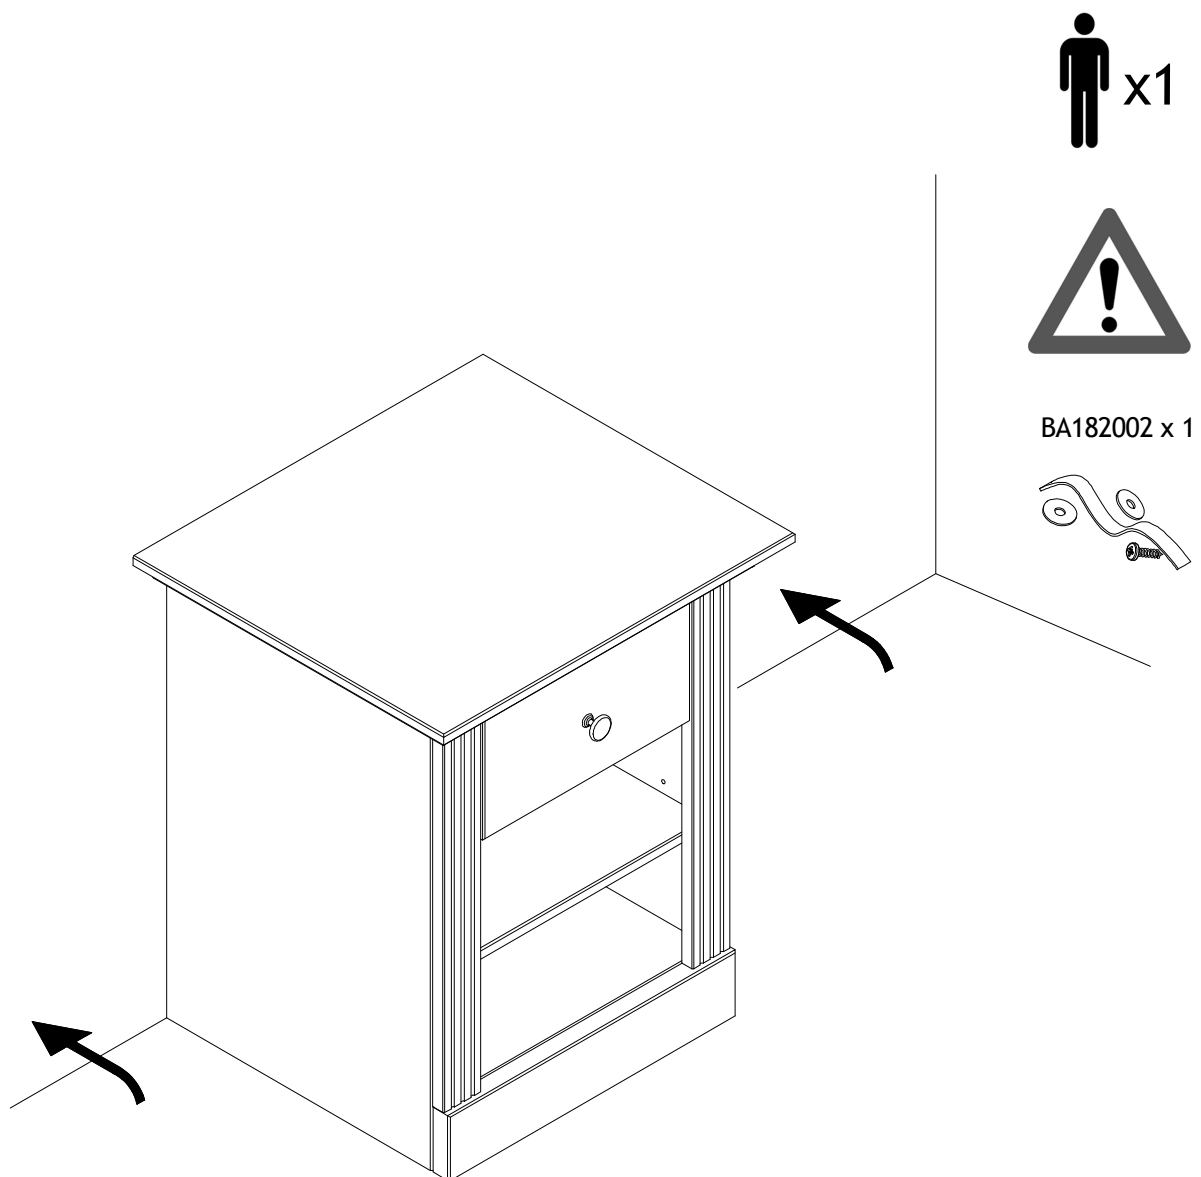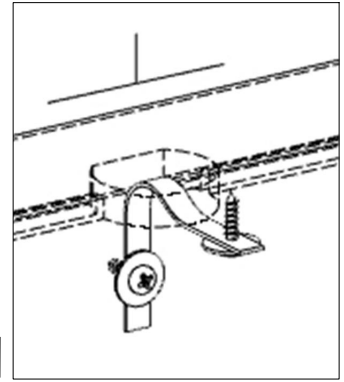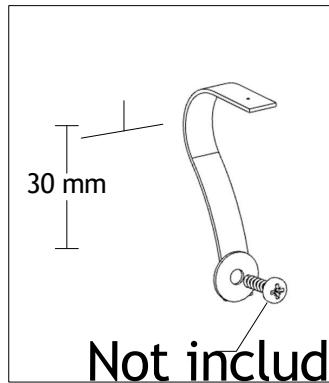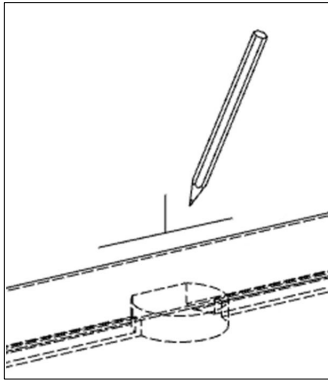


a Guide to Wall Mounting & Fixings

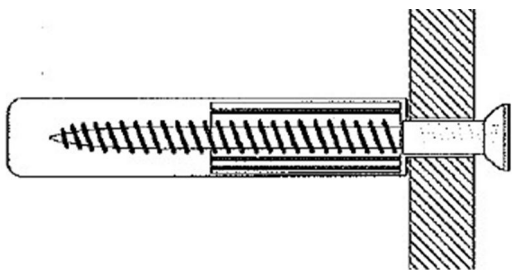

Important:

When drilling into walls always check that there are no hidden wires or pipes ect. Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


HINTS:

- 1) General Rule  Always use a larger screw and a wall plug if you are not sure.
- 2) Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3) Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4) Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure the plug is fitting below the ceramic tile to avoid splitting or cracking.
- 5) Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone, wood or plaster board.

No. 1 "Standard" Wall Plug General Wall Materials.

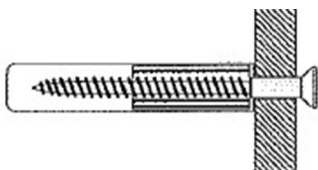


These come in various sizes and are made from plastic or sometimes wood fiber.

No. 2 "General Purpose" Wall Plug Aerated/Breeze Block.

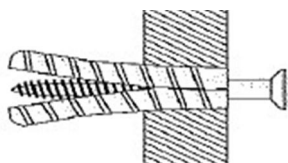


General aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, a General Purpose Plug can be used.

No. 3 "Shield Anchor" Wall Plug Heavy loads.

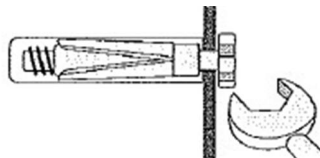


For use with heavier loads such as TV & HiFi Speakers and Satellite Dishes etc.

No. 4 "Cavity Fixing" Wall Plug.

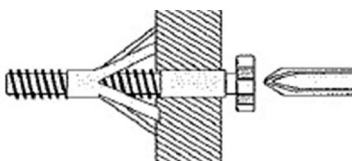


For use with plaster board partitions or hollow wooden doors.

No. 5 "Cavity Fixing Heavy Duty" Wall Plug.

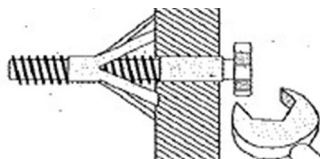

For use when fitting or supporting heavy loads such as shelving, wall cabinets, coat racks.

No. 6 "Hammer Fixing" Wall plug.

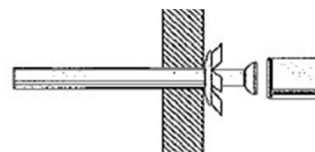

For use with walls stuck with plaster board. The hammer fixing allows it to be fixed to the wall rather than the plaster board. Always check the fixing is secure to the retaining wall.

Care & Maintenance

SAFETY

Always check the fitting and location to ensure your safety in and around the home.

Care & Maintenance

FITTING

From time to time check the fitting to ensure the wall plugs or screws do not become loose.