
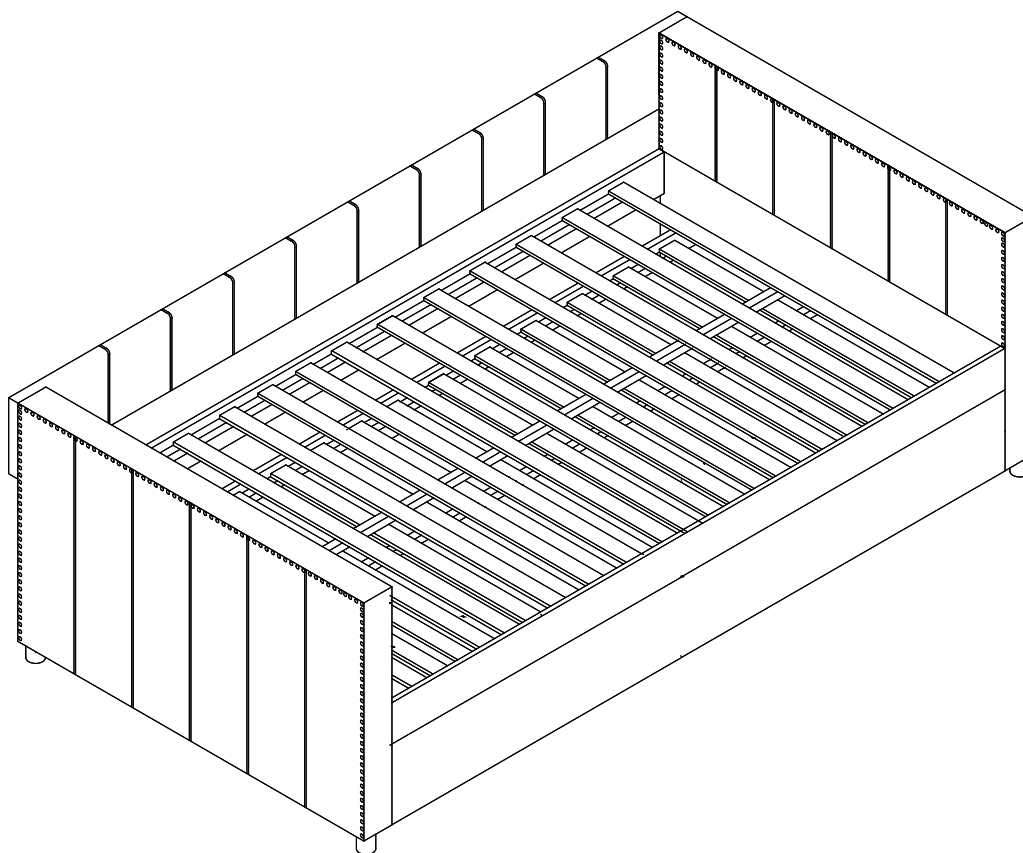


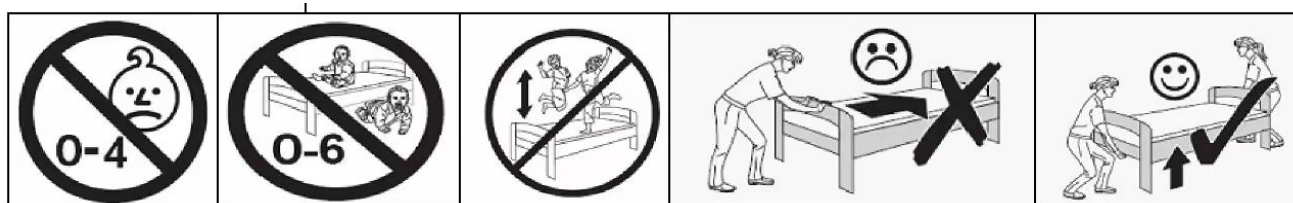




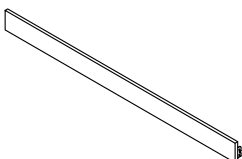
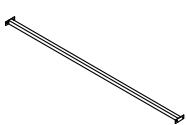
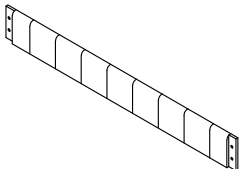
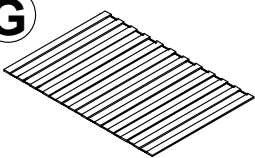
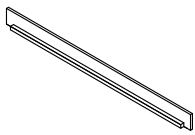
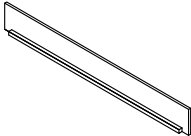



Assembly Instruction

ITEM NO.: BED5335-90x200







**IMPORTANT: PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPETTO
AVOID THE PARTS FROM BEING SCRATCHED
KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP
DO NOT TIGHTEN ALL SCREWS UNTIL THE BED IS FULLY SET-UP**

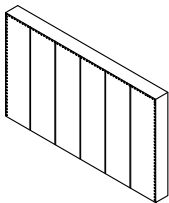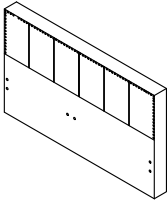


PARTS LIST:

A  <p>Left Armrest=1PC</p>	B  <p>Right Armrest=1PC</p>	C  <p>Feet=4PCS</p>	D  <p>Side Rail=2PCS</p>
E  <p>Upper Support Bar=1PC</p>	F  <p>Backrest=1PC</p>	G  <p>Slats=2 SETS</p>	H  <p>Trundle Back panel=1PC</p>
I  <p>Trundle Front Panel=1PC</p>	J  <p>Trundle Side Panel=2PCS</p>	K  <p>Caster=6PCS</p>	L  <p>Lower Support Bar=1PC</p>

HARDWARE LIST:


1 Allen Key 5/16"=1pc 	2 Bolt 5/16"*15MM=12pcs 	3 Bolt 5/16"*1"=12pcs 
4 Bolt 5/16"*2"=4pcs 	5 Flat Washer 5/16"*19mm=28pcs 	6 Screw M8*20MM =24pcs 

STEP 1: Turn the 2 Armrest (part(A)& part(B)) over and screw in the Armrest legs (part(C)) for this step you will need 4 part(C)

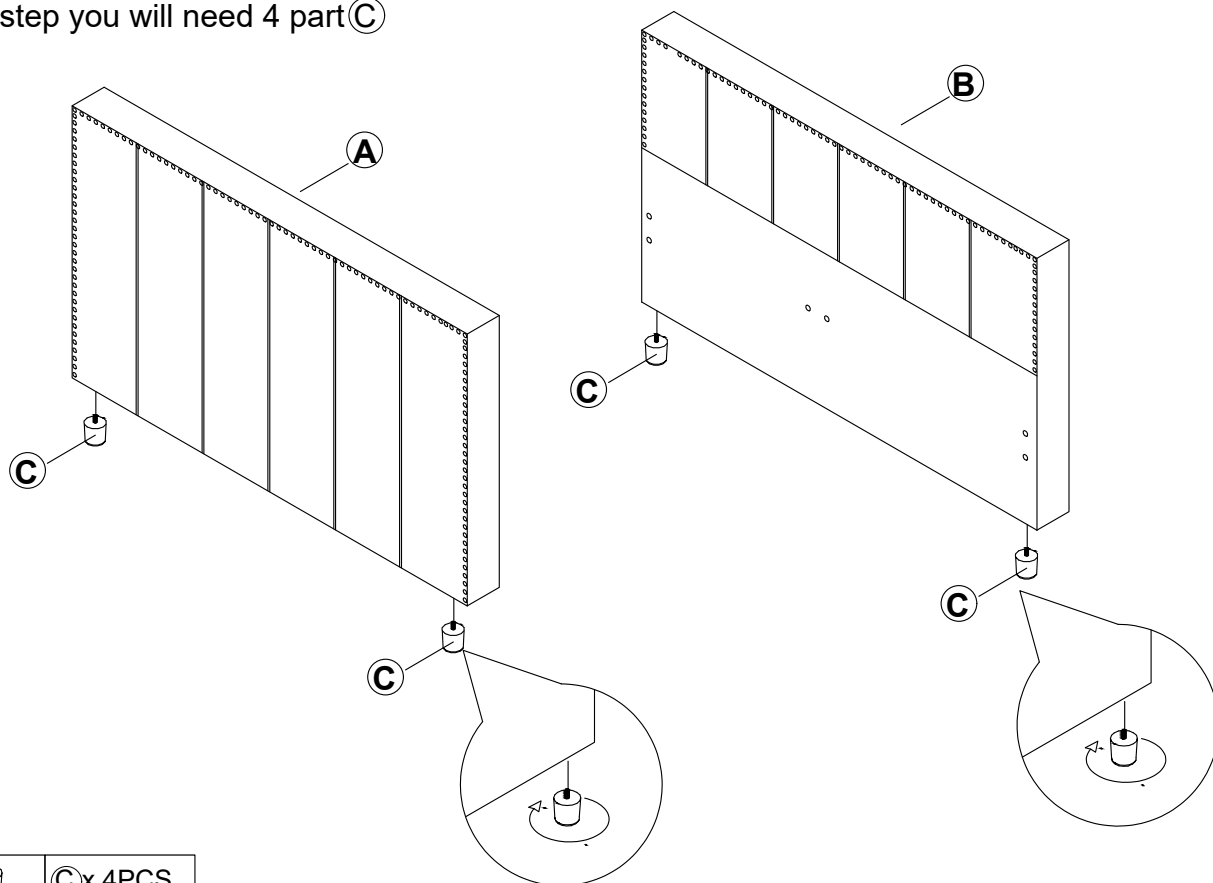

C x 4PCS

STEP 2: First, lock in your siderail (part(D)), Bolt the 2 siderails on to the 2 Armrests, you will need 8 part(3) and 8 part(5), do not forget about the washer as this will keep your bed sturdy!

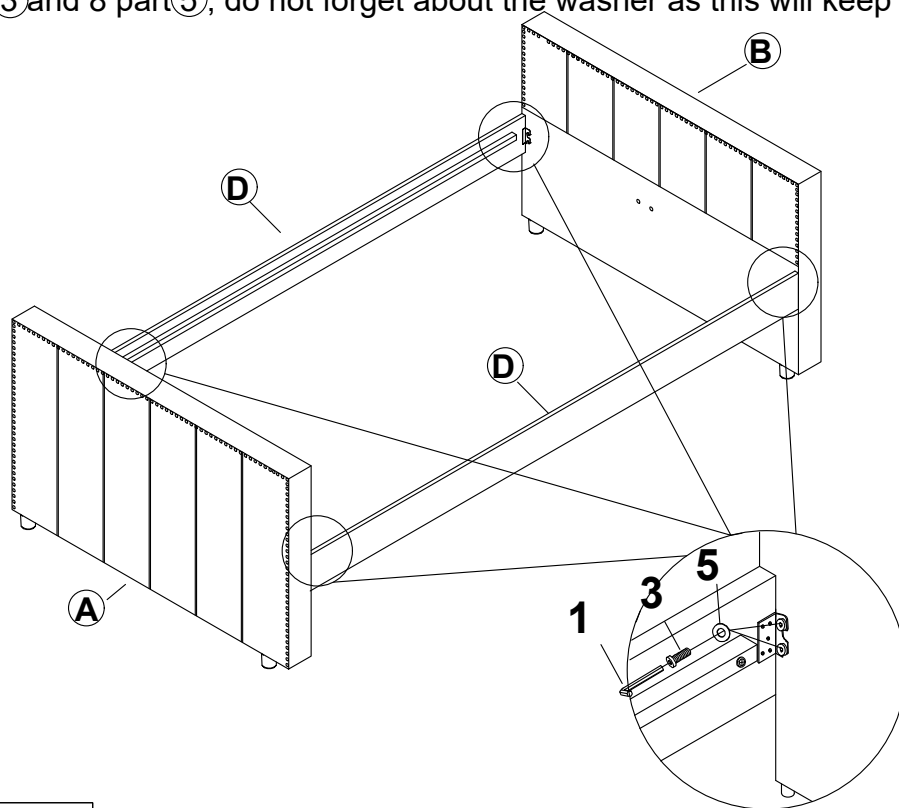




5 x 8PCS




3 x 8PCS

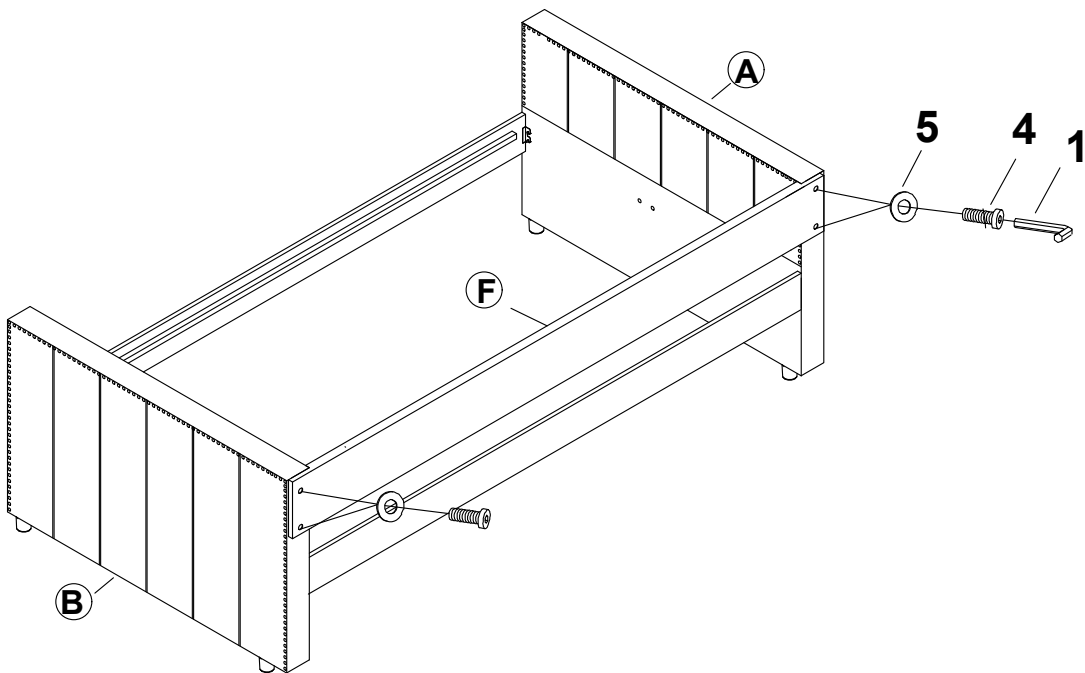

STEP 3:At the back, install the backrest (part**F**) by using hardware provided, use Allen key part**1**to screw in the bolt (part**4**) and washer(part**5**) on each side (2 bolts & 2 washer on each side).




	5 x 4PCS
	4 x 4PCS

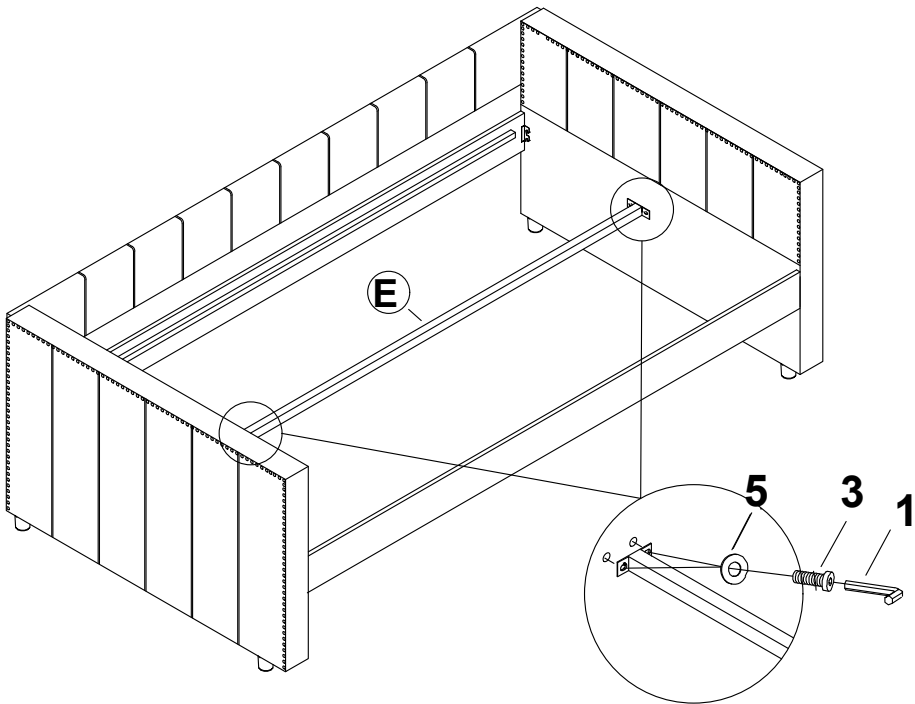STEP 4: Take the upper support bar and lay it in the middle of the Bed from left and right armrest,you will need 4 part**3**and 4 part**5**to screw in the bolts to the Armrest.






	5 x 4PCS
	3 x 4PCS

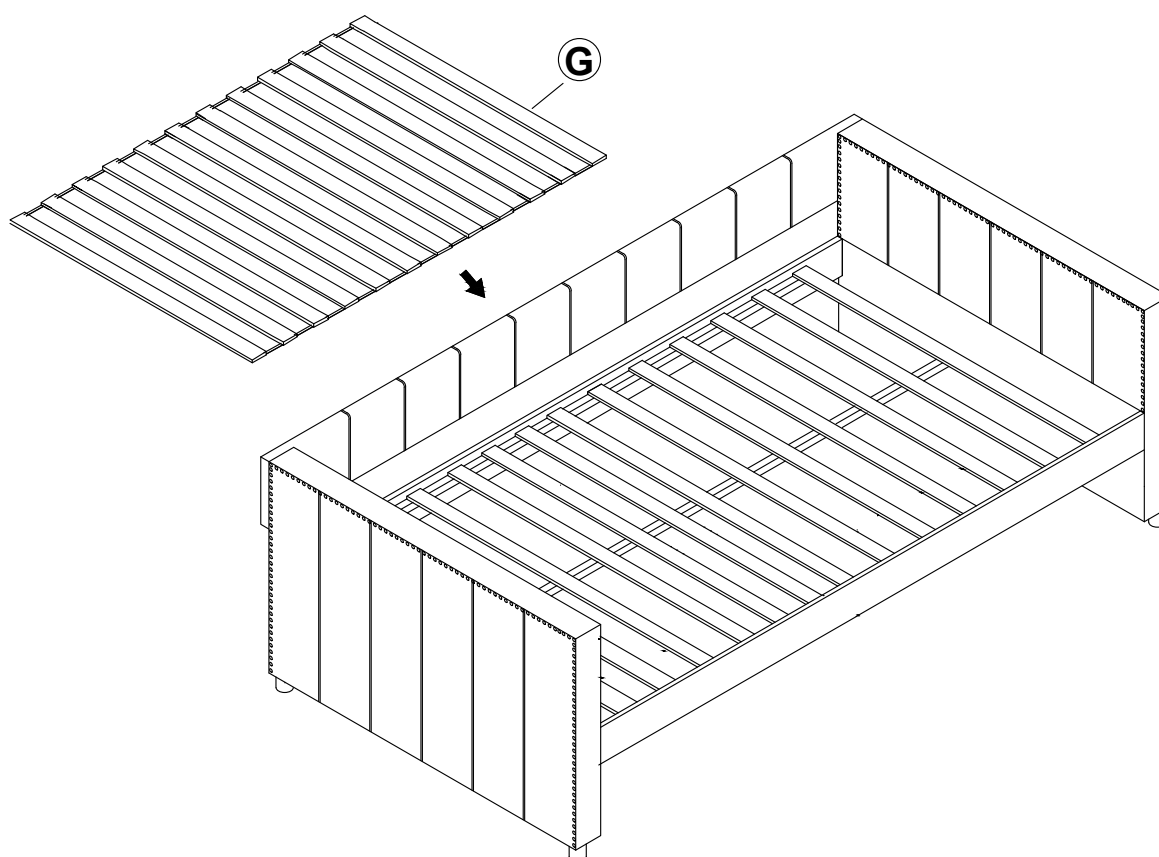STEP 5: Simply lay the slats on the side of siderails (on the Inside) you can roll them out and the velcro will stick right on (part ⑥)




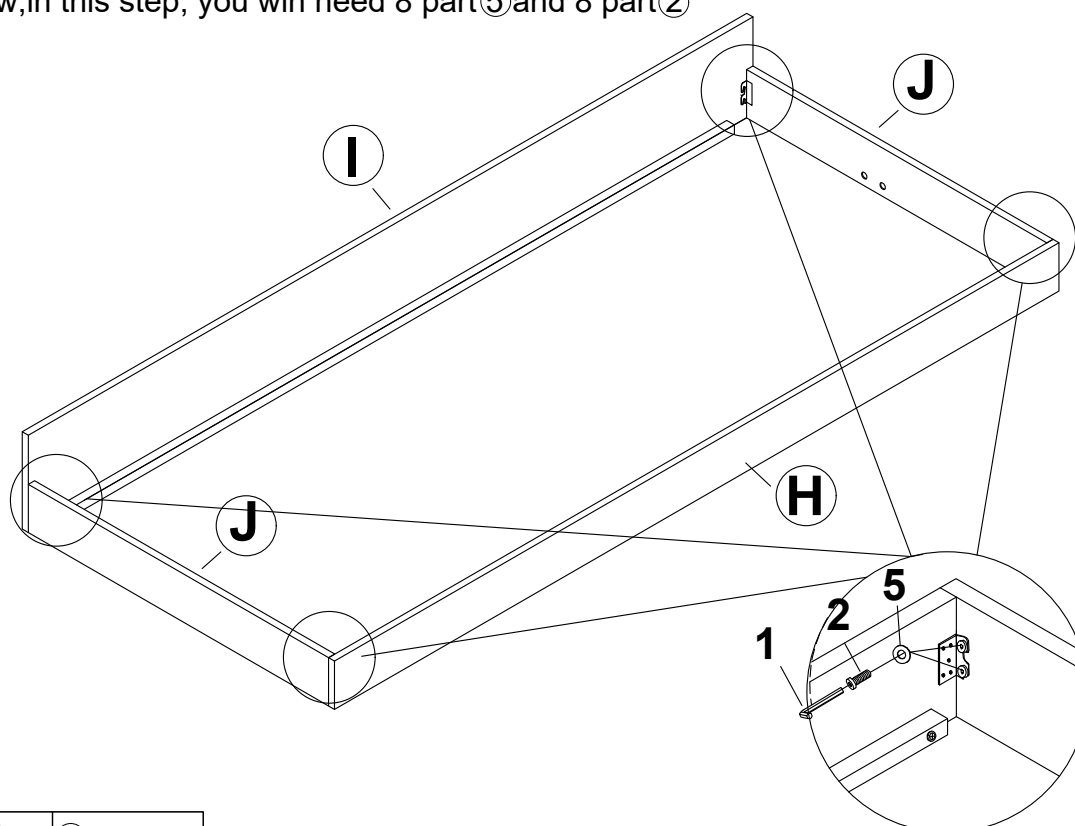

STEP 6: Install the lower trundle, find out all part of ① ④ and 2 part ⑤ follow the diagram below, in this step, you will need 8 part ⑤ and 8 part ②




	⑤ x 8PCS
	② x 8PCS

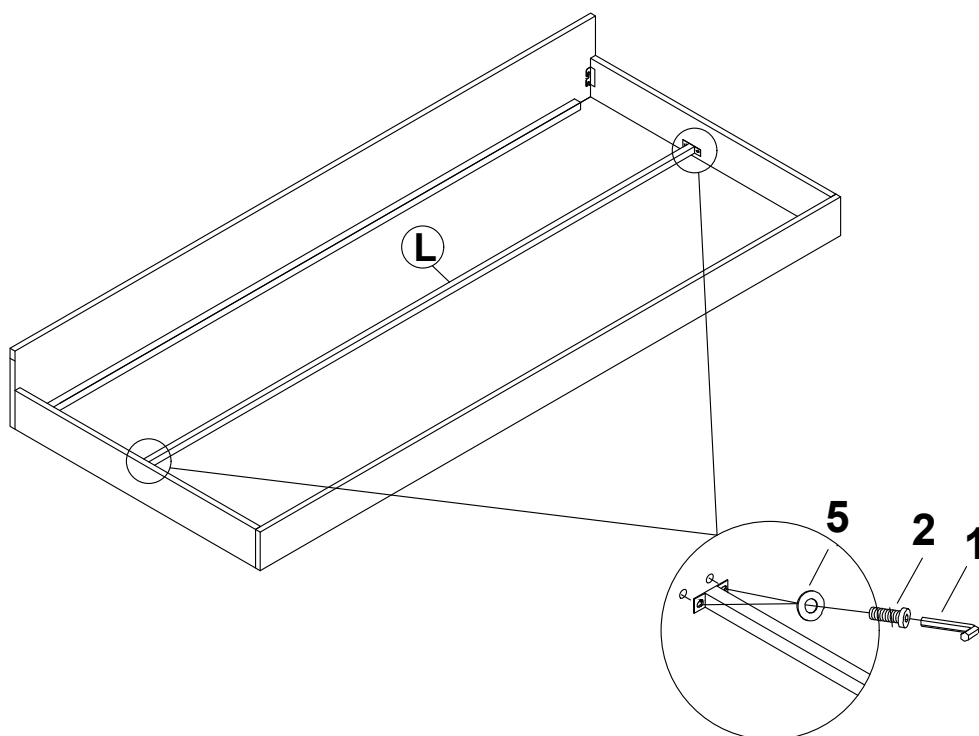
STEP 7: This step is similar to step 4, you will need 4 part ⑤ & 4 part ② and screw in the bolts to the trundle side panel.




	⑤ x 4PCS
	② x 4PCS

STEP 8: Turn the trundle over, and install all the casters by using 24 pcs part ⑥

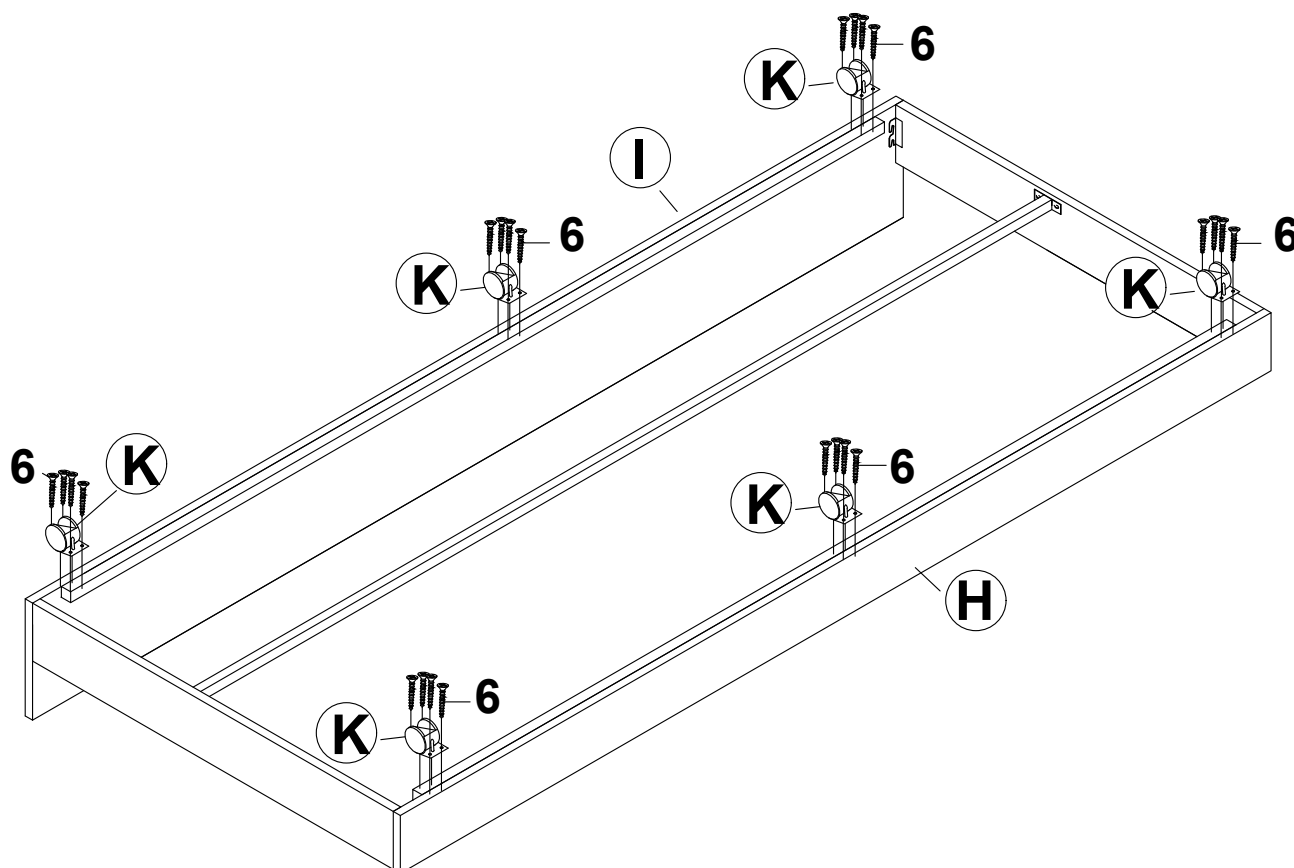

	⑥ x 24PCS
---	-----------

STEP 9: Similar to Step 5, lay and roll the slats on it

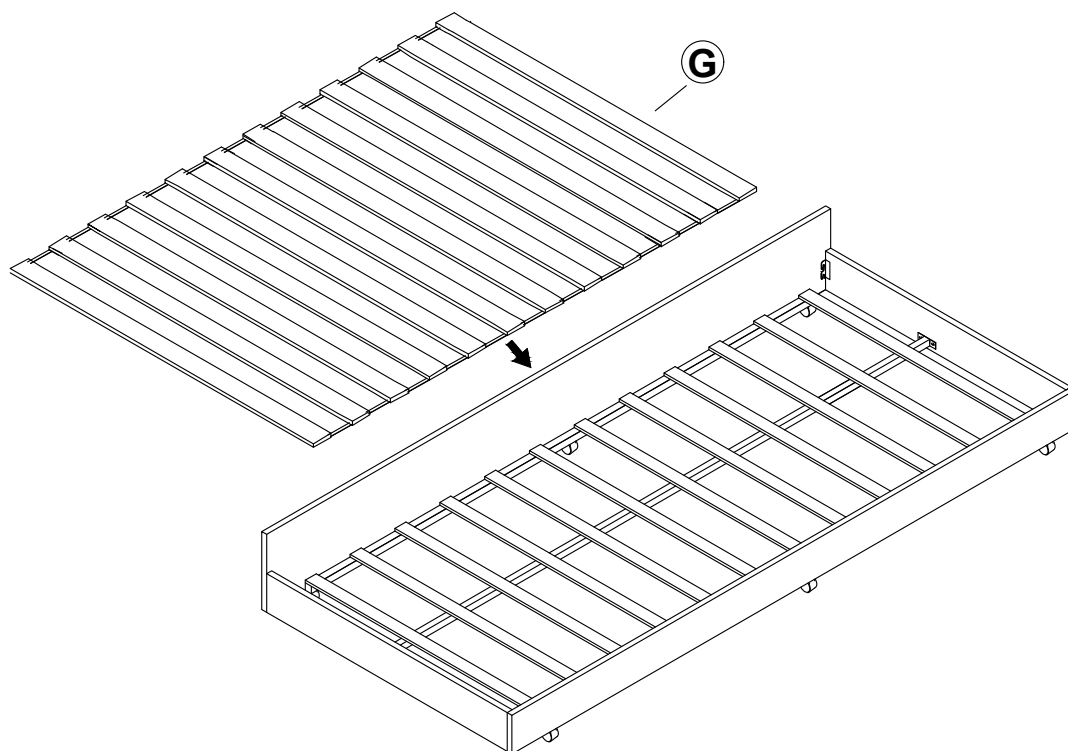

STEP 10: Congratulation, you made it to the end, time to sleep like a baby and don't forget to leave us a positive review when you make up !

